



ECU Siemens Continental SID208 - TC1797 Internal Flash



Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le connessioni come indicato nella figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1797

Set in Boot Mode the ECU, so connect the following pinout and solder the connections like shown in the figure.

Use the driver:

BOOT MODE TRICORE SAK TC1797

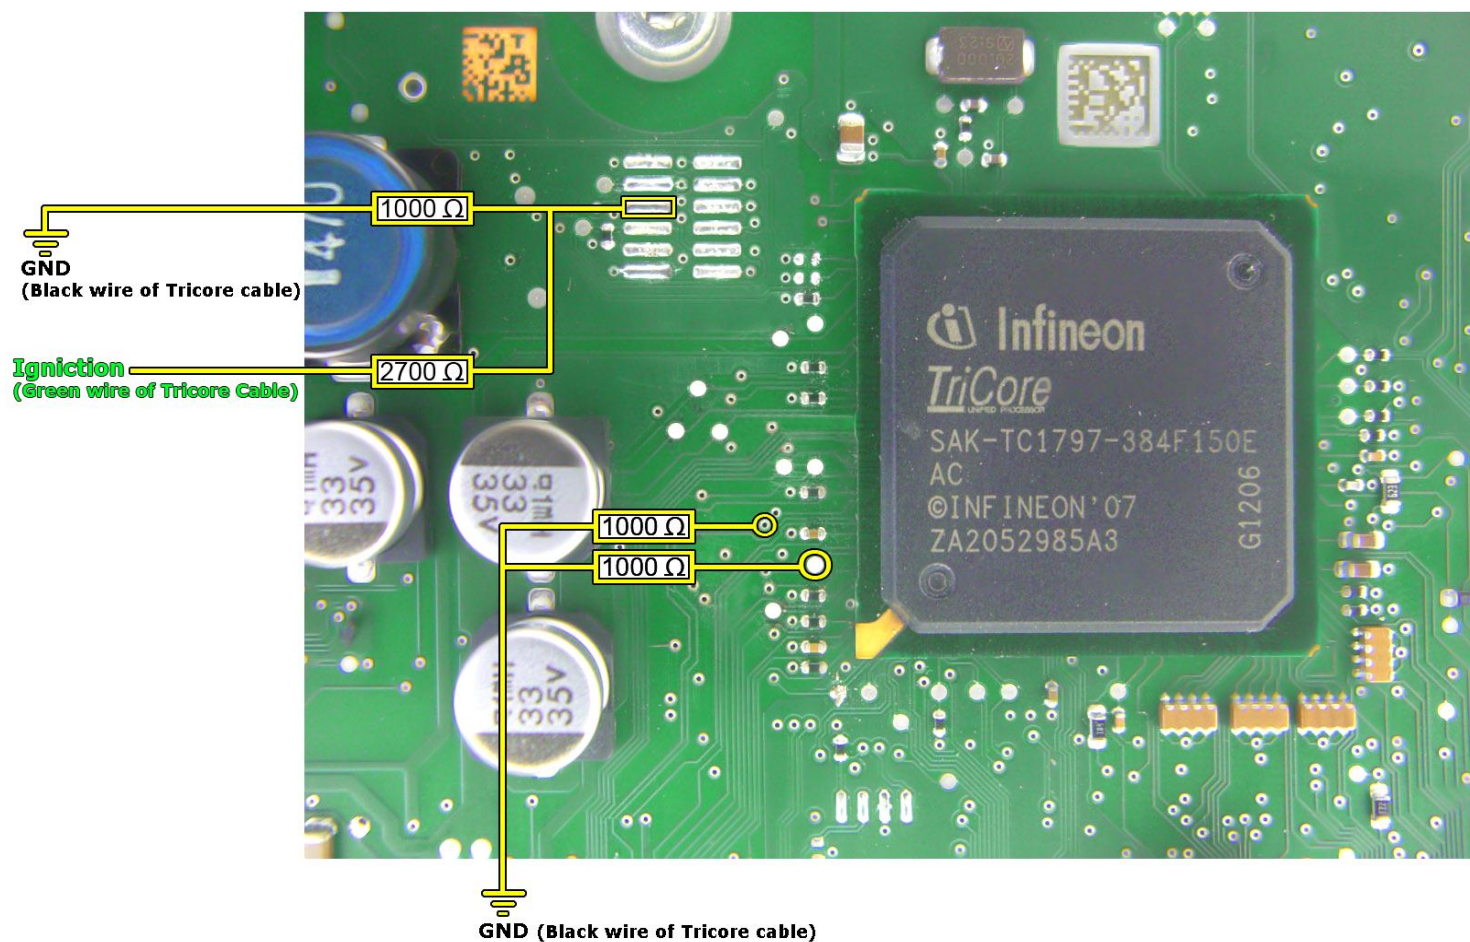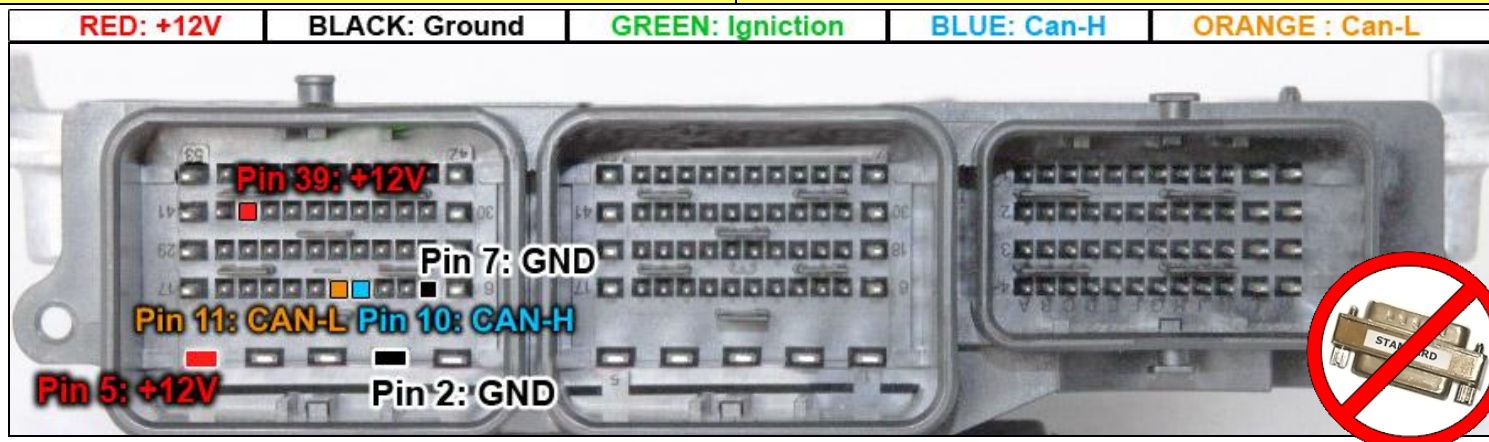

Se a inizio lettura esce il messaggio di errore :

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

rimuovere tutte le connessioni/resistenze sulla scheda mantenendo sempre lo stesso pinout e utilizzare il driver:

OBD TOOL PASSWORD SID208 FORD - LAND ROVER.

Una volta trovate le password riporre la centralina in bootmode per poterla leggere e scrivere.

When you start reading if appear the error message:

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSSWORD”

remove all the connections/resistors on the electric card, use the same pinout and use the driver:

OBD TOOL PASSWORD SID208 FORD – LAND ROVER.

When it find the password, reconnect the Ecu in bootmode to read and write.