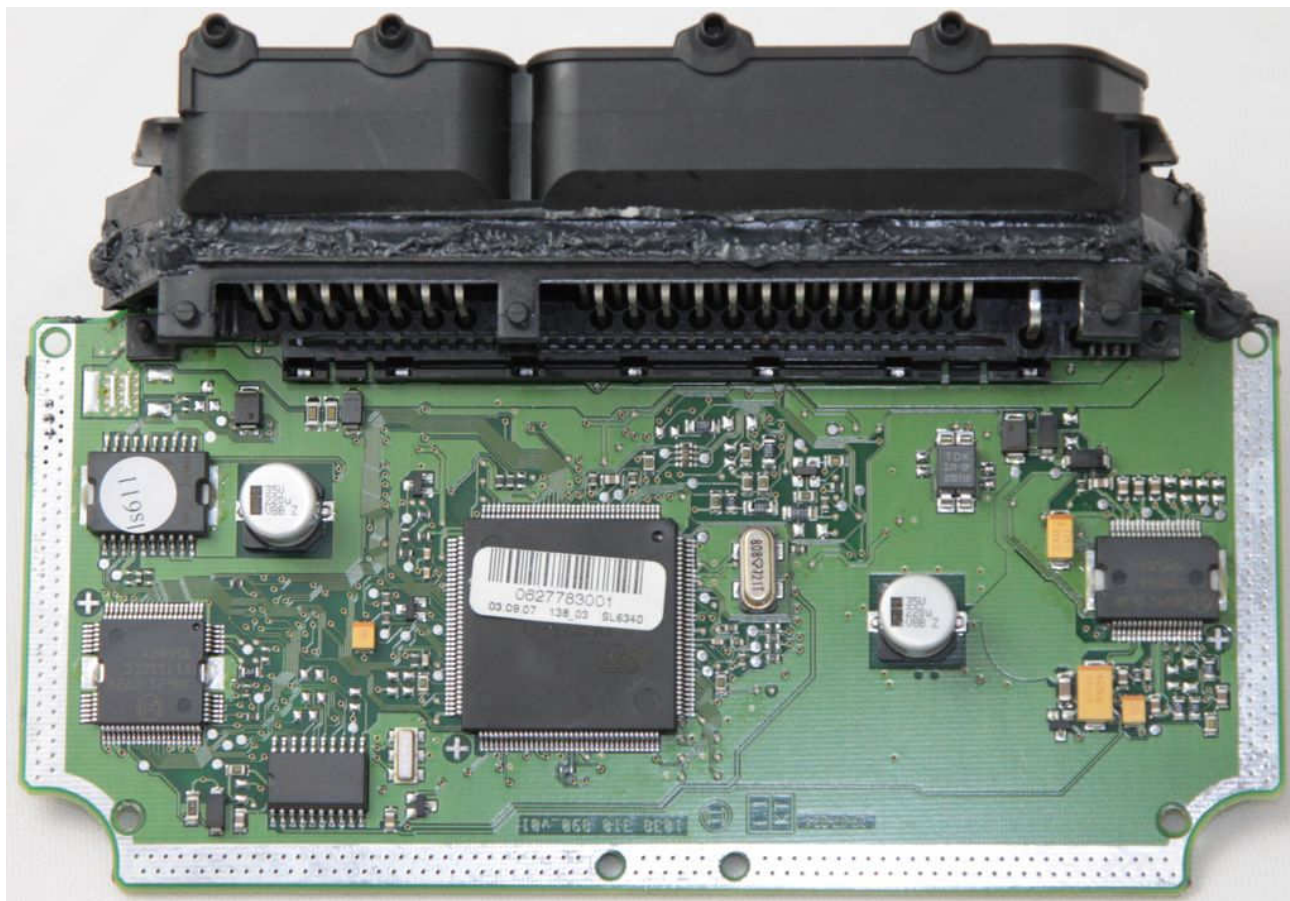
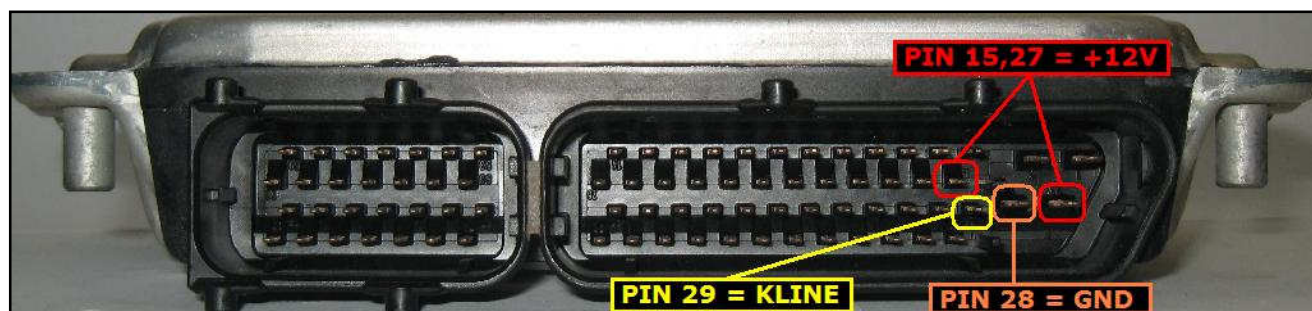




ECU BOSCH ME7.5.20

The lay by pins are located in the lower part of the ECU.

**CONNECTIONS**



DIRECT CONNECTION

Connect the universal wiring POL4 and POL5 to the connector as shown in the pictures.

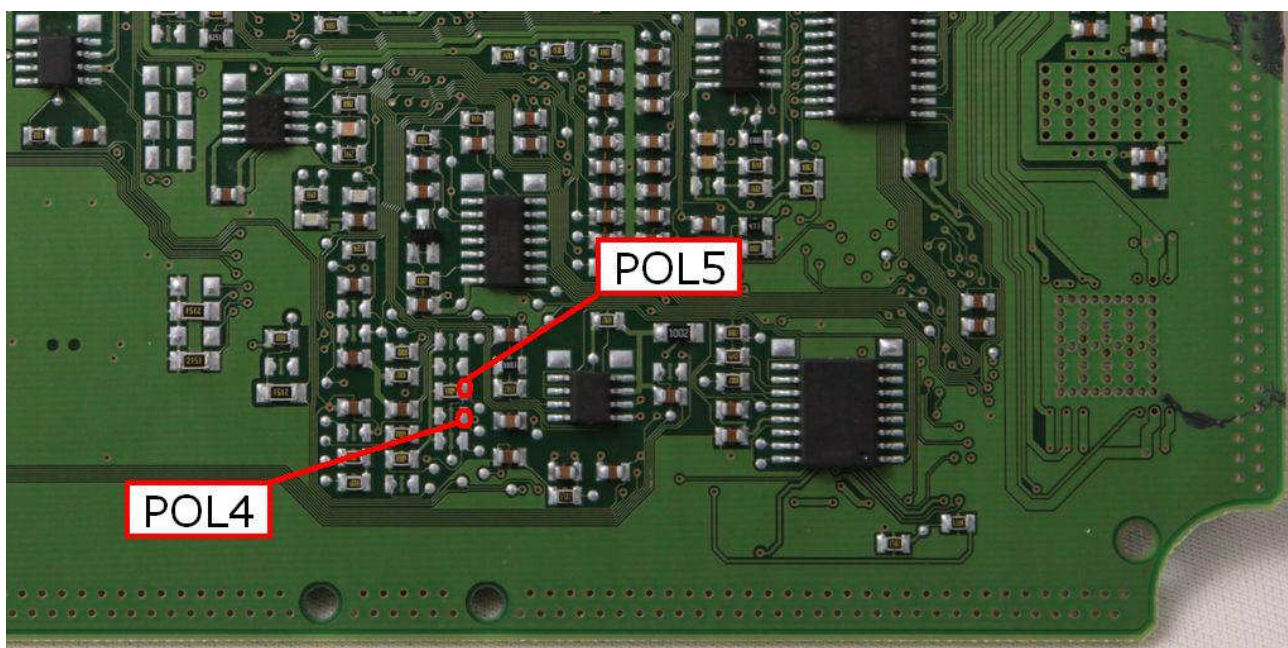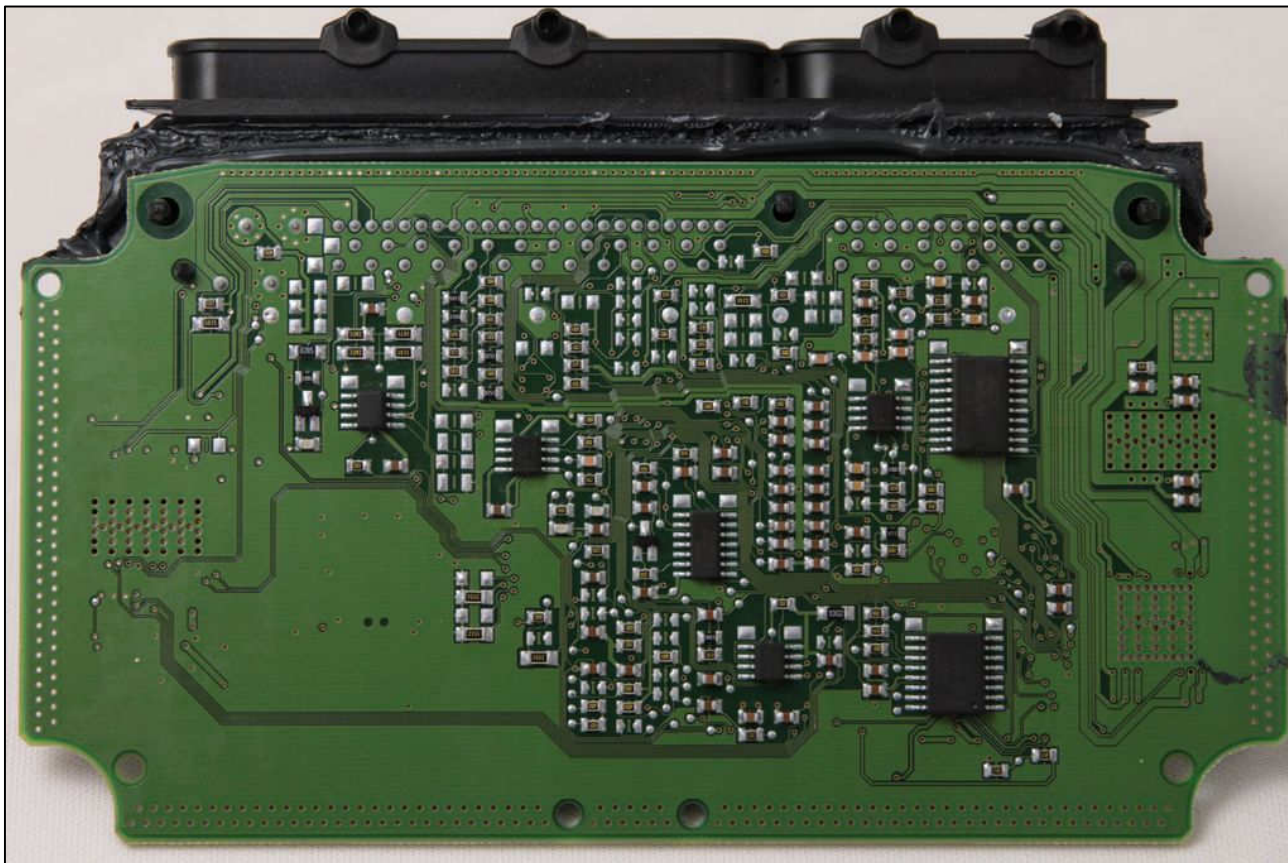

ECU BOSCH ME7.5.30

The lay by pins are located in the lower part of the ECU.

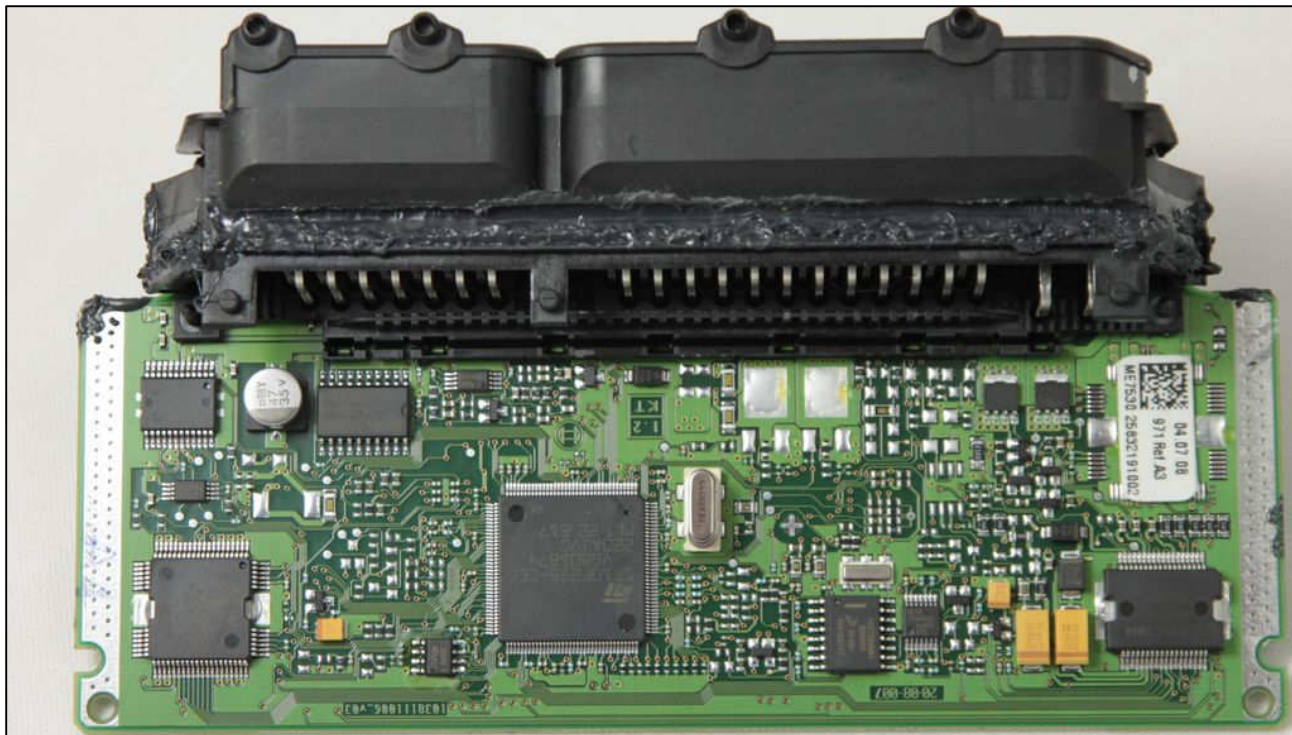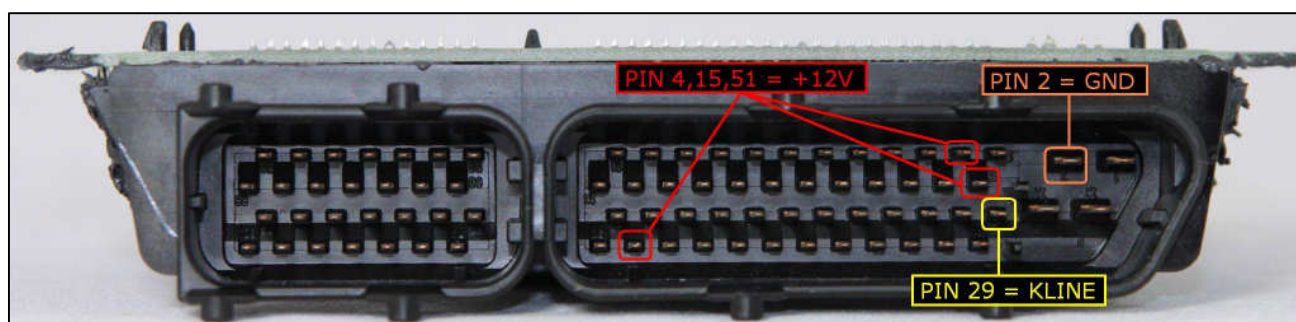**CONNECTIONS**

DIRECT CONNECTION

Connect the universal wiring POL4 and POL5 to the connector as shown in the pictures.

