


The lay-by pins are placed in the lower part of the ECU.




Connect the power only for the DIRECT CONNECTION, do not connect them if you use the DIMA

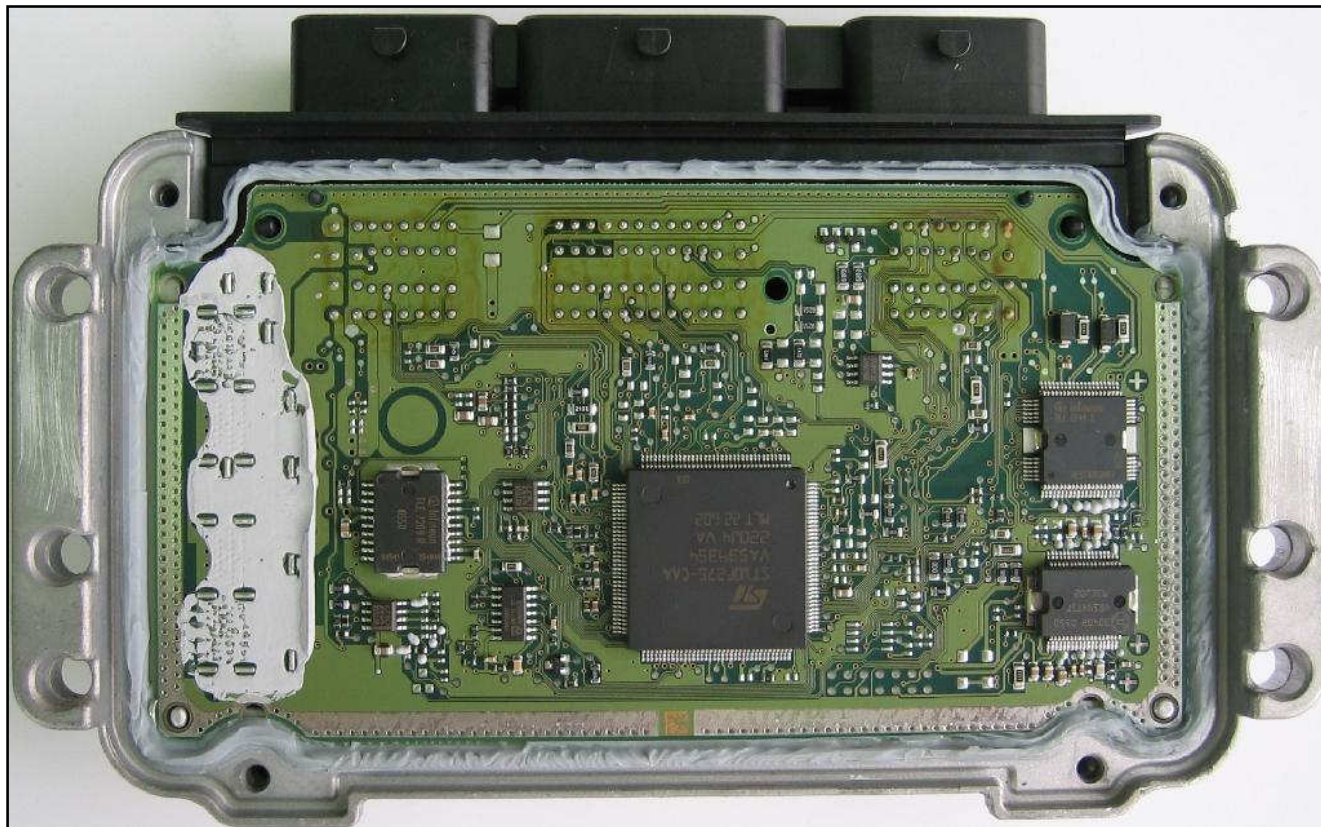

DIRECT CONNECTION

Connect universal cable to POL4 & POL5 and to connector as suggested.

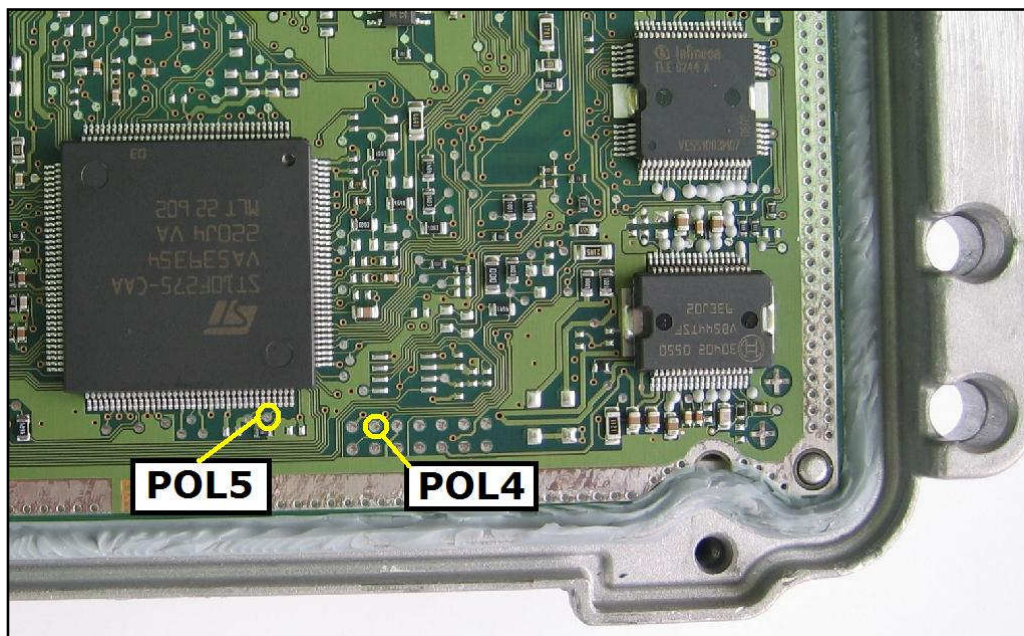**DIMA CONNECTION**

With DIMA too it is necessary to connect POL5

