

**PLUGIN 434**


On this ECU it is possible ONLY the DIRECT CONNECTION




## DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.  
Make sure that the POWER led (red) on NEW TRASDATA is ON.

| COLORE FILO<br>WIRE COLOUR  | DESCRIZIONE<br>DESCRIPTION               |
|-----------------------------|------------------------------------------|
| ROSSO<br>RED                | POSITIVO DIRETTO<br>POWER BATTERY        |
| ARANCIO<br>ORANGE           | POSITIVO SOTTO QUADRO<br>POWER SWITCH ON |
| NERO<br>BLACK               | MASSA<br>GND                             |
| GIALLO<br>YELLOW            | KLINE                                    |
| VERDE<br>GREEN              | CAN LOW                                  |
| BIANCO<br>WHITE             | CAN HIGH                                 |
| GRIGIO<br>GREY              | POL4<br>BOOT                             |
| BLU<br>BLUE                 | POL5<br>CNF1                             |
| VIOLA/GRIGIO<br>PURPLE/GREY | TENSIONE PROG.<br>PROG. VOLTAGE          |
| MARRONE<br>BROWN            | RESET                                    |

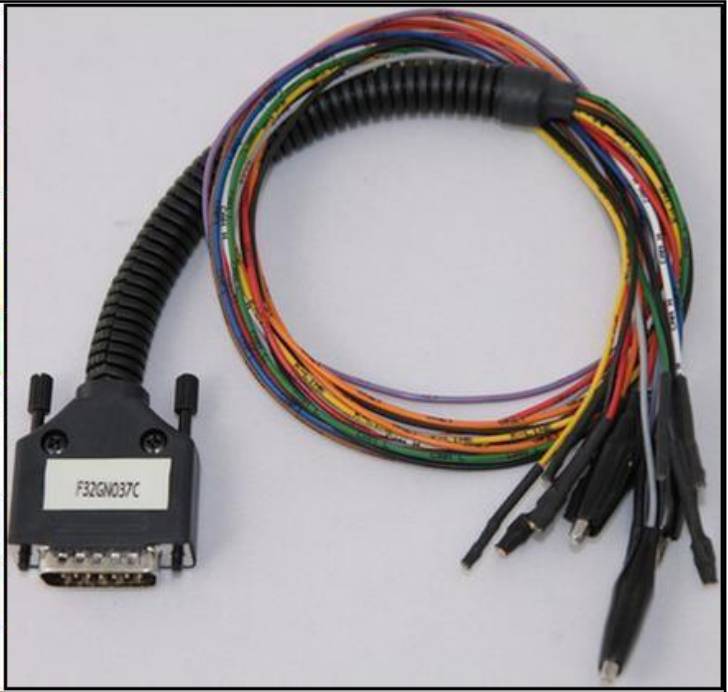

## ECU CONNECTOR

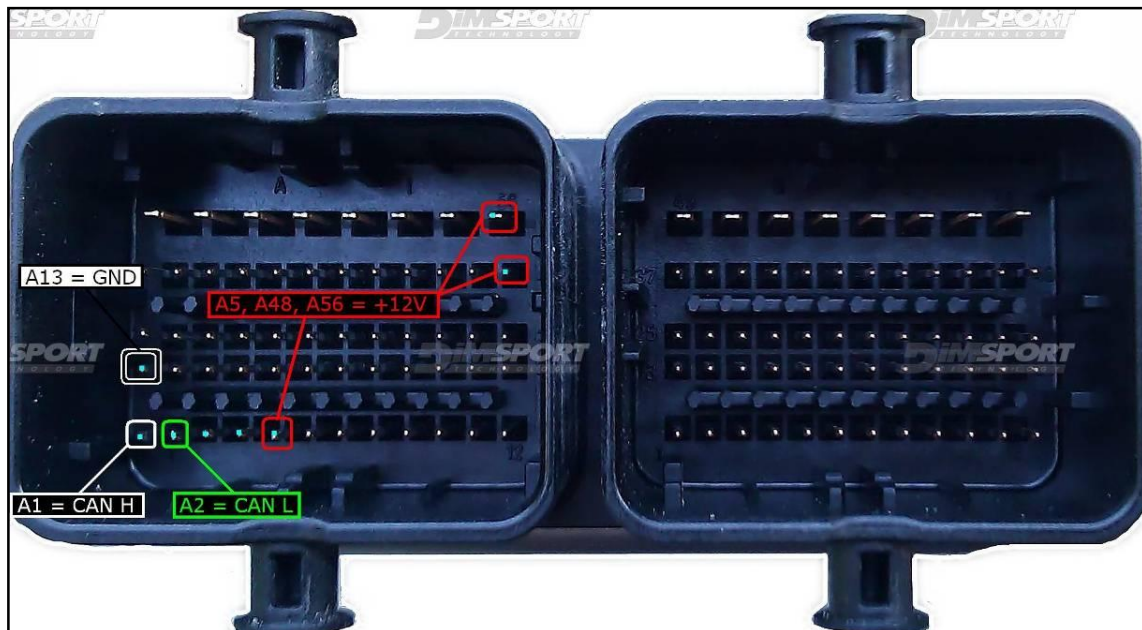

To connect to the pin 5,48,56 it is possible to use the red and orange wires, they both are 12V.



**POL4/BOOT CONNECTION**

Connect the BLU and GREY wires of the cable F32GN037C as described:

| COLORE FILO<br>WIRE COLOUR | DESCRIZIONE<br>DESCRIPTION |
|----------------------------|----------------------------|
| GRIGIO<br>GREY             | POL4<br>BOOT               |
| BLU<br>BLUE                | POL5<br>CNF1               |

