



On this ECU it is possible only the DIRECT CONNECTION

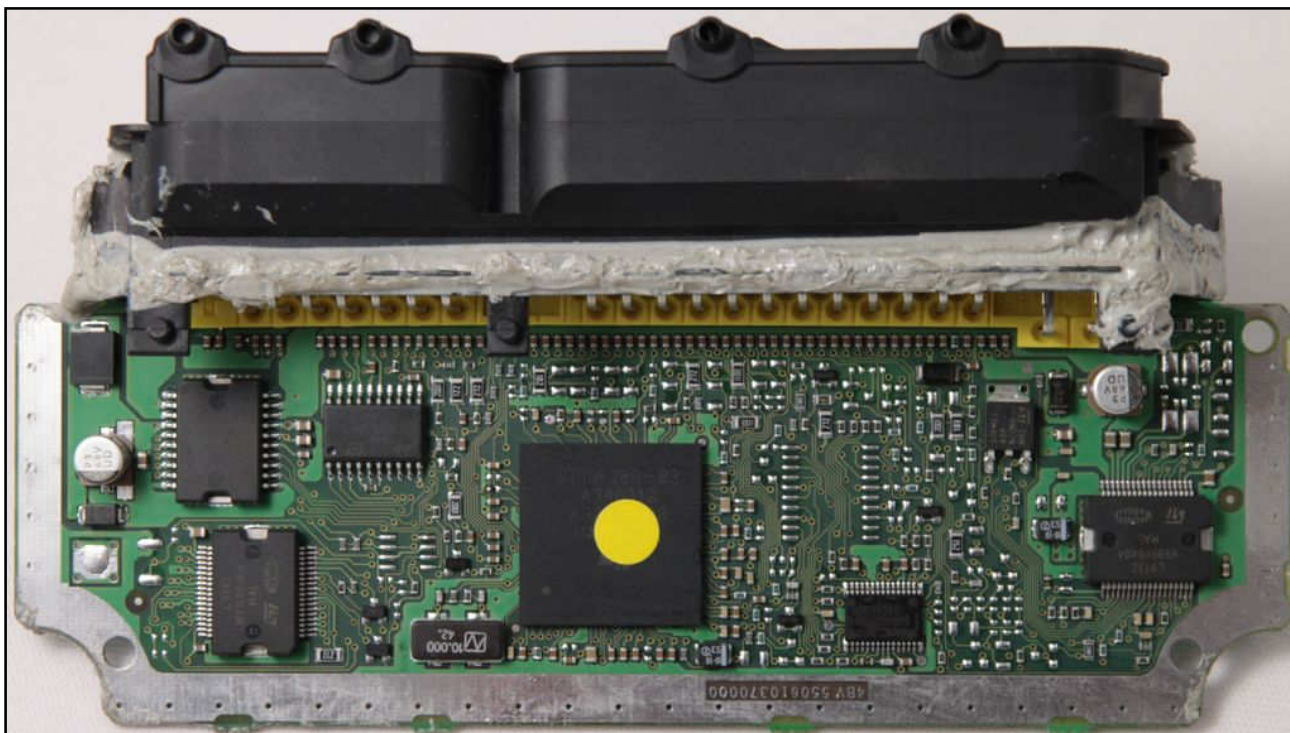

ECU CONNECTOR

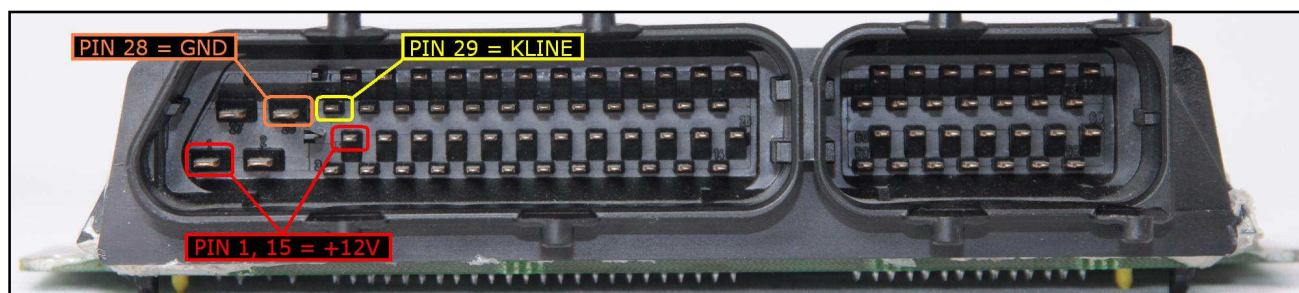

DIRECT CONNECTION

Connect the universal wiring to POL4 and to the connector as shown in the pictures

