



PLUGIN 098,104,105,115,384 :NEW TRASDATA


The lay-by pins are placed in the lower side of the ECU as shown in the picture below.

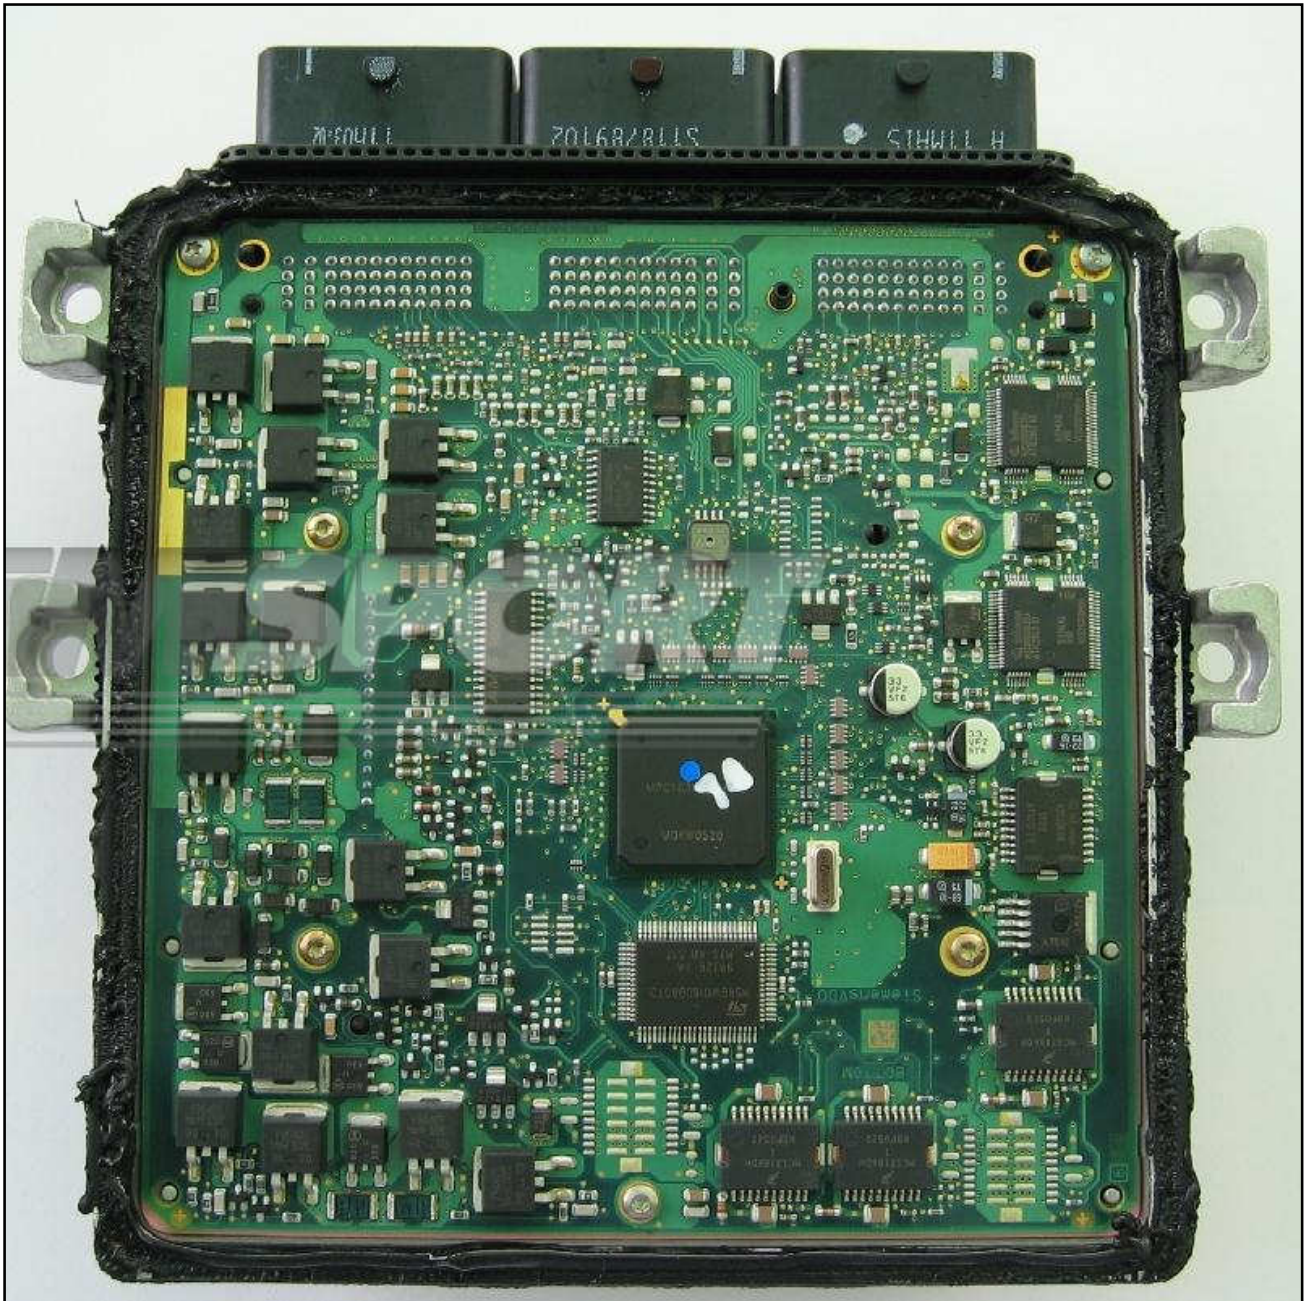


ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

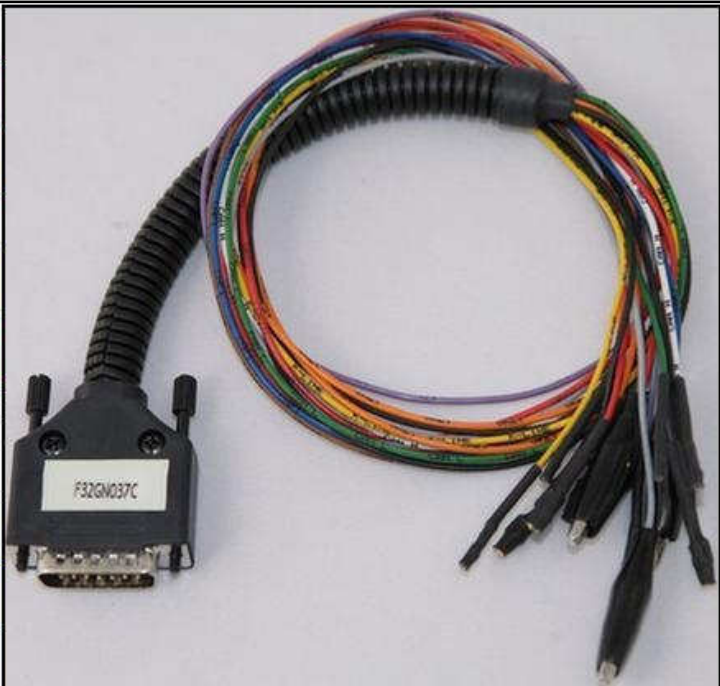
COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

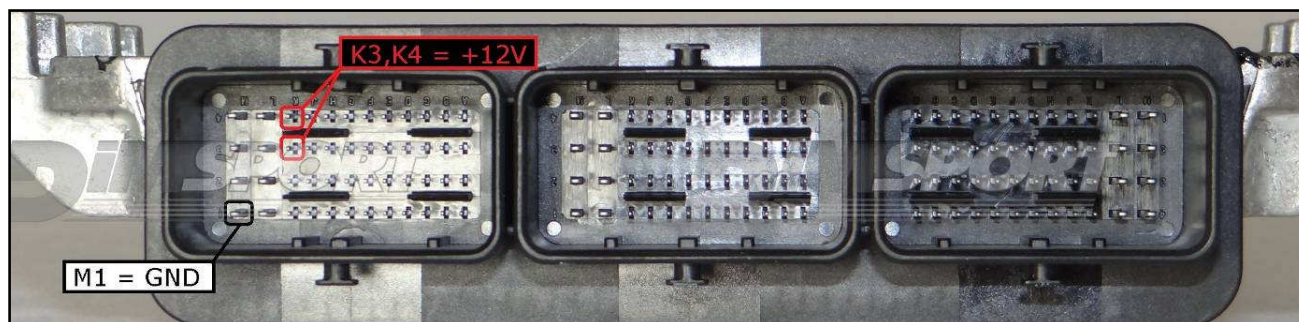

To the 2 power feeding pins K3 and K4 you can connect both wires red and orange, they both have 12 Volt signal.

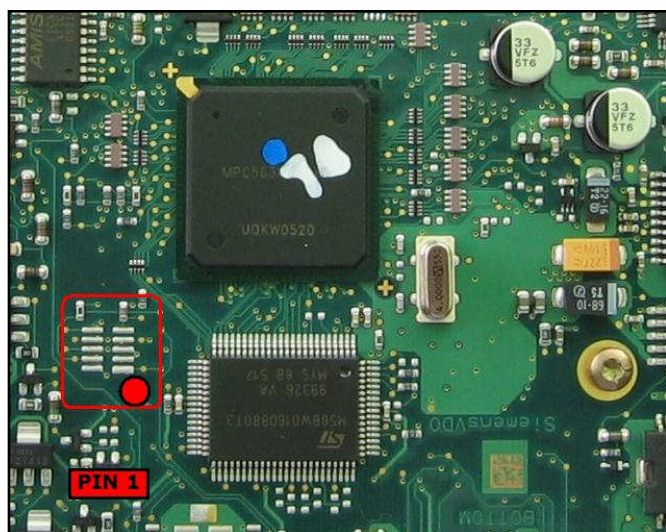DIRECT CONNECTION with adapter SIEMENS F34NTA06

Connect the adapter F34NTA06 as shown in the picture.

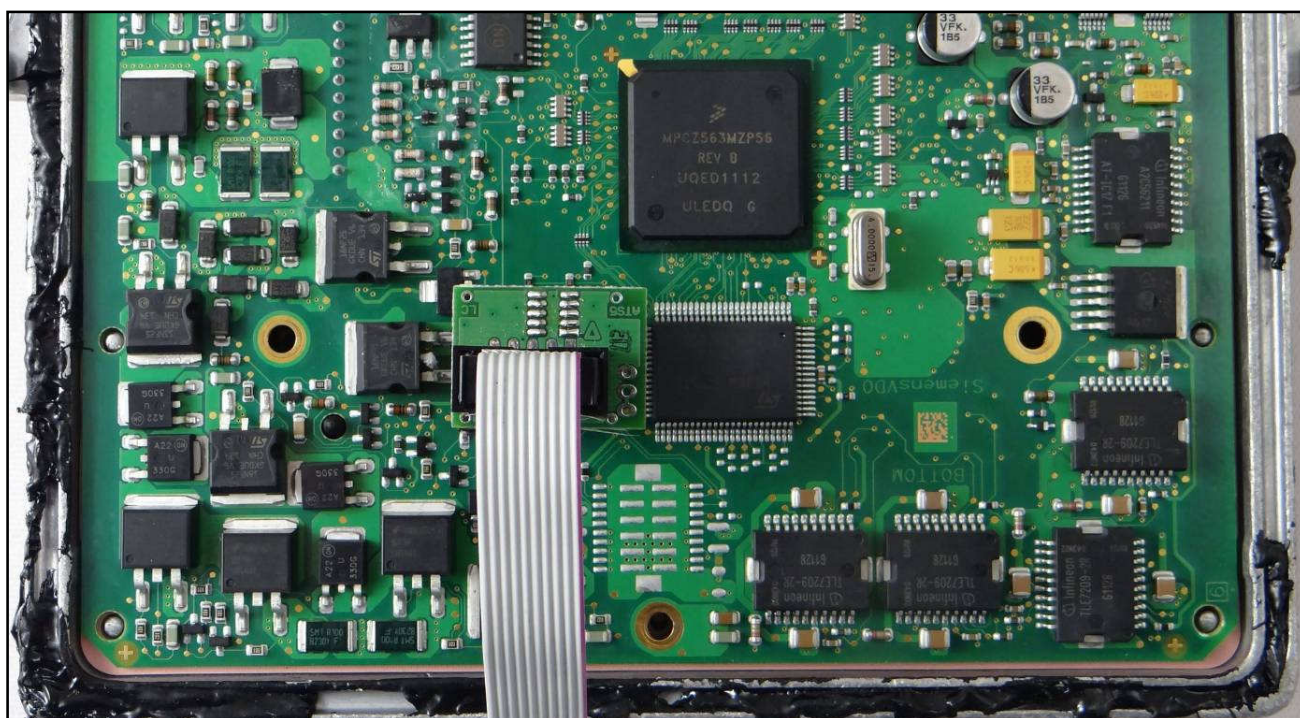

DIMA CONNECTION

It is necessary to connect the adapter F34DM003 on the F34DM004, be careful to the correct position of PIN 1.

