



The lay-by pins are placed in the lower part of the ECU.

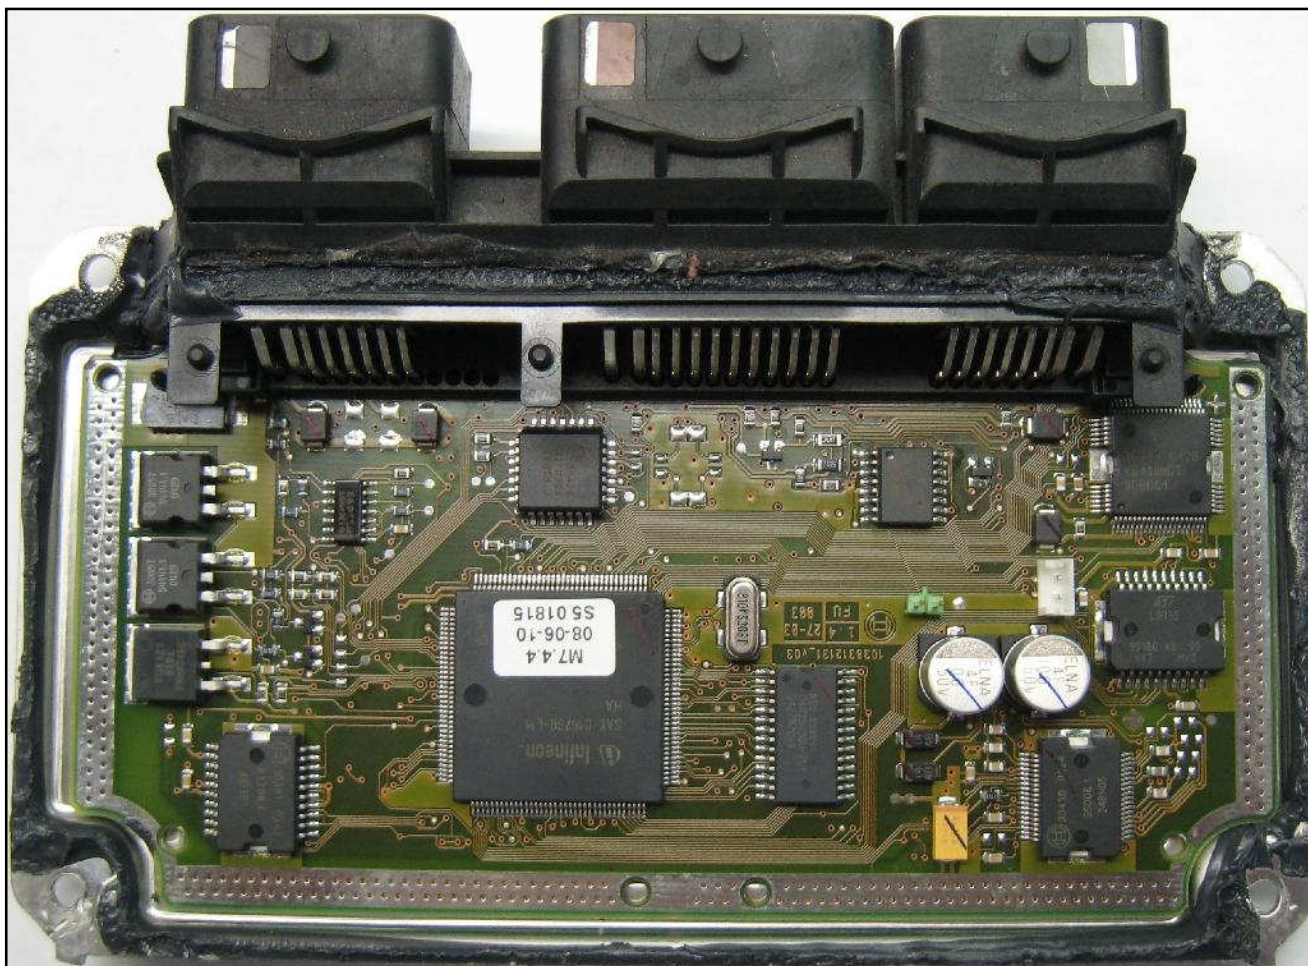

CONNECTIONS

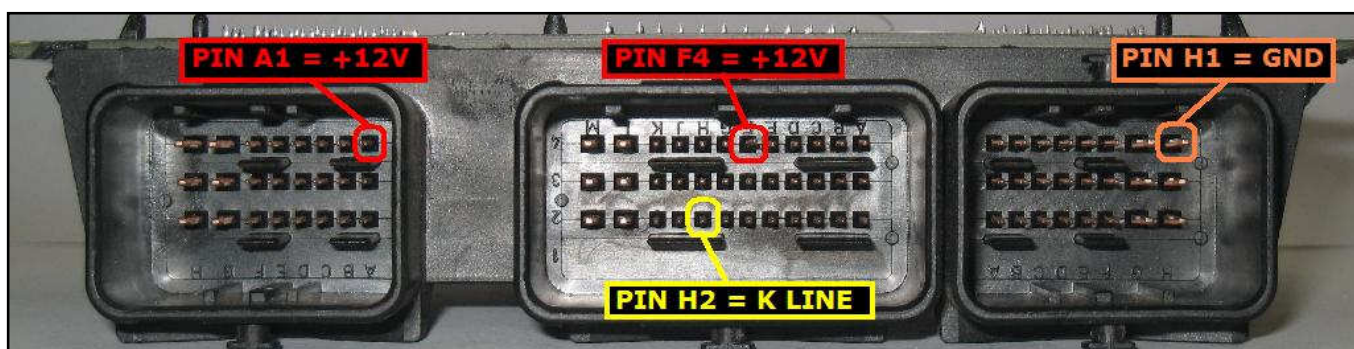

DIRECT CONNECTION

Connect the universal wiring to POL4 and to the connector as in the following pictures

