



The lay-by pins are placed in the lower part of the ECU as shown in the picture.

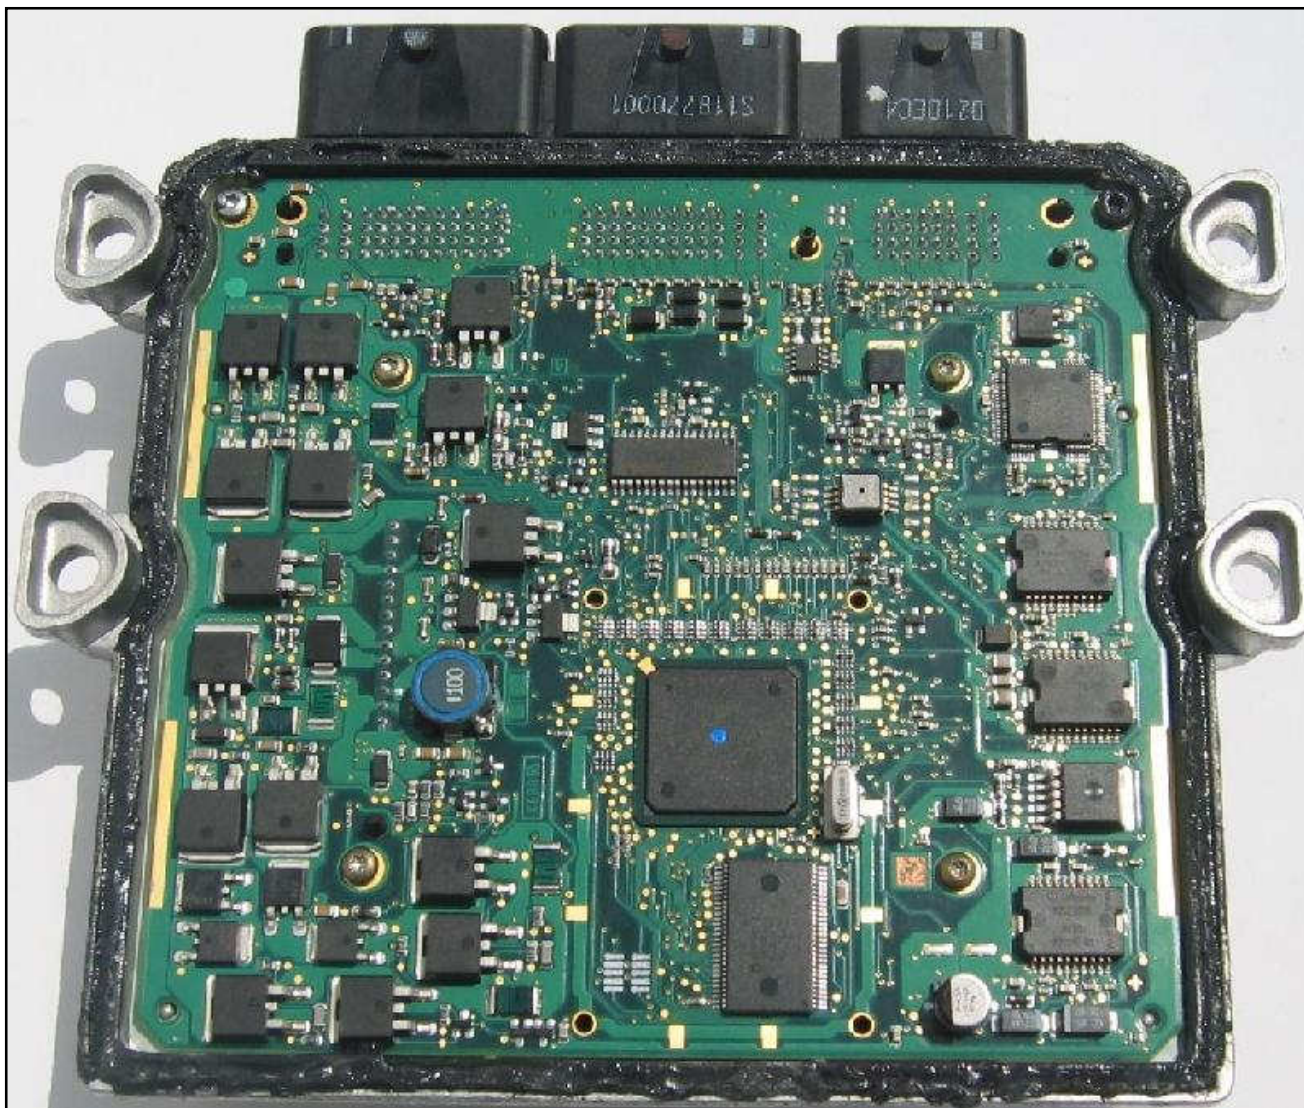

DIRECT CONNECTION with SIEMENS F34FL006

Connect the adapter F34FL006 as shown in the picture.

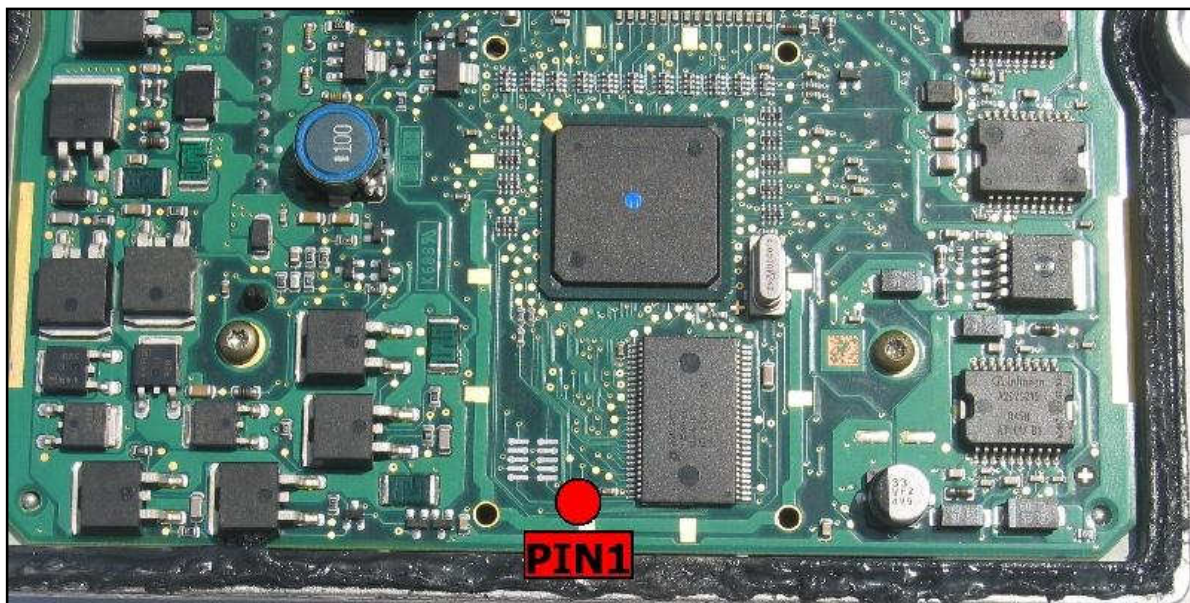