
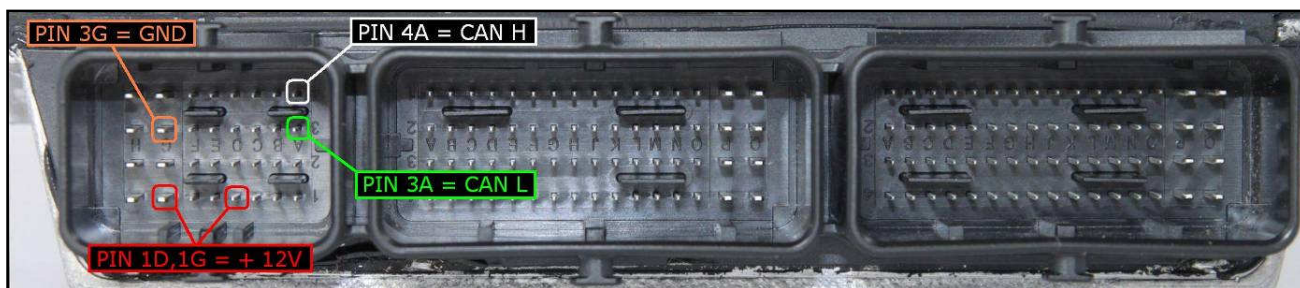
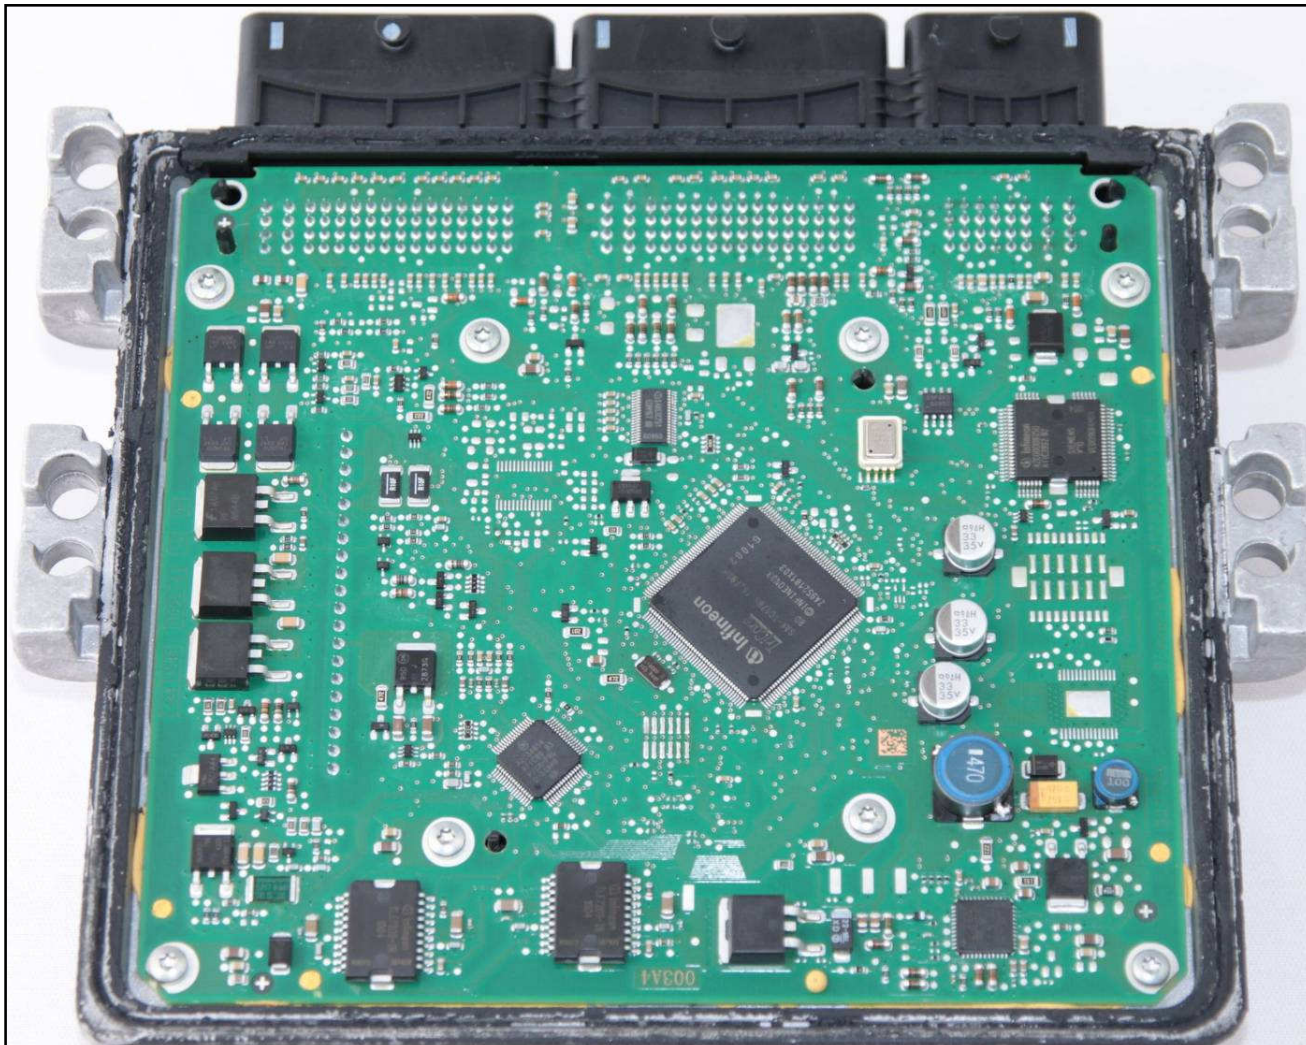


On this ECU it is possible only the DIRECT CONNECTION

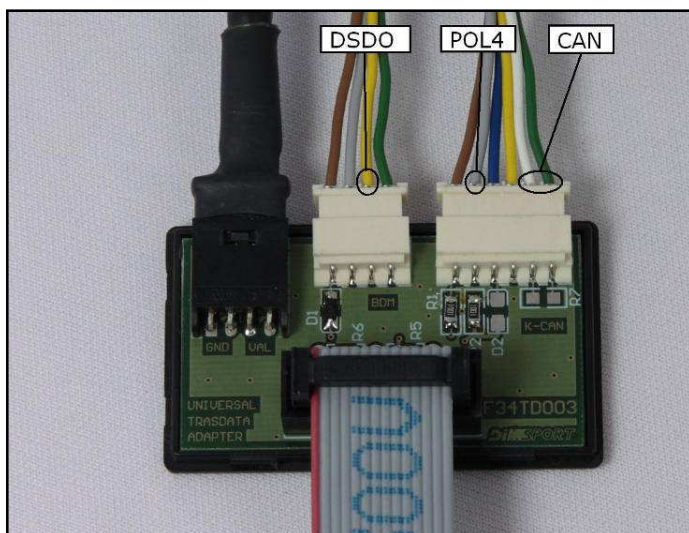

DIRECT CONNECTION WITH TRASDATA SYSTEM

In order to communicate with the TRASDATA SYSTEM it is necessary to connect the POL4 and the wire with signal called DSDO. DSDO is the YELLOW wire on the BDM connector of the universal adapter F34TD003.

**DIRECT CONNECTION**