


On this ECU it is possible ONLY the DIRECT CONNECTION
ECU 5SM HW400 ECU CONNECTOR

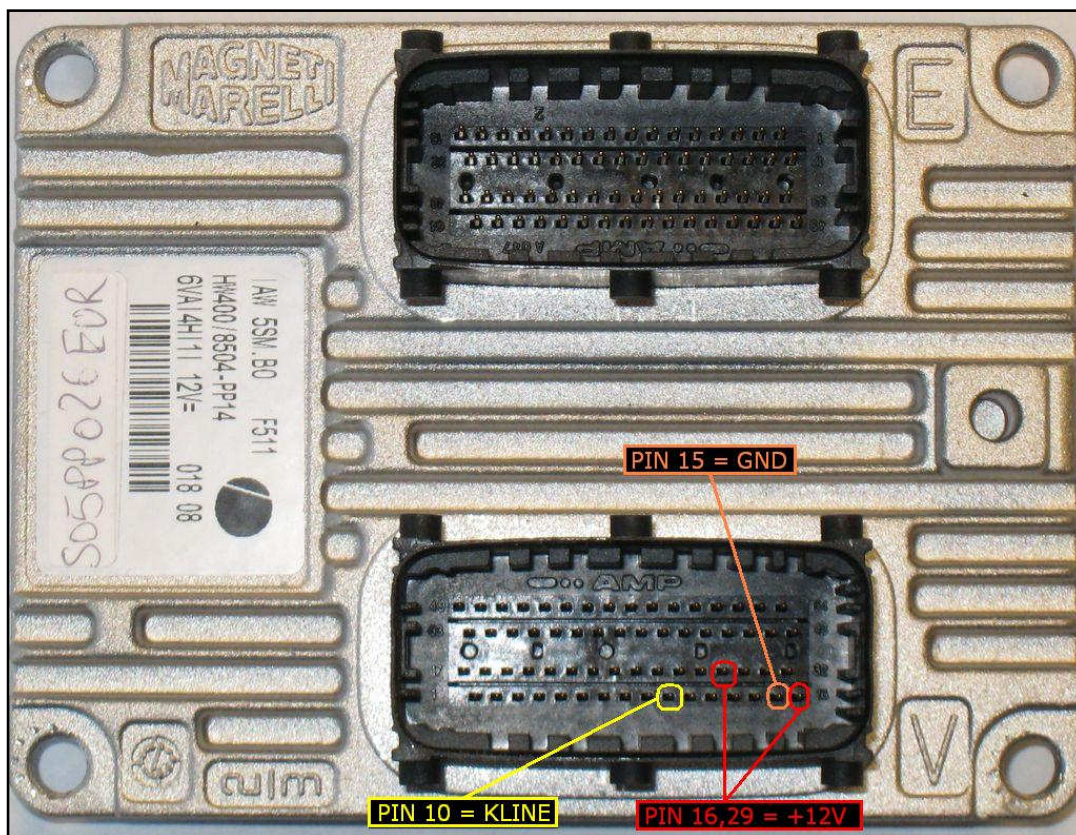

DIRECT CONNECTION

In order to communicate in BOOT mode it is necessary to link the 2 pads
Before to plug back the ECU into the motorbike you MUST remove the Link connection.

