



The lay by pins are in the lower part of the ECU

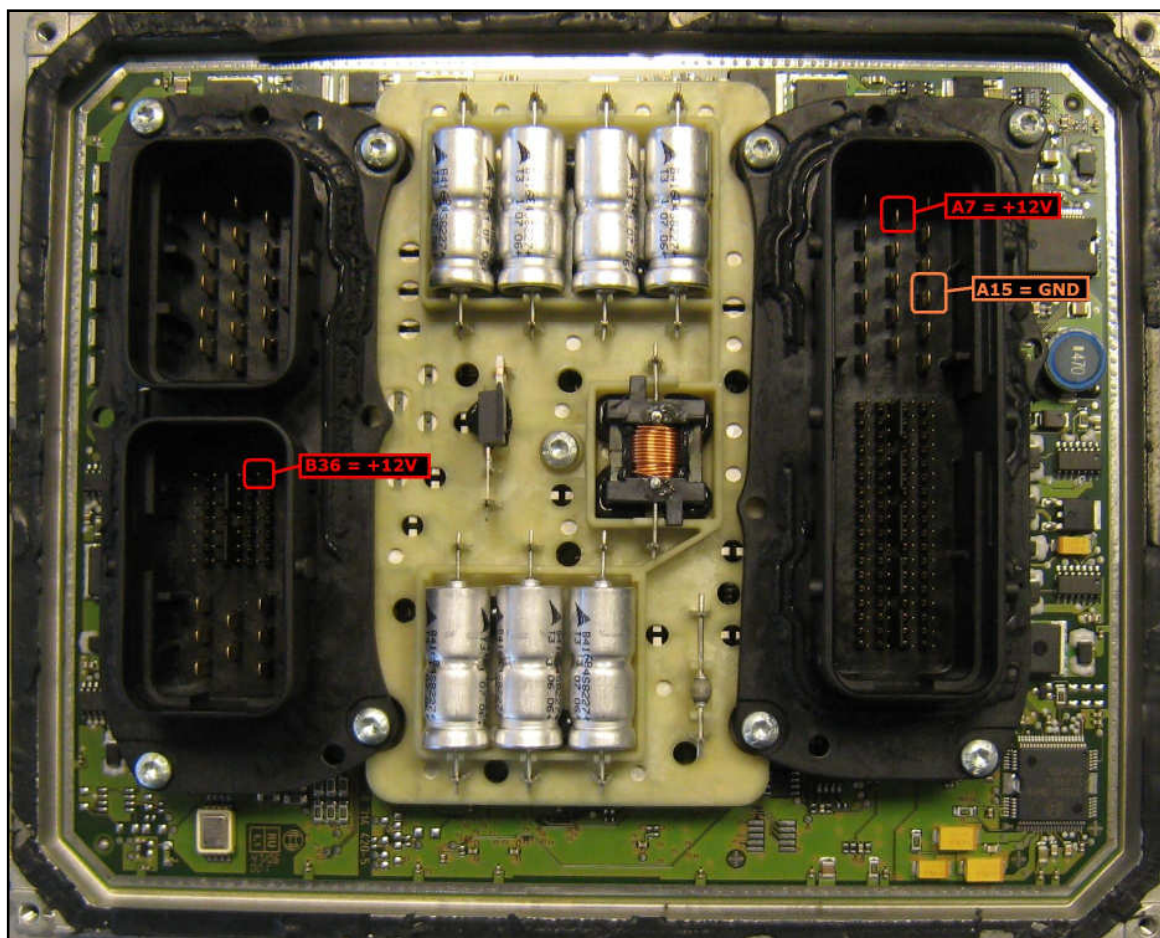

DIRECT CONNECTION

For the direct connection use the SIEMENS F34FL006 adapter

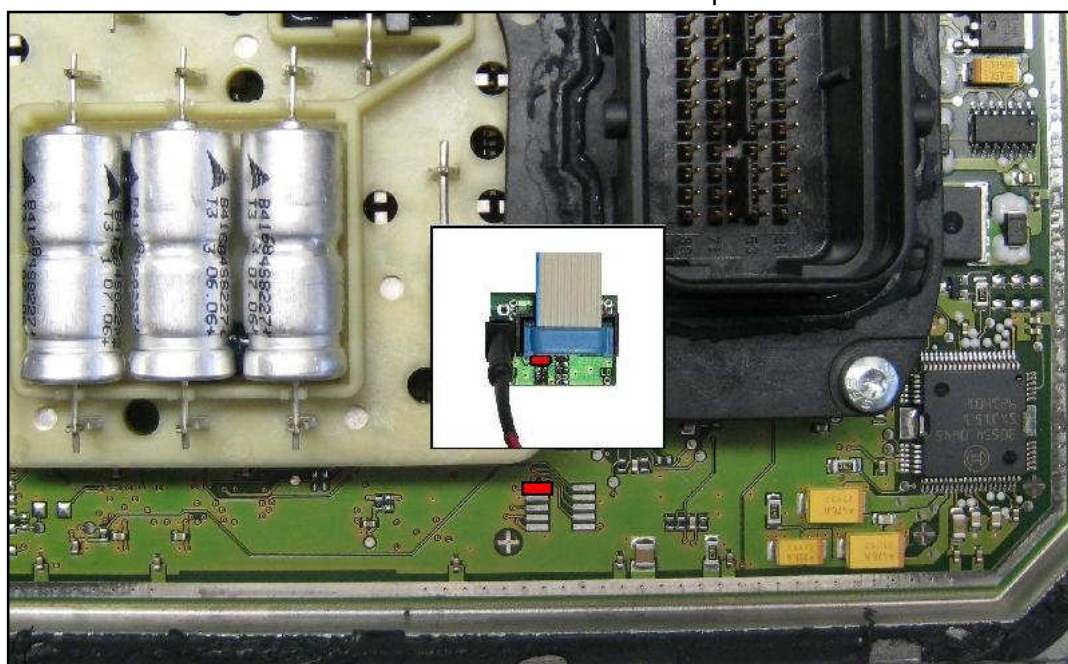

In order to use that adapter it is necessary to extend the soldering strips as shown in the picture

