



The lay-by pins are placed in the lower part of the ECU, left side of the microprocessor.

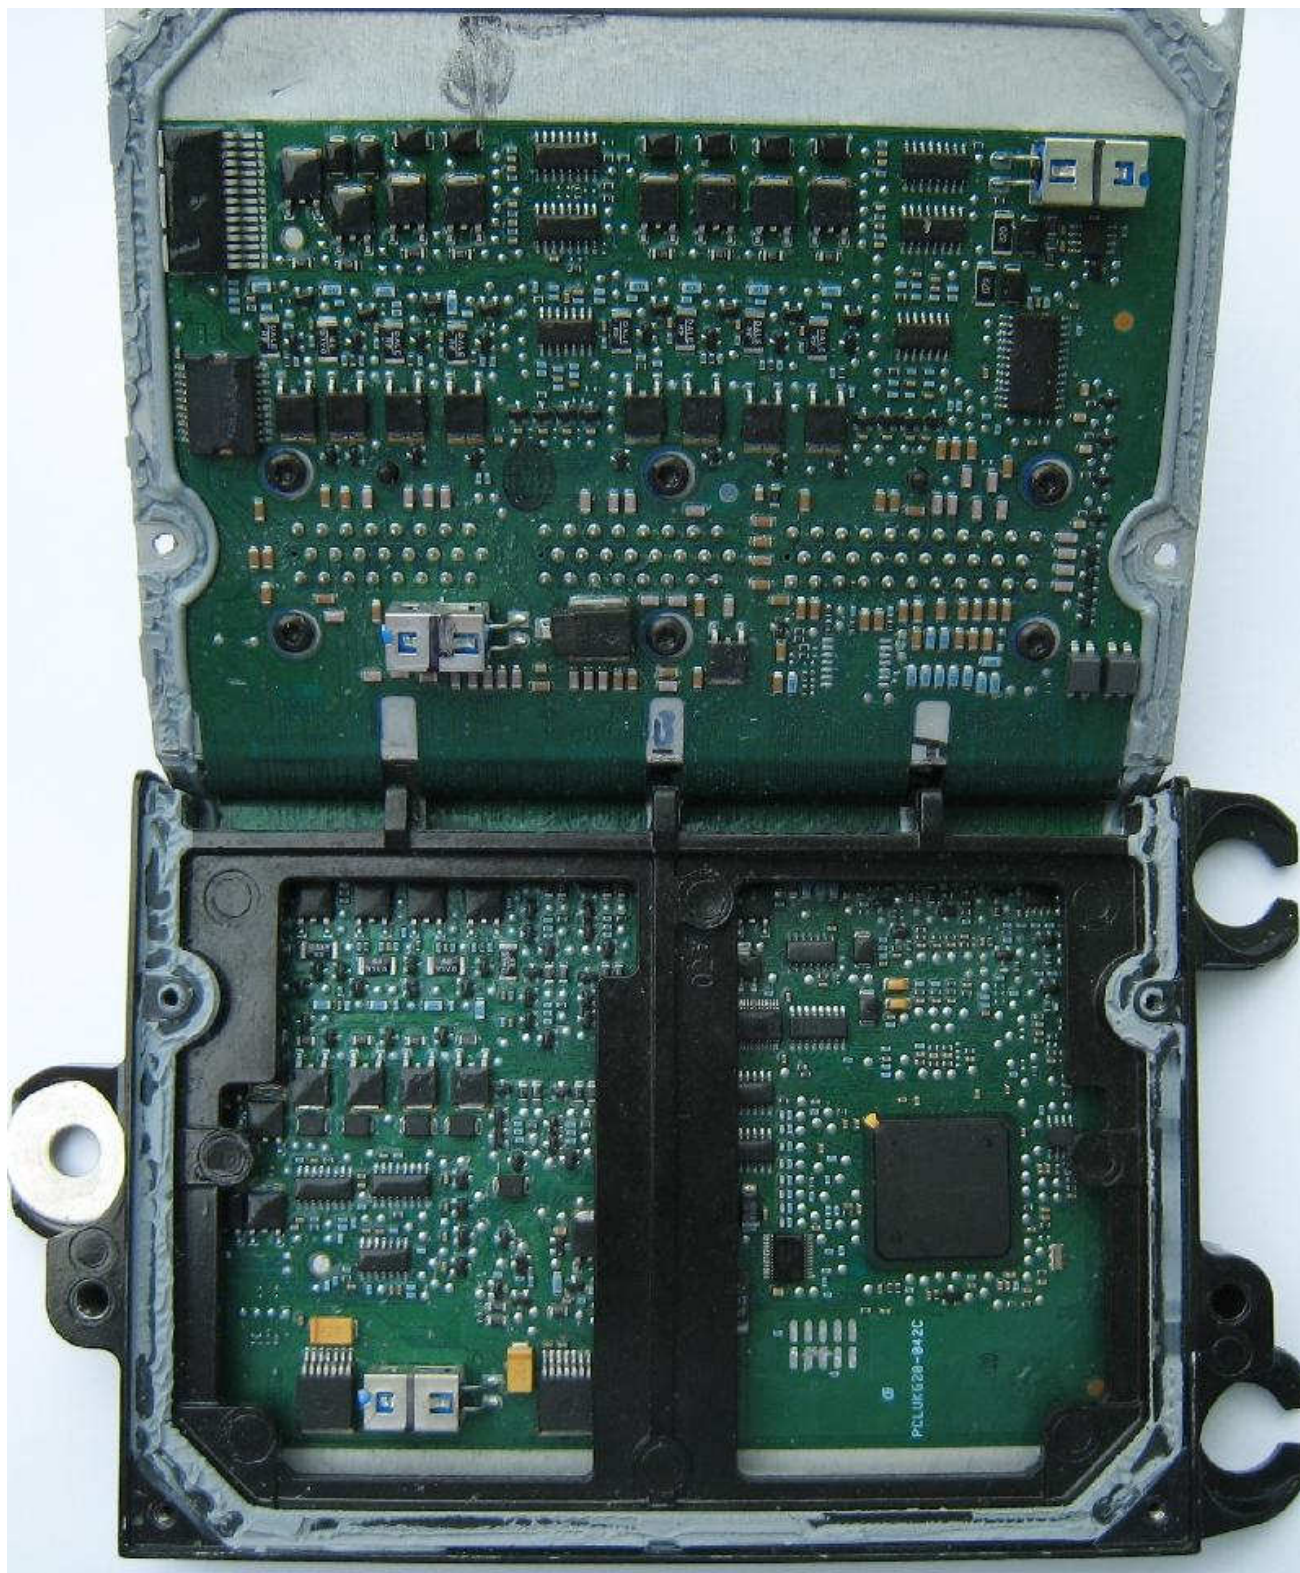

Power Pin OUT

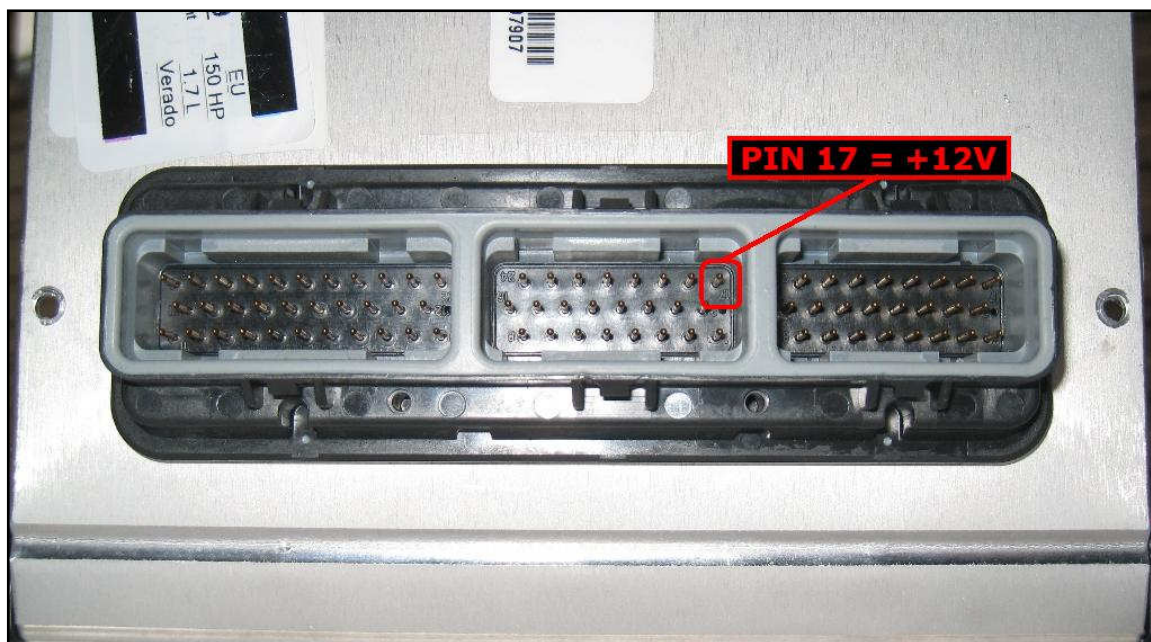

To feed the ECU you have to use the Trasdata power through the black wiring connected to the ADAPTER DELPHI F34FL003

DIRECT CONNECTION with DELPHI F34FL003