


**NEW TRASDATA : PLUGIN 543-627**

**ECU TYPE ACM2**



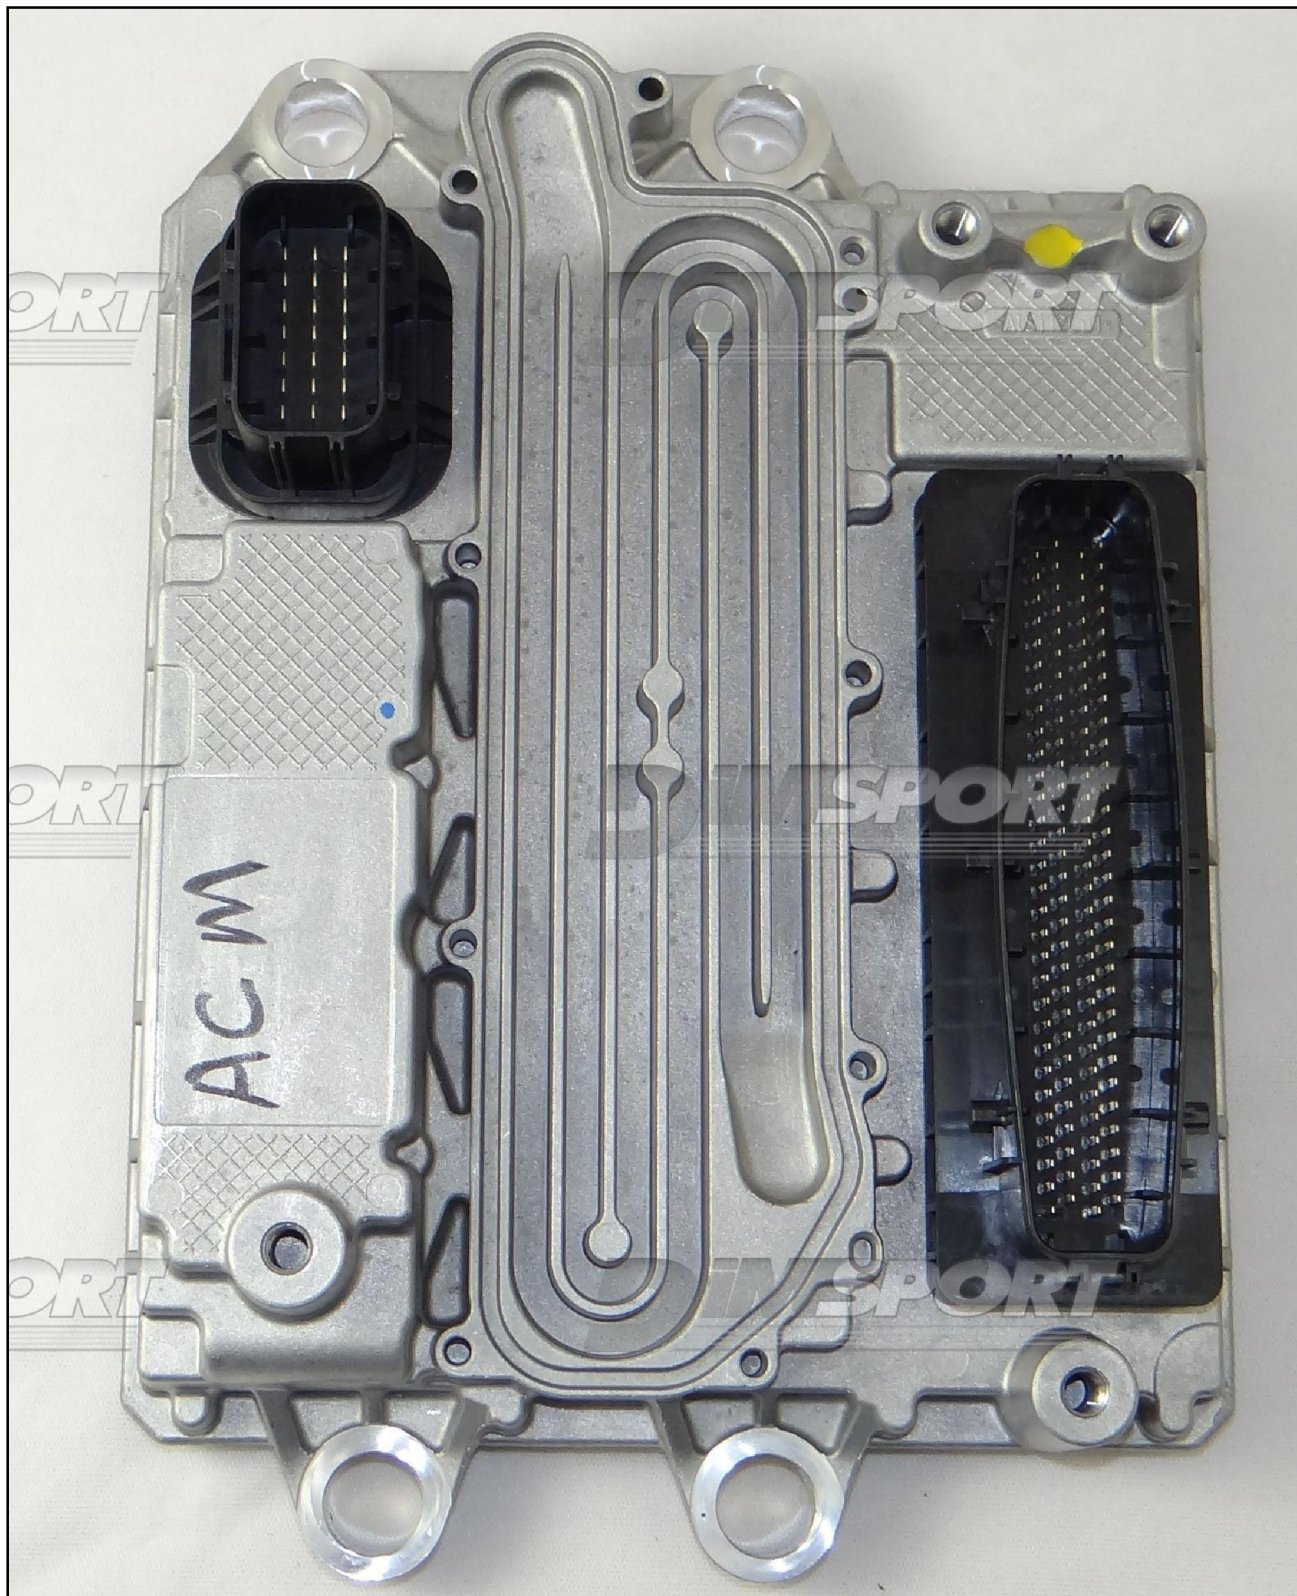

**DIRECT CONNECTION with specific cable**

The required cable for the communication is F34NTA20.

**WARNING:** connect first the cable to the New Trasdata, then to the ECU, ONLY after you can connect the power to the New Trasdata.

At the end of the communication procedures detach first power from the New Trasdata and then the ECU connector.

**F34NTA20**

