



On this ECU it is possible only the DIRECT CONNECTION

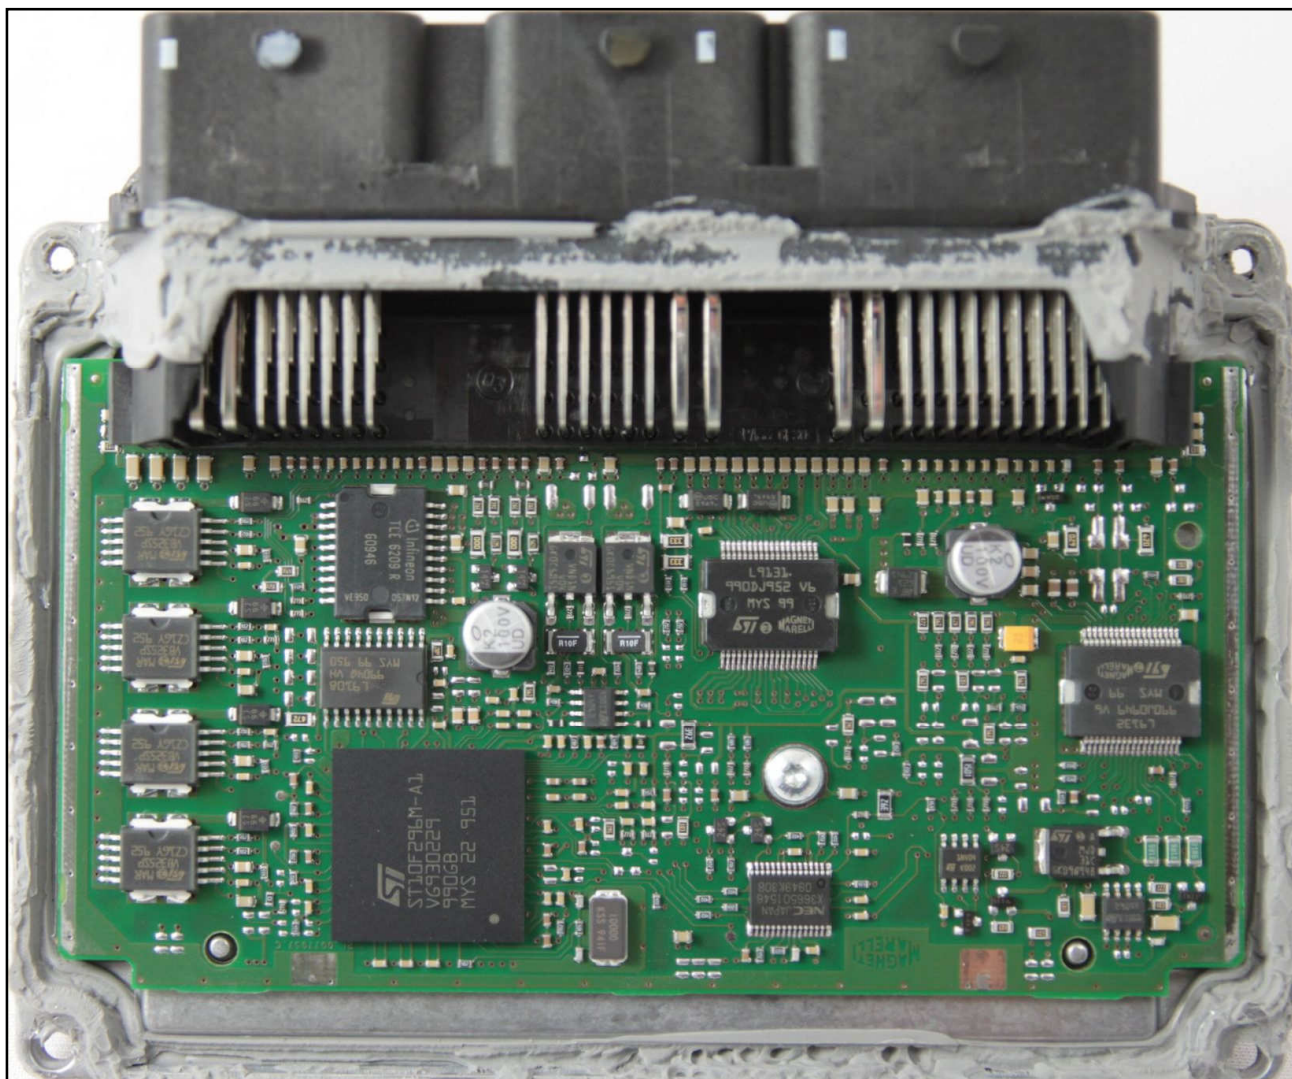

ECU CONNECTOR

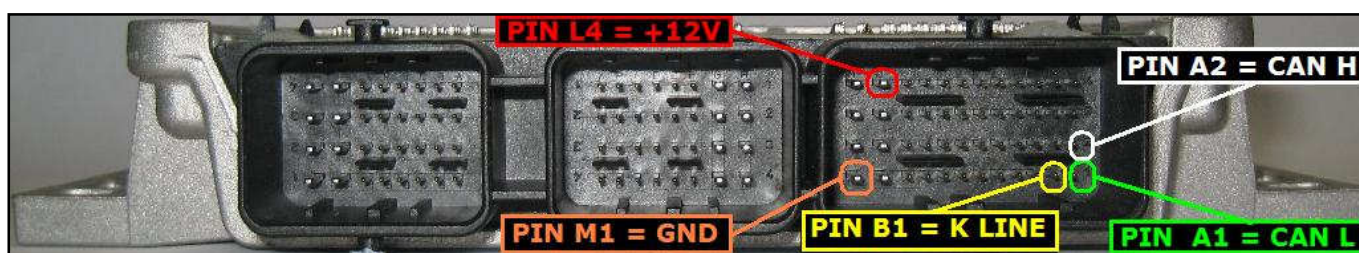

DIRECT CONNECTION

In order to read/write the ECU it is necessary to connect the BOOT pins with a 120 ohm resistor as shown in the picture here below.

