
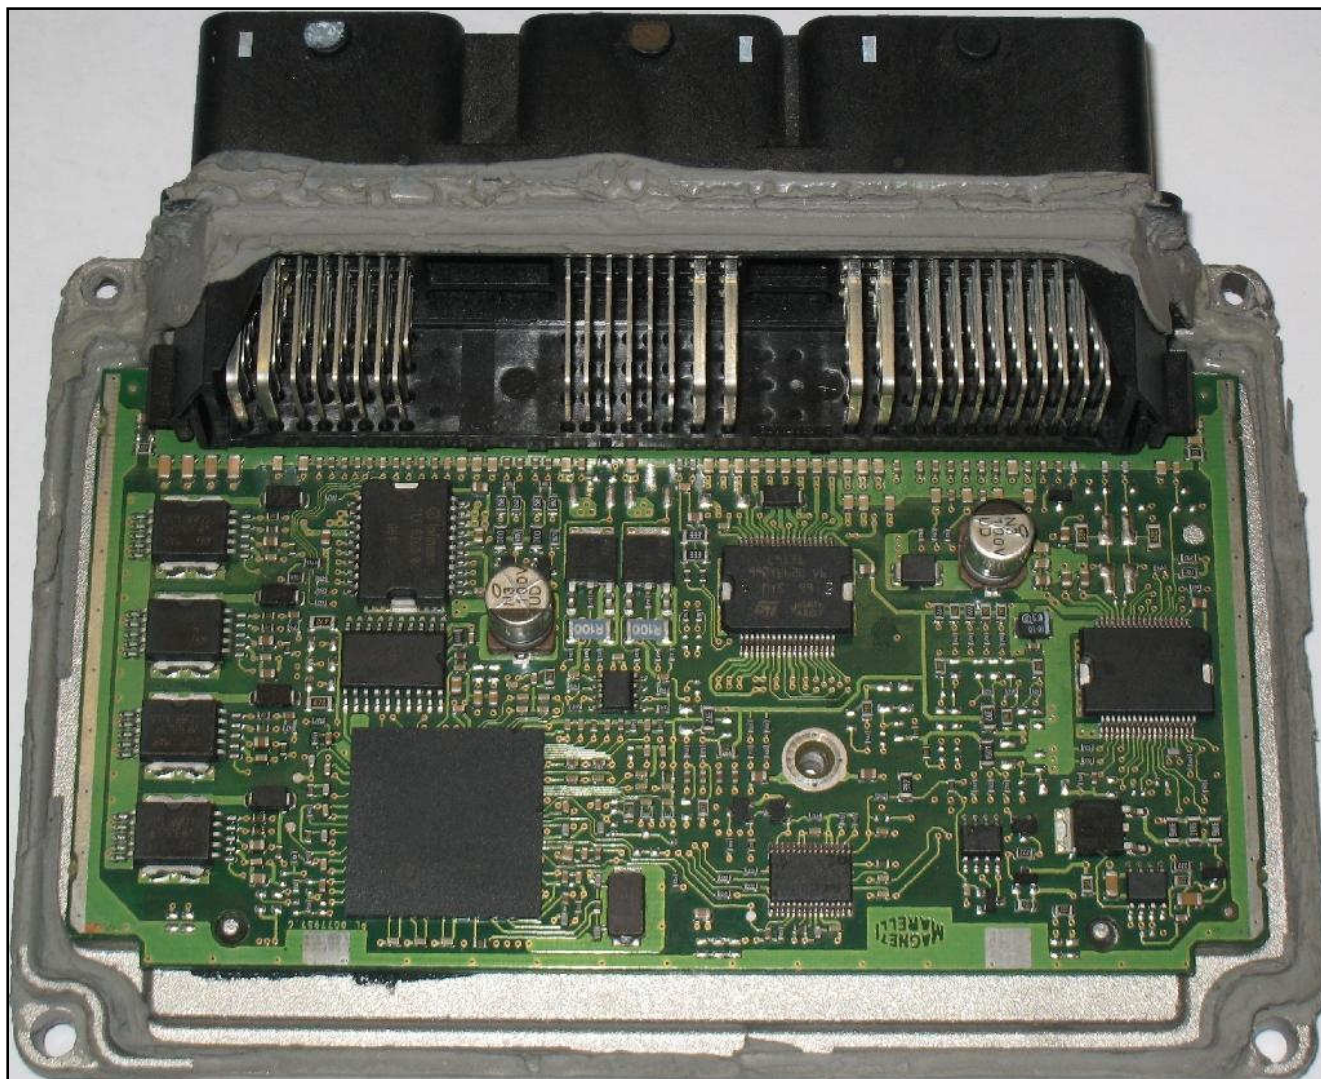



On this ECU it is possible only the DIRECT CONNECTION

TYPE 01 : ECU 6LPB, 6LPC**CONNECTIONS**

DIRECT CONNECTION

Connect the universal wiring to POL4 and to the connector as in the following pictures

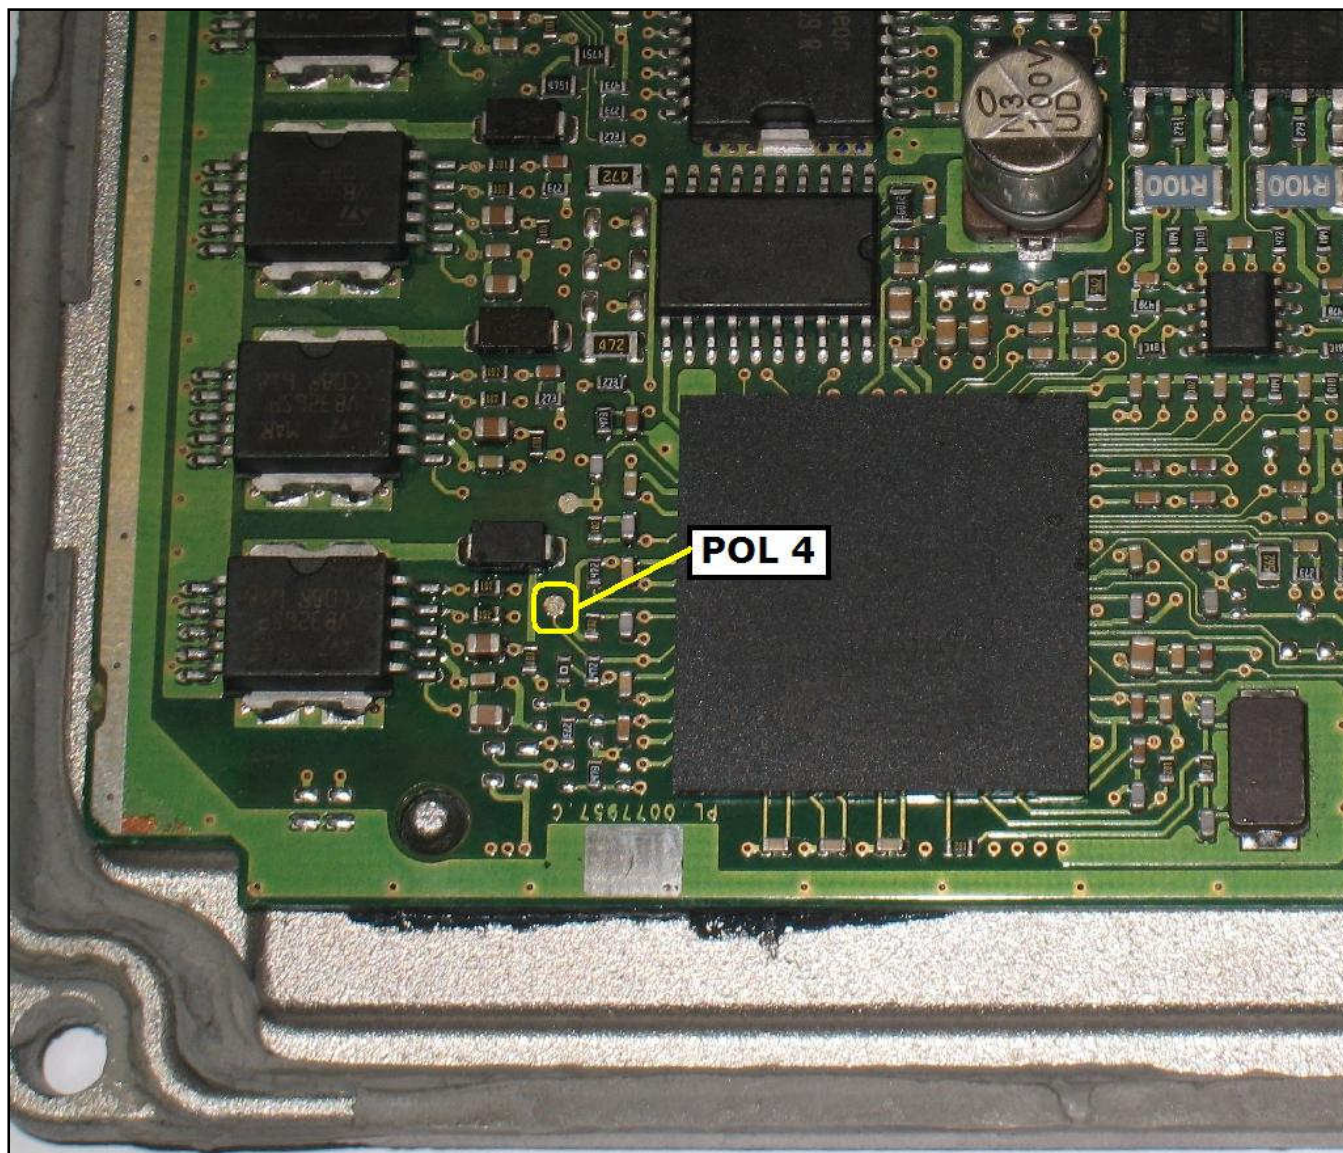

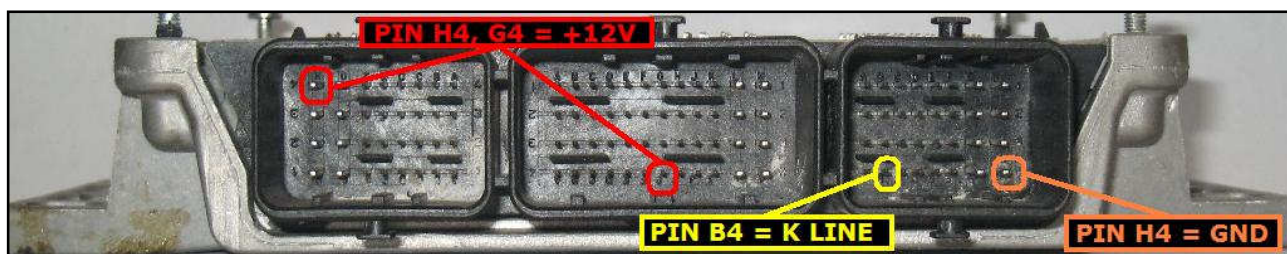TYPE 02 : ECU 6LP1**CONNECTIONS****DIRECT CONNECTION**

Connect the universal wiring to POL4 and to the connector as in the following pictures

