



PLUGIN 634 :NEW TRASDATA

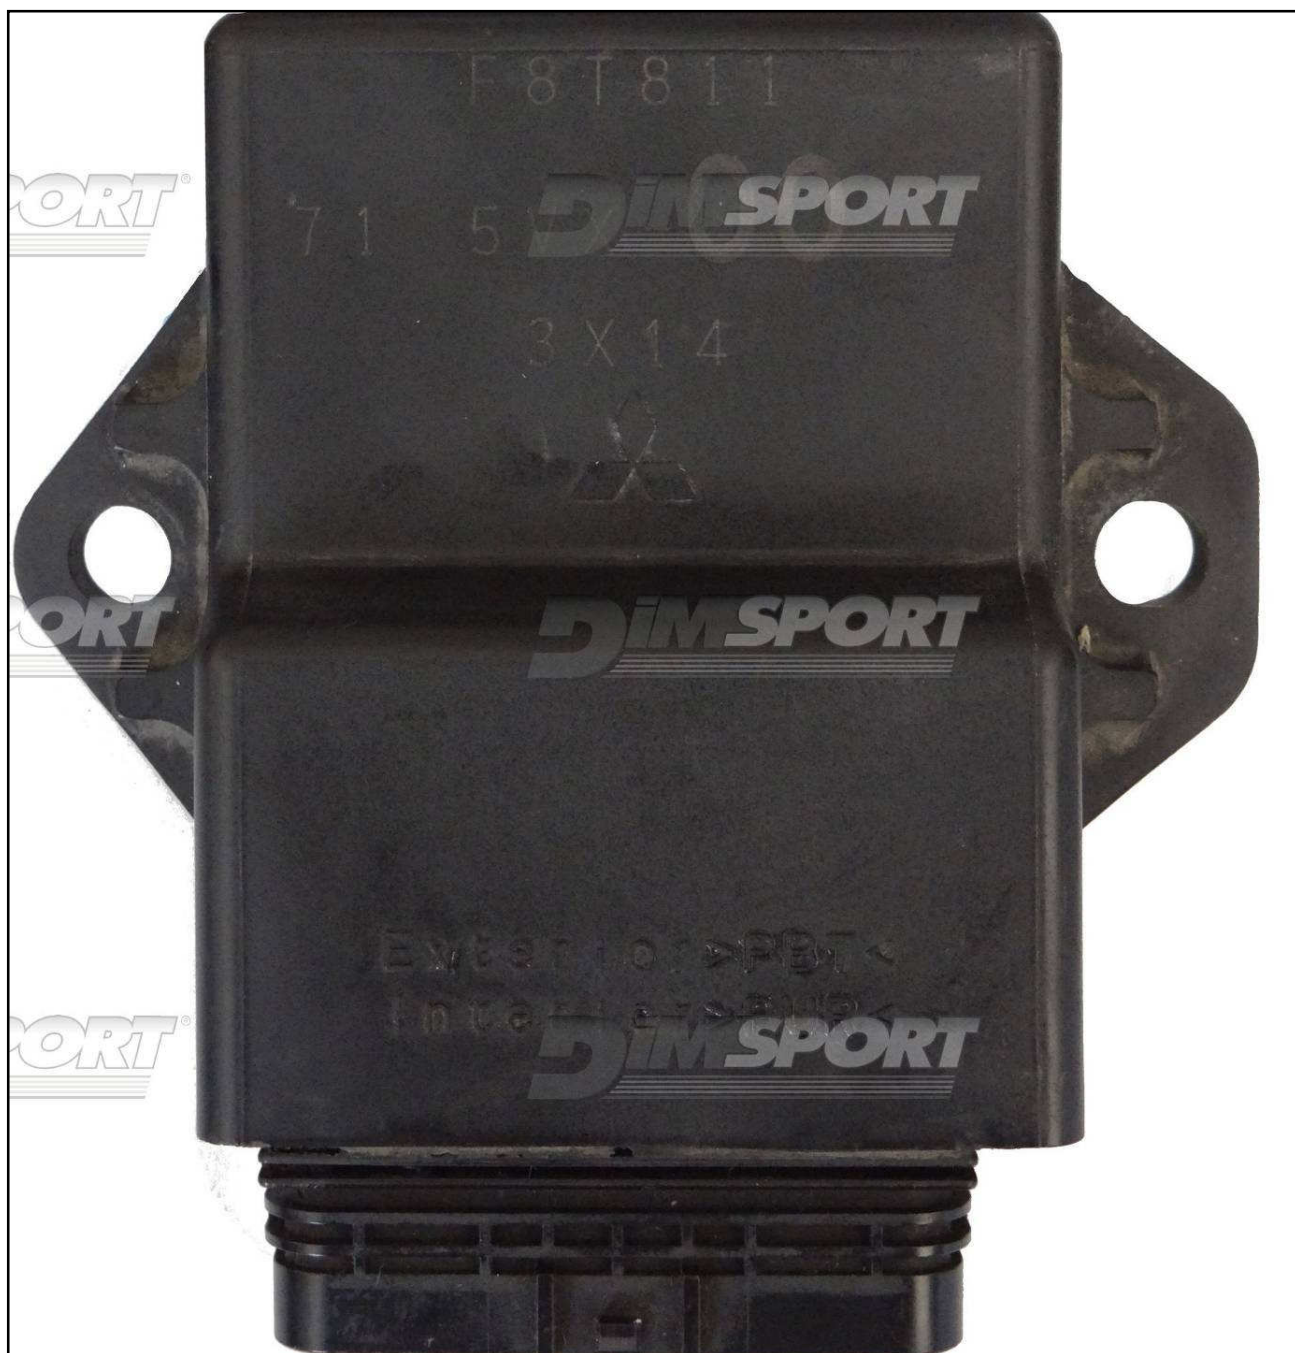


DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON

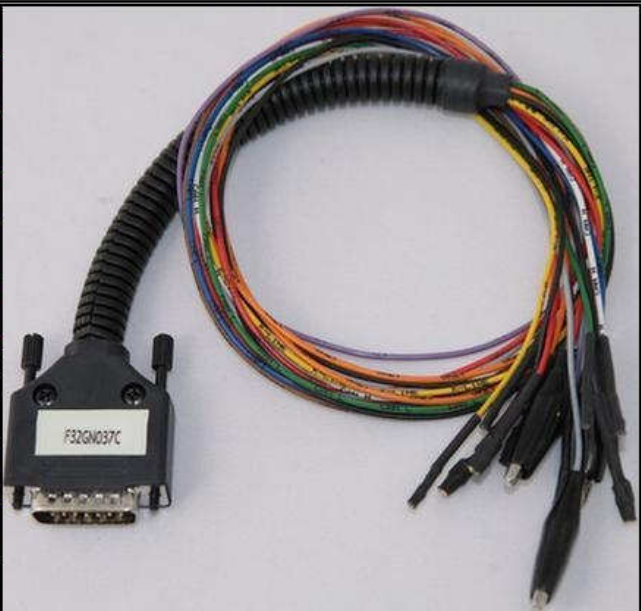COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

Warning: to perform the reading/writing operations it is necessary to carve the ECU, after carving the ECU (as displayed here below) connect the ECU back to the vehicle and check that it runs properly without defects.

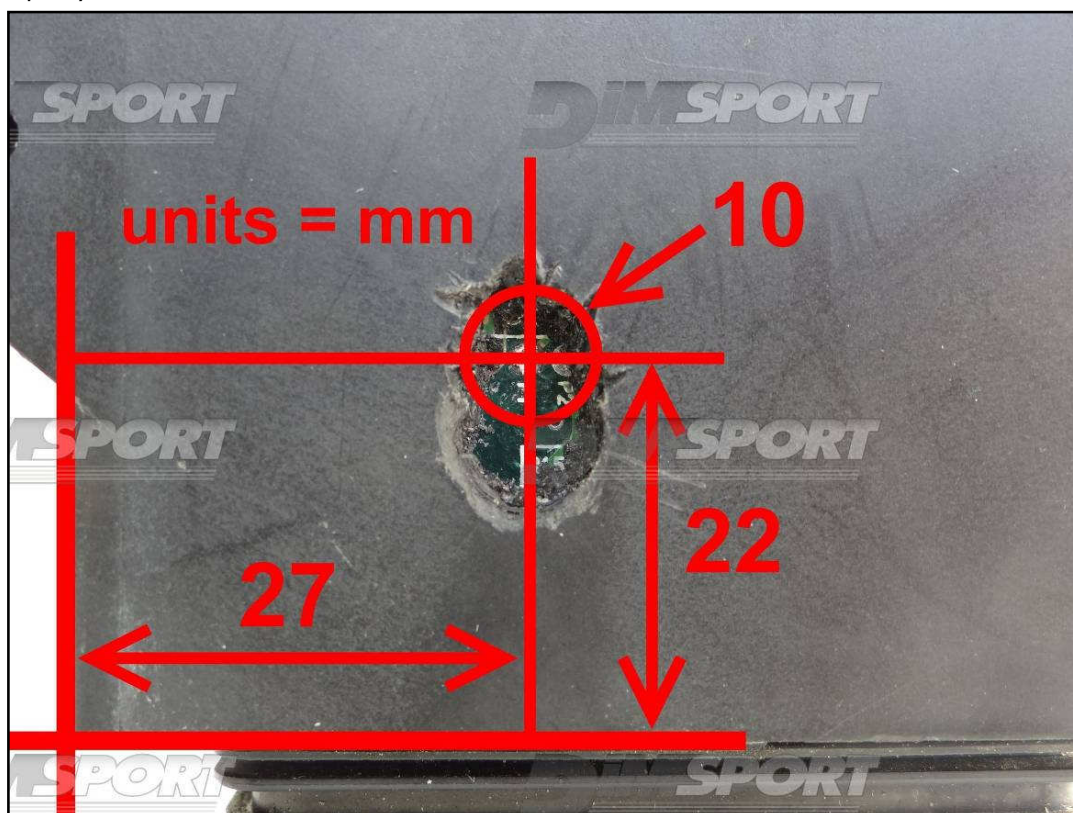

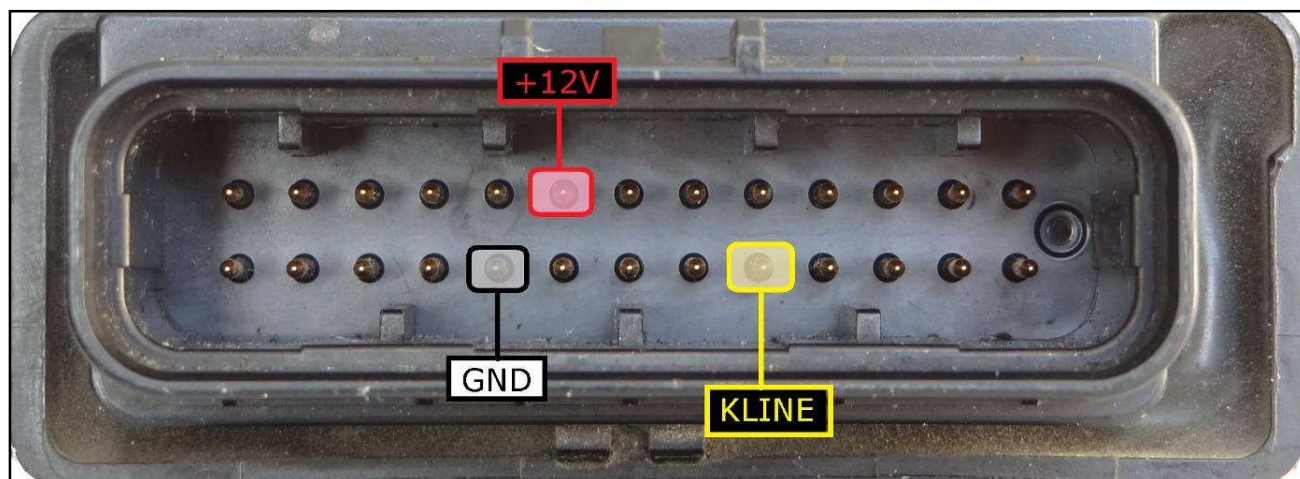ECU CONNECTOR

To connect on the motherboard use the **violet VPP** wire of the F32GN037C cable.

