



On this ECU it is possible only the DIRECT CONNECTION

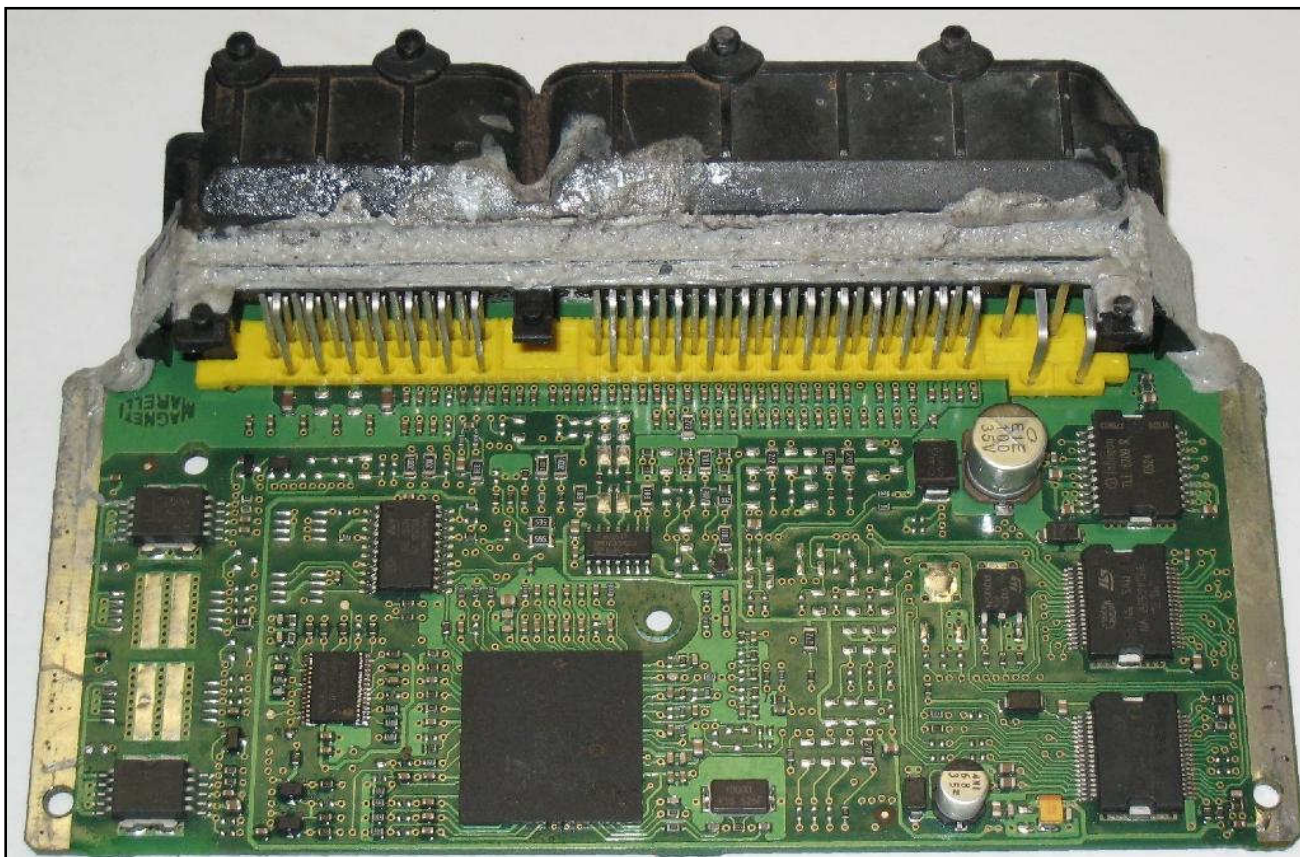

CONNECTIONS

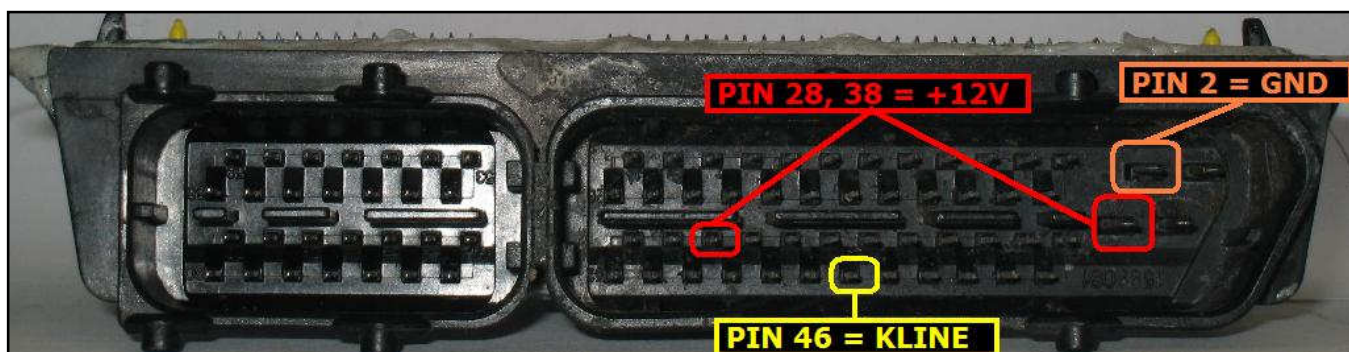

DIRECT CONNECTION

Connect the universal wiring to POL4 & RESET and to the connector as in the following pictures

