

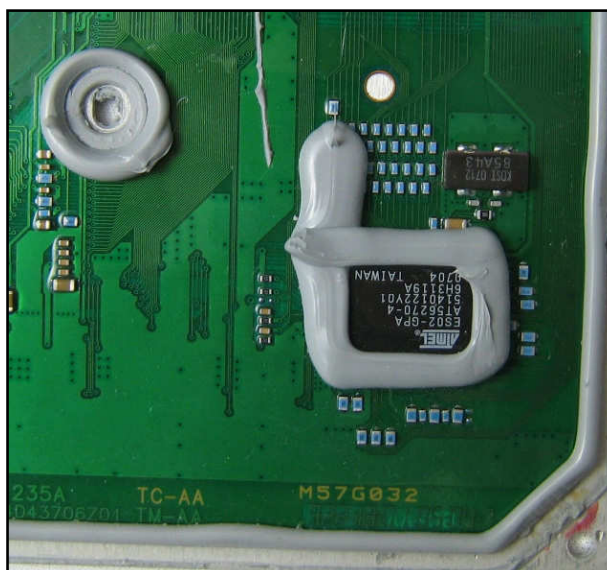


The soldering pads are located on the right side of the ECU, right side of the microprocessor.

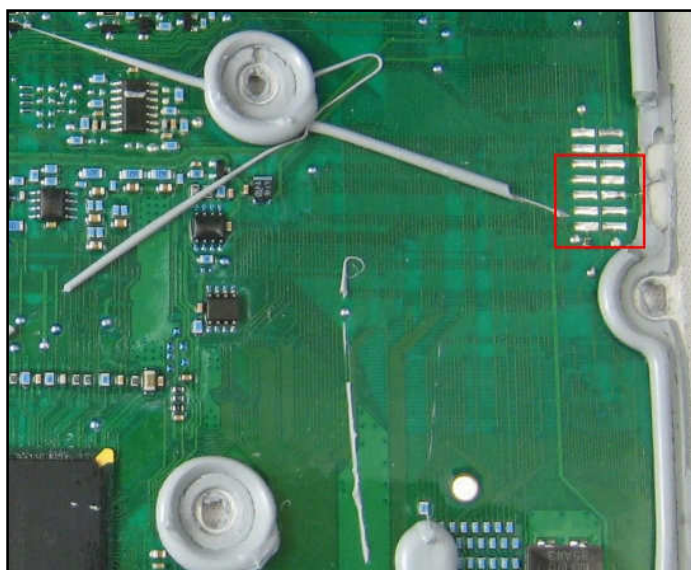

In order to read by BDM system it is necessary to use the adapter F34FL003 with only the flat cable connected to the trasdata and bridge the quartz as shown in the picture here below. Remove the bridge before to set back the ECU in the vehicle.

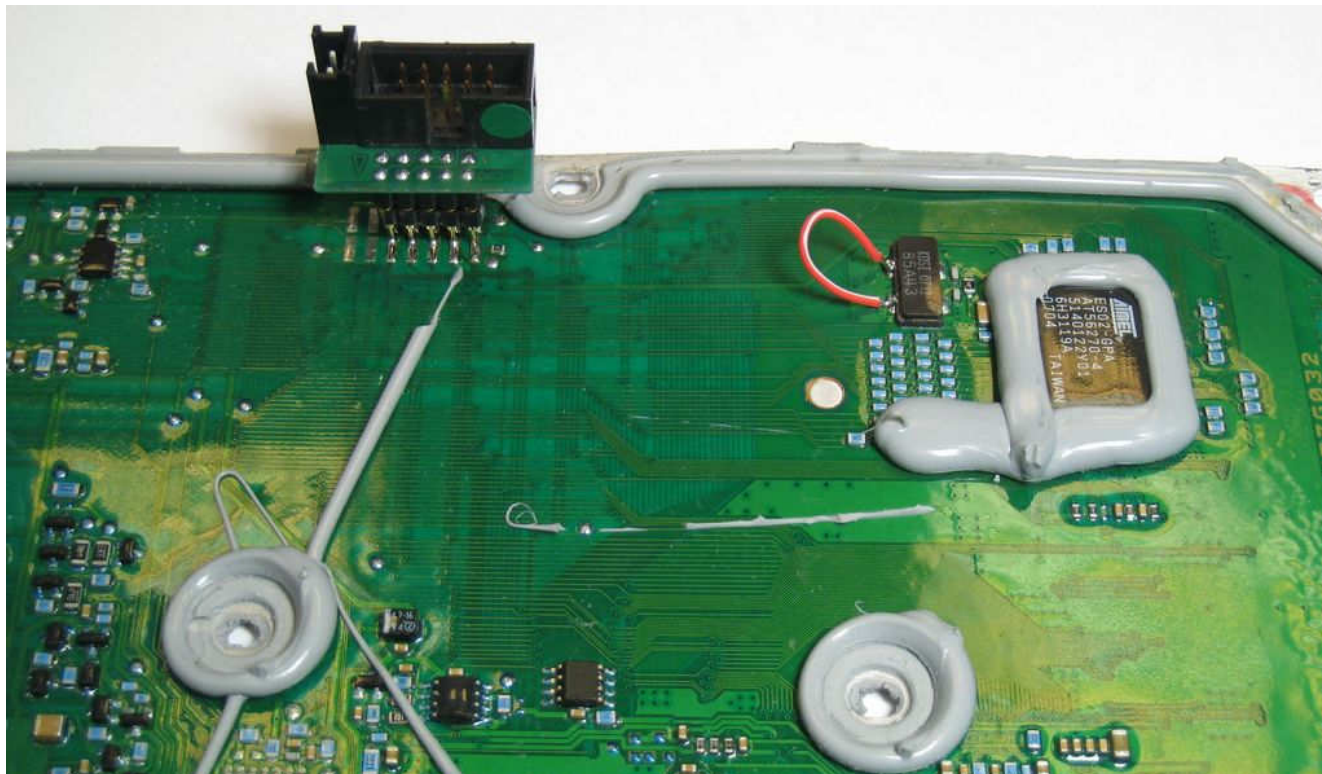

In order to feed the ECU with through the Pin OUT you must use:
the F34FL004 switch with its 24 V power supply C32FL004

