


PLUGIN 876 :NEW TRASDATA

DIRECT CONNECTION – ECU READING/WRITING:

For the READING&WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
MARRONE BROWN	BOOT
BLU BLUE	CNF
NERO BLACK	RXD
GRIGIO GREY	TXD
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
NERO BLACK	MASSA GND

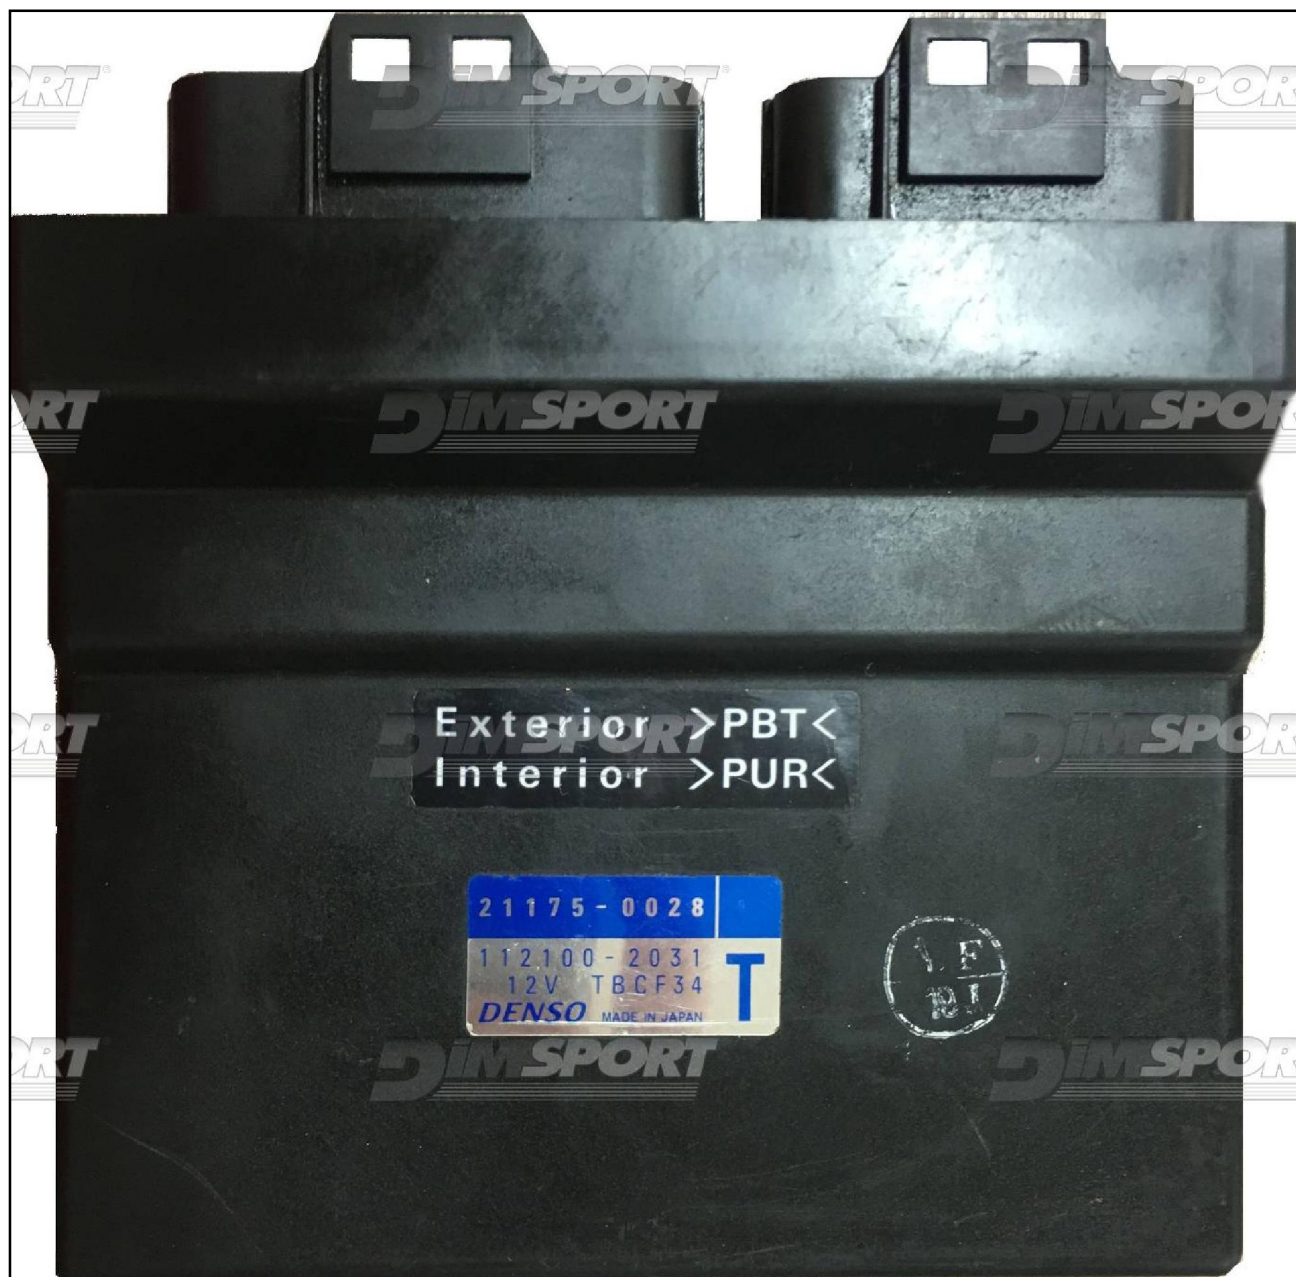