
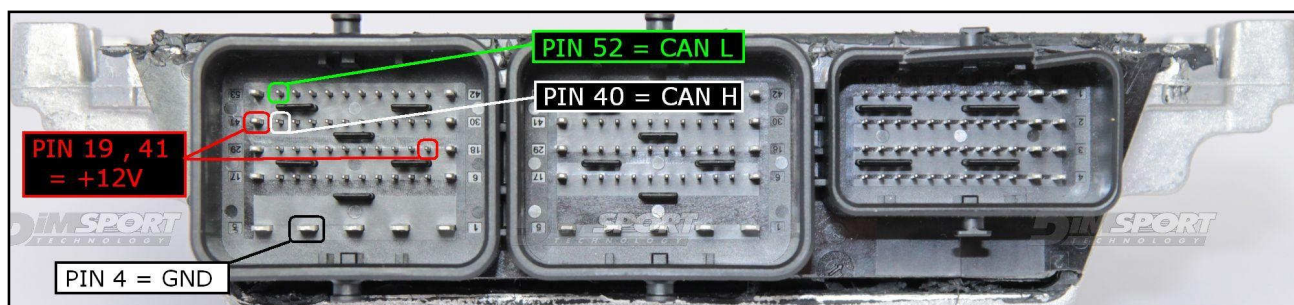


On this ECU ONLY the DIRECT CONNECTION is possible.

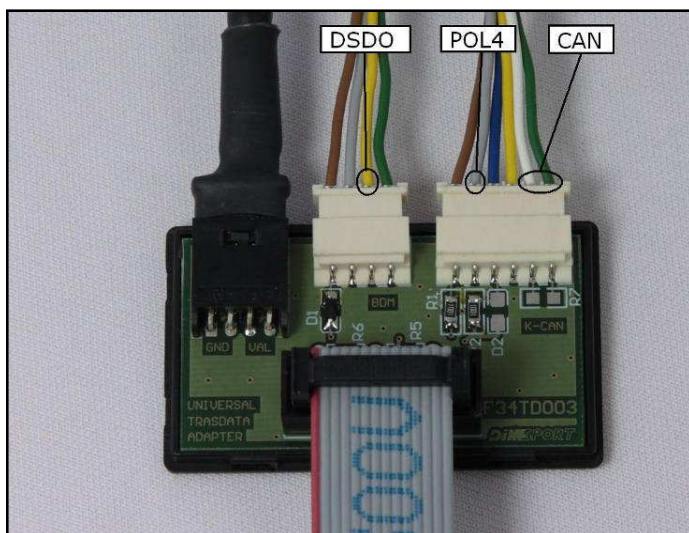

DIRECT CONNECTION WITH TRASDATA SYSTEM

In order to perform the Trasdata direct connection with free wirings it will be necessary to connect the POL4 pin and DSDO signal too. DSDO is the yellow wire on BDM connector of the universal adapter F34TD003.

**DIRECT CONNECTION**