

PLUGIN 303-364-382-645 :NEW TRASDATA

The lay-by pins are placed in the lower part of the ECU.




DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

Use the same connection for the DIMA too.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

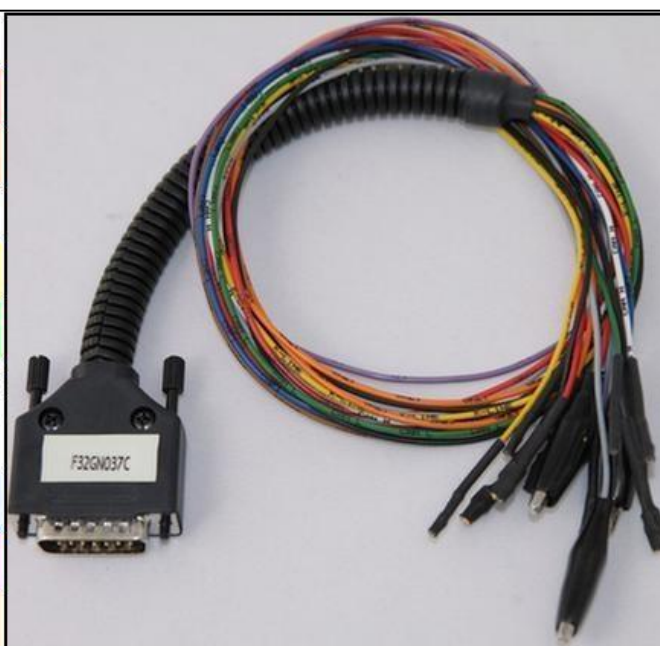

ECU CONNECTOR

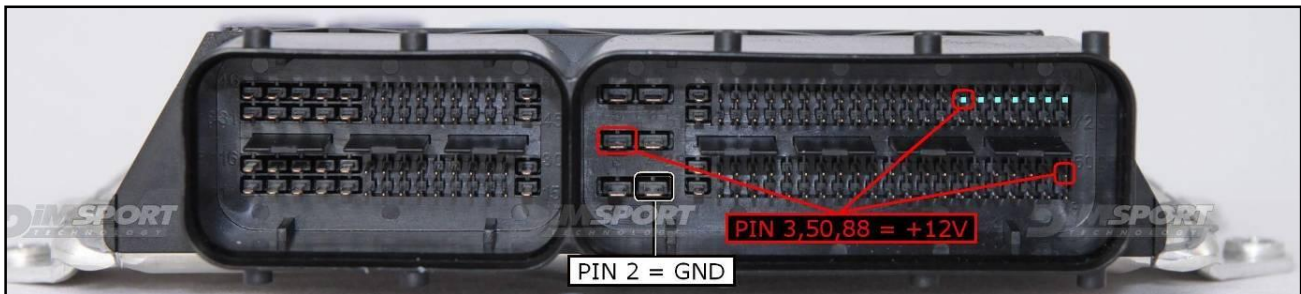


To the pin 3,50,88 you can connect both wires red and orange, they both have 12 Volt signal.

J-TAG FREE WIRING CONNECTION

Connect the F34NTF53 wiring as explained here below :


Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Verde / Green
16	Blu Blue
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Non usato Not used
22	Rosso Red
23	Non usato Not used
24	Giallo Yellow
25	Non usato Not used
26	Non usato Not used

WARNING: solder the wires by paying attention NOT to short-circuit the signals of the wires


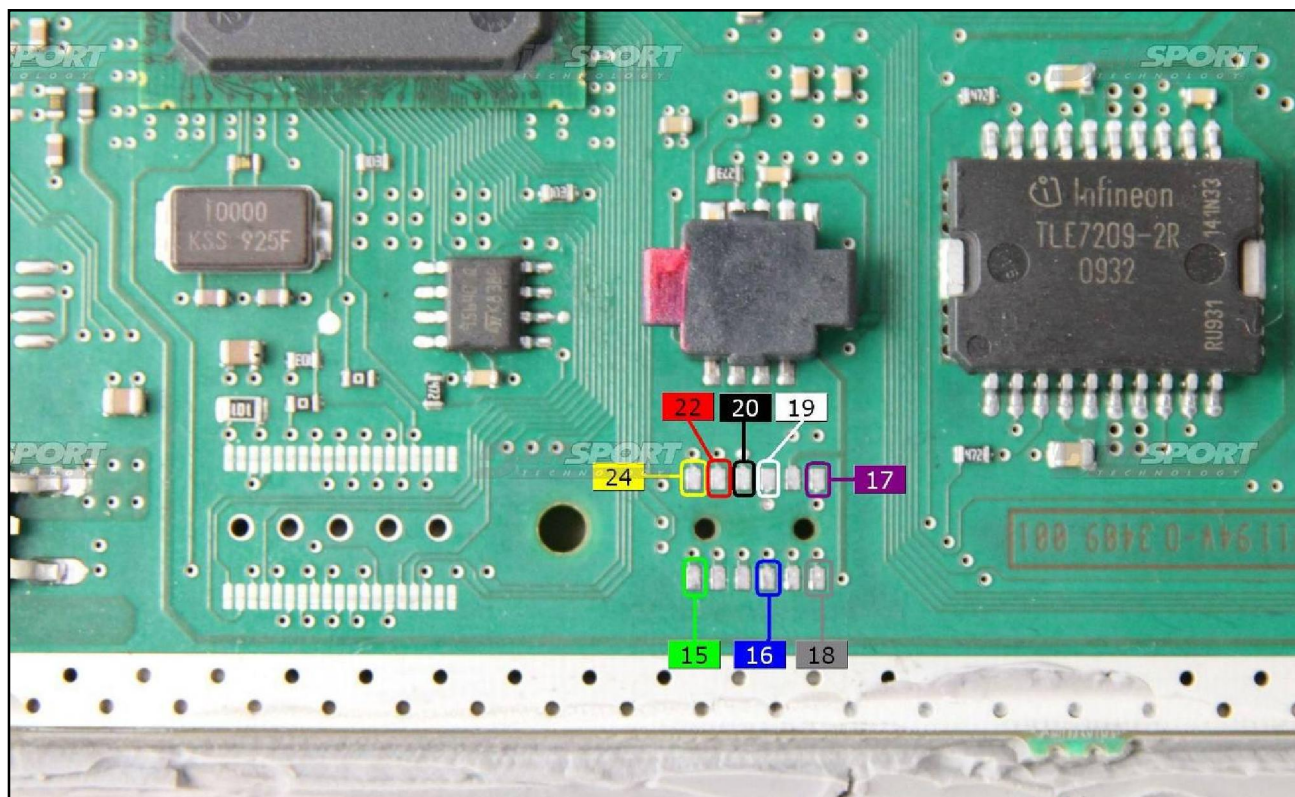


DIMA CONNECTION

JTAG communication pads are placed under the microprocessor.

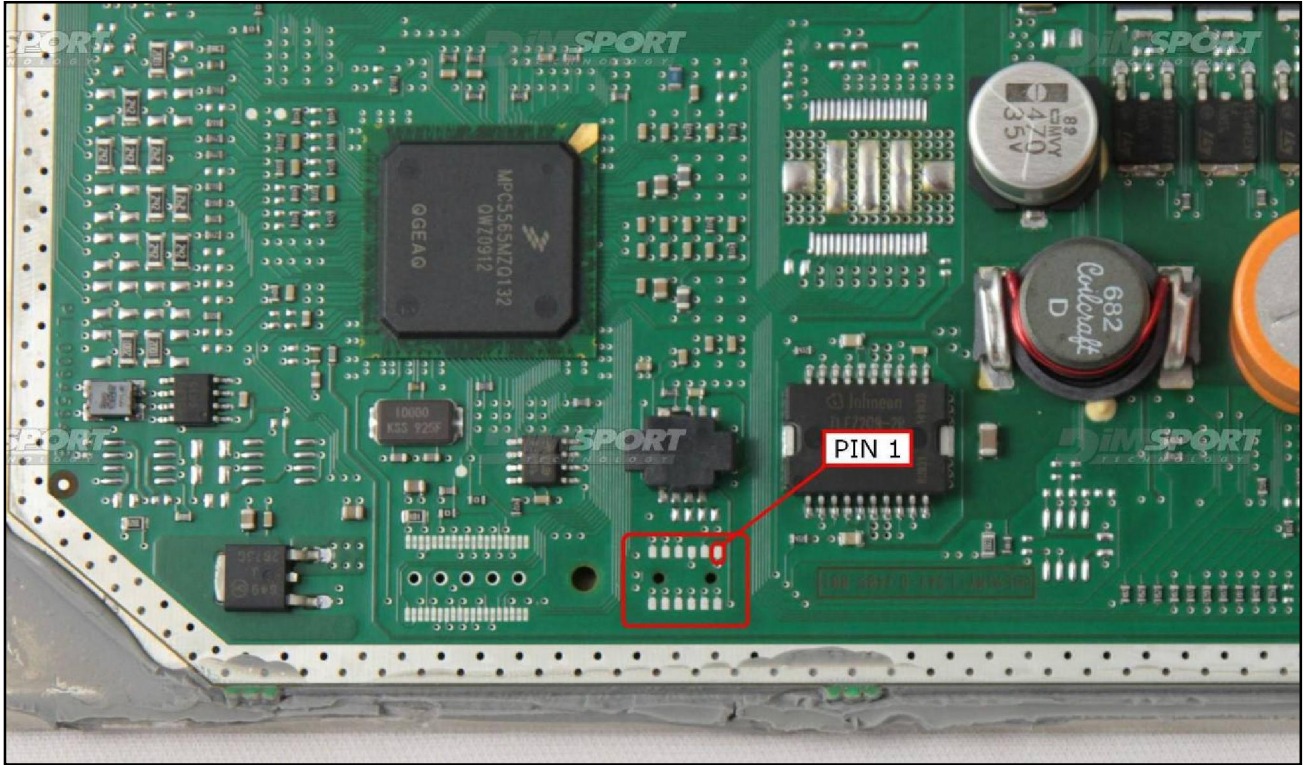

Use the DIMA adapter F34DM012

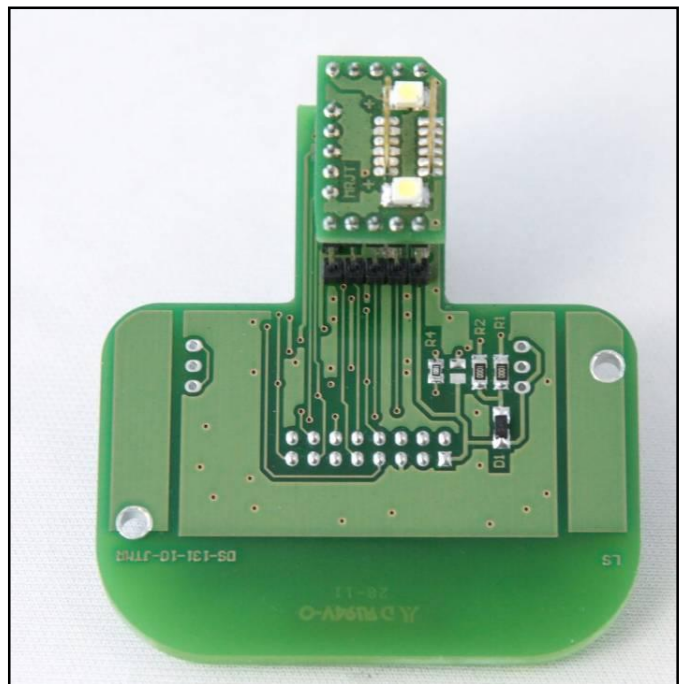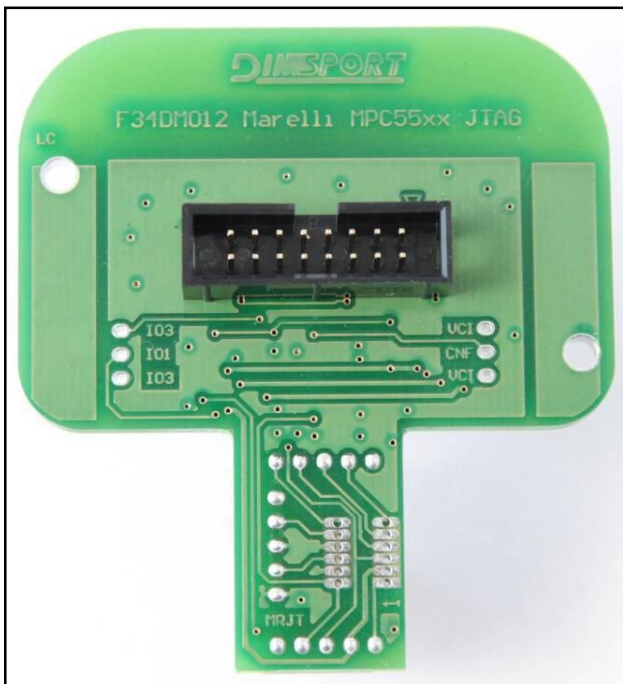

Place the F34DM012 adapter as shown in the following picture, check the correct position of the PIN 1

