



The lay-by pins are placed in the lower part of the ECU.

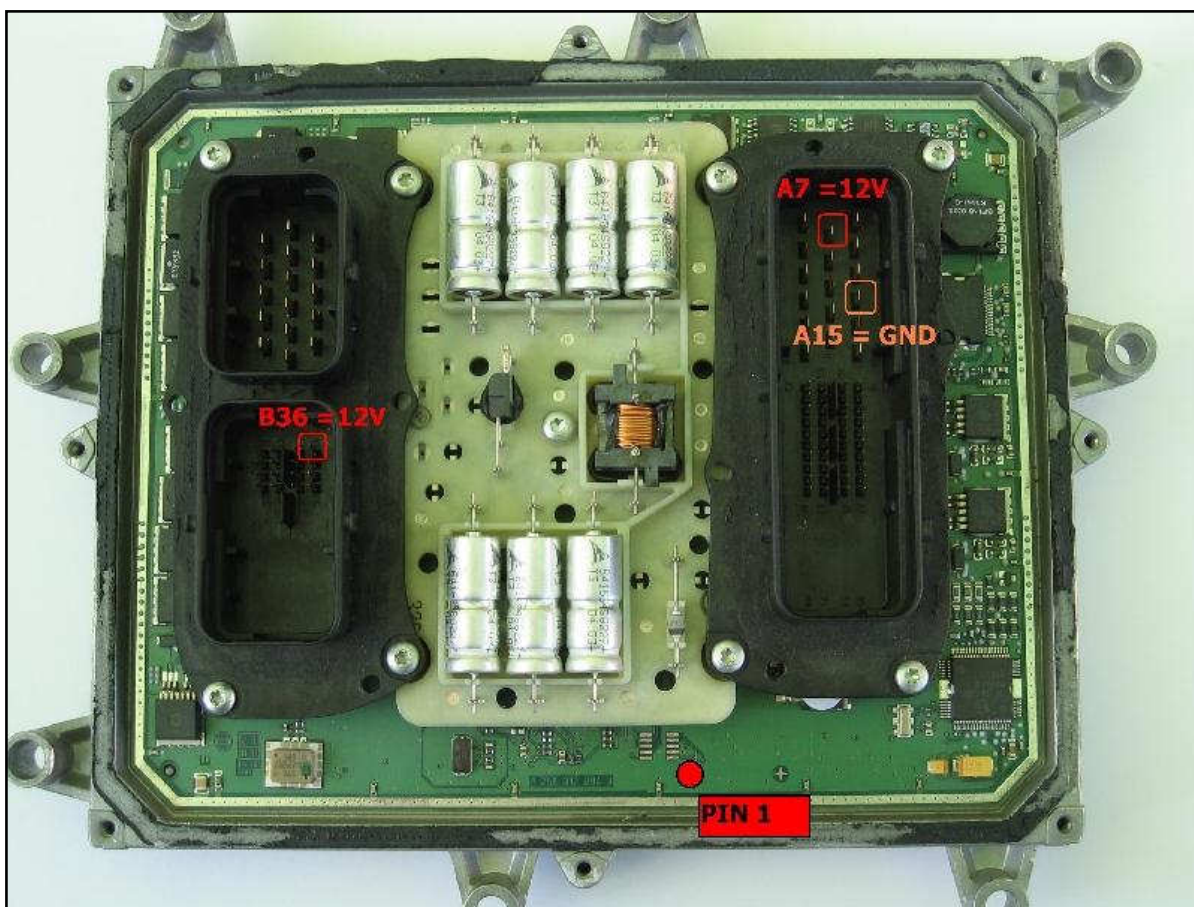

DIRECT CONNECTION

Use adapter SIEMENS F34FL006 for direct connection

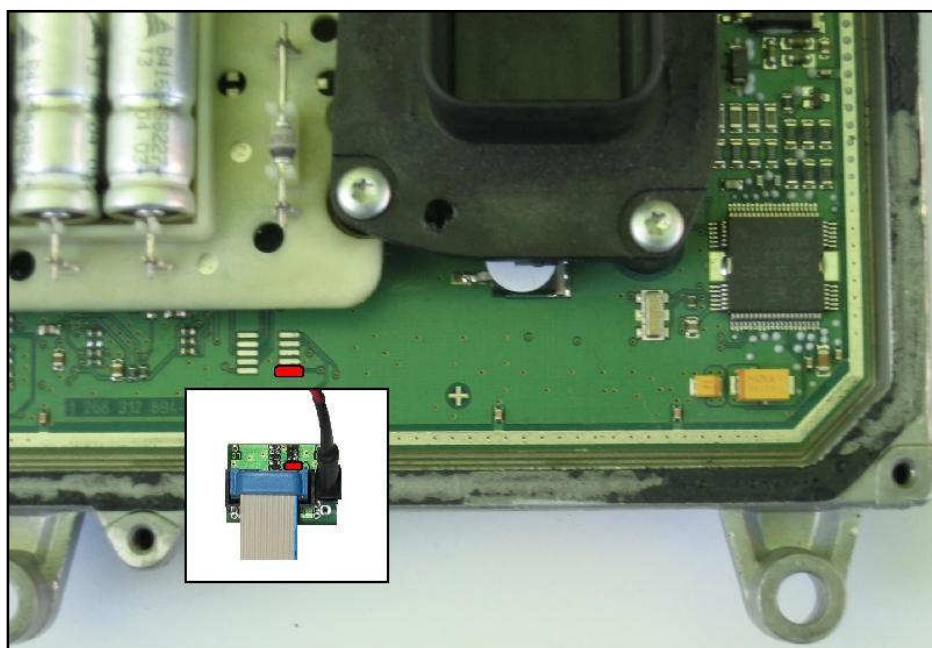

DIMA CONNECTION

To connect with DIMA you need adaptor F34DM008

