


The soldering pads are located in the lower part of the ECU.

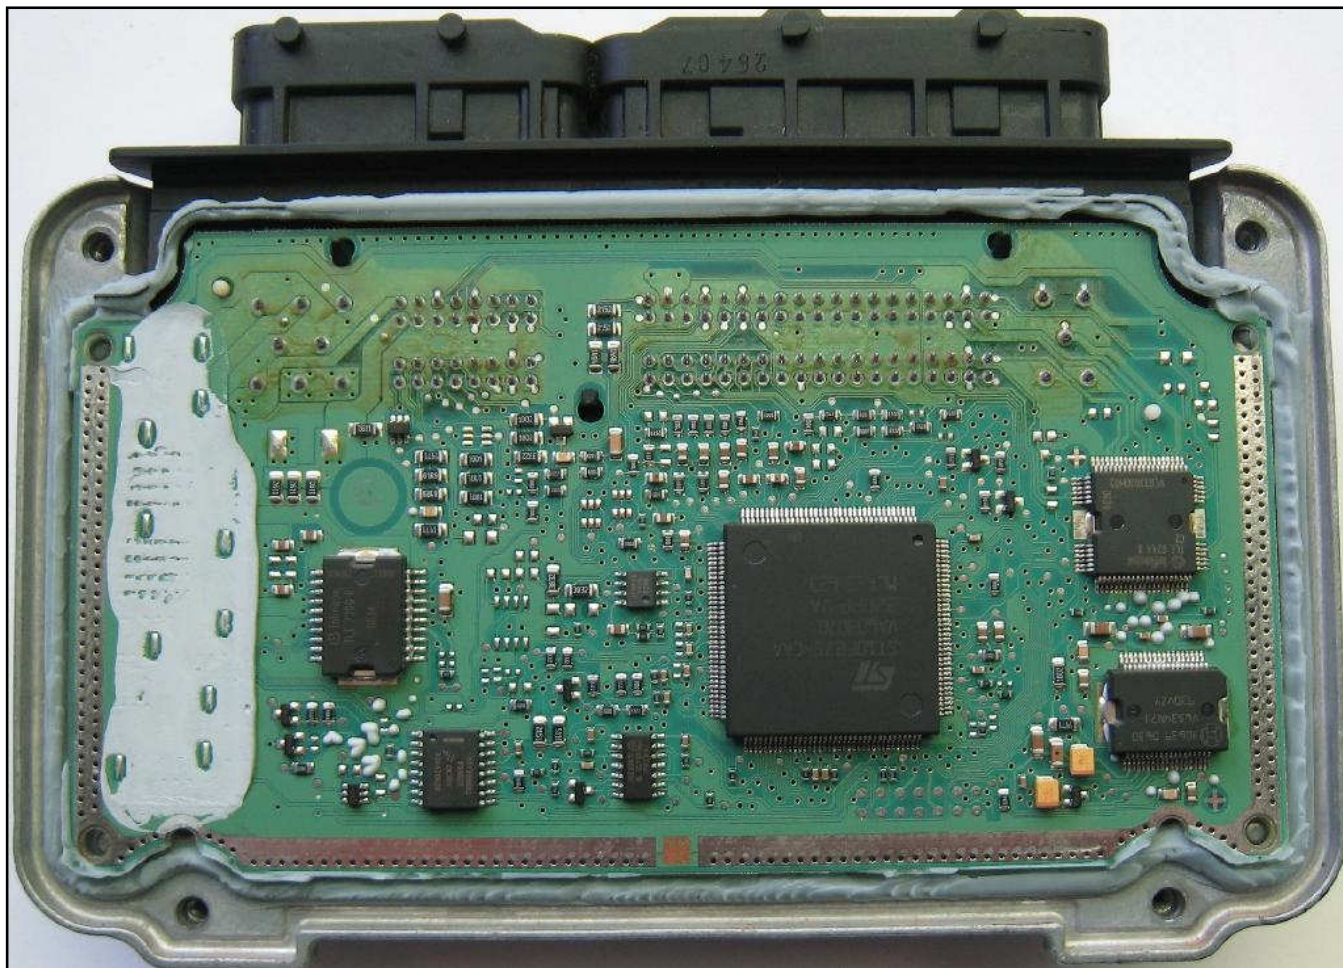


Connect the power feeding **only for DIRECT CONNECTION**, do not connect them the DIMA



DIRECT CONNECTION

Connect the universal cable to POL4 & POL5 and to the connector as shown in the picture

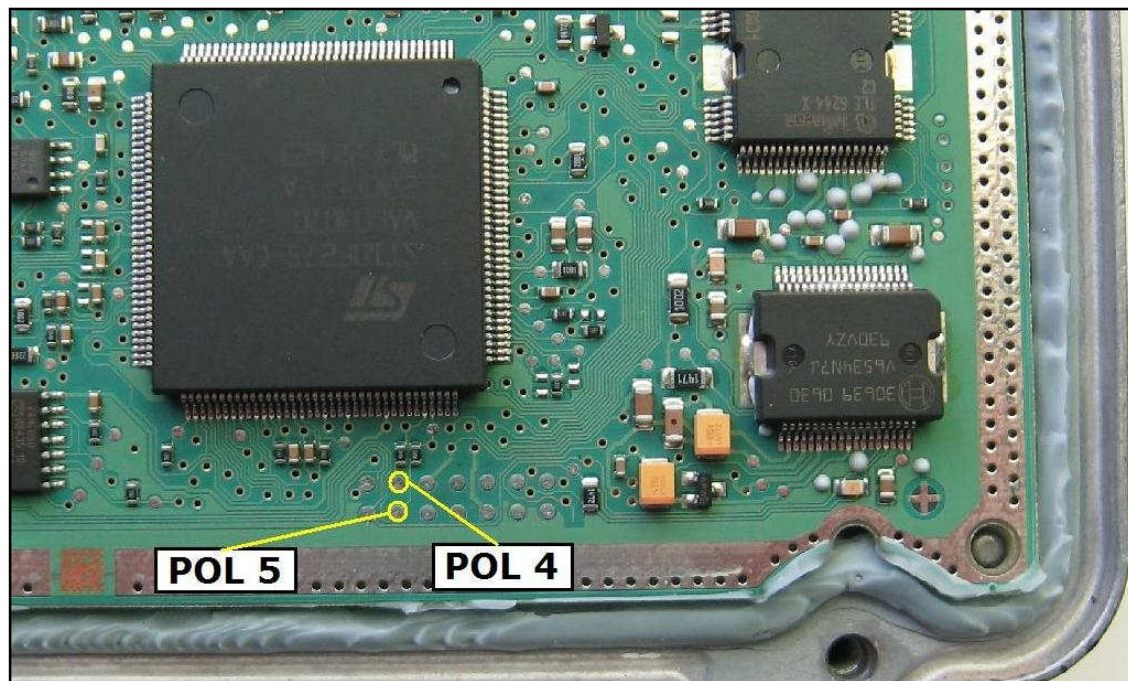**DIMA CONNECTION**

with DIMA CONNECTION too it is necessary to solder the POL5

