


NEW TRASDATA**PLUGIN 263→ Denso R2AX SH7059 Mazda****PLUGIN 276→ Denso DT SH7059 Subaru****PLUGIN 327→ Denso R2AA SH7058 Mazda**

The lay-by pins are placed in the lower part of the ECU.

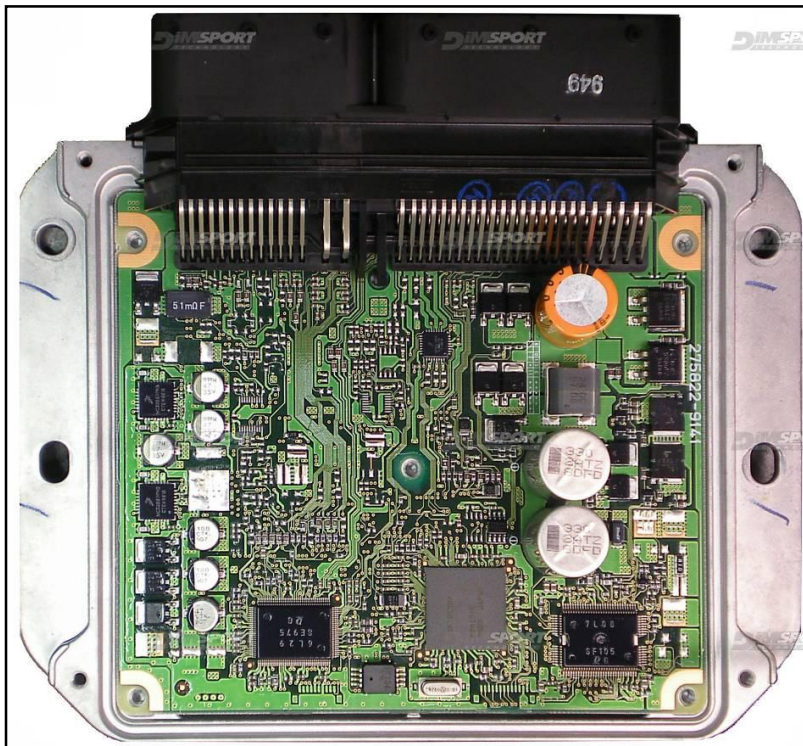



DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

These connections are required for all the connection approaches: loose wires, soldering adapter, metal positioning frame adapter.


COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

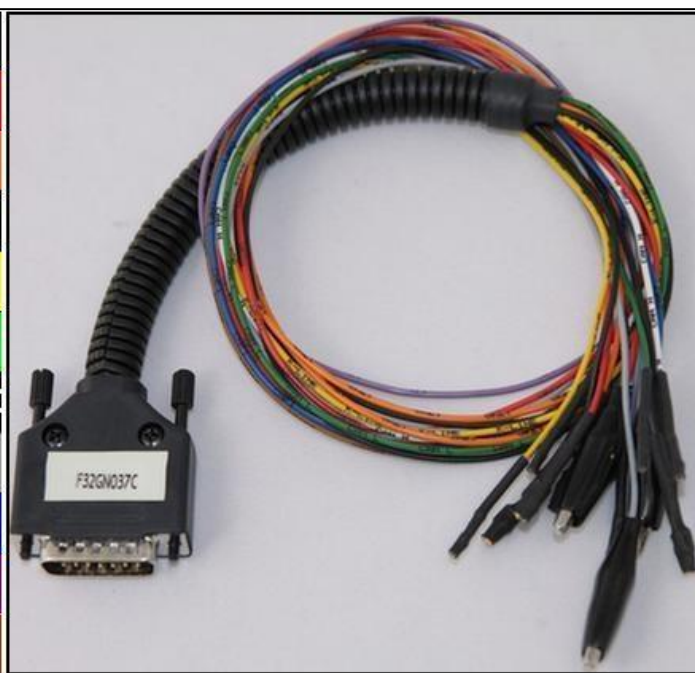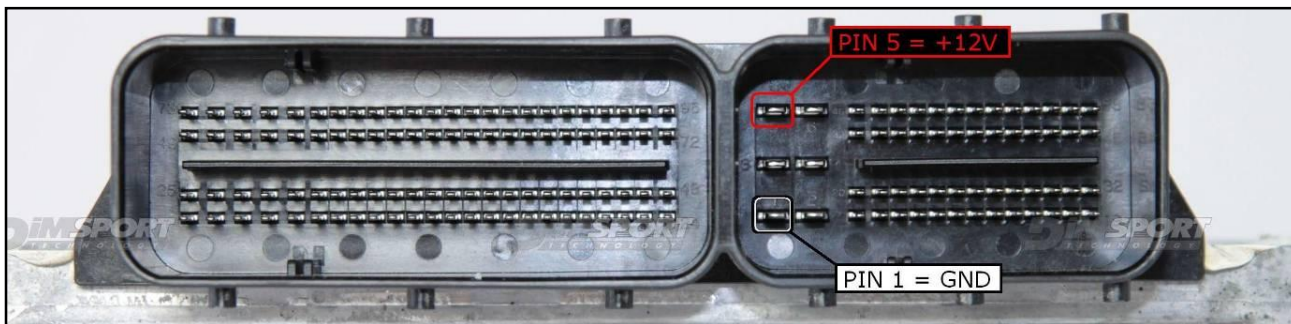**ECU CONNECTOR****WARNING :**


on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:

For the READING procedure use the FLAT cable F34NTF53

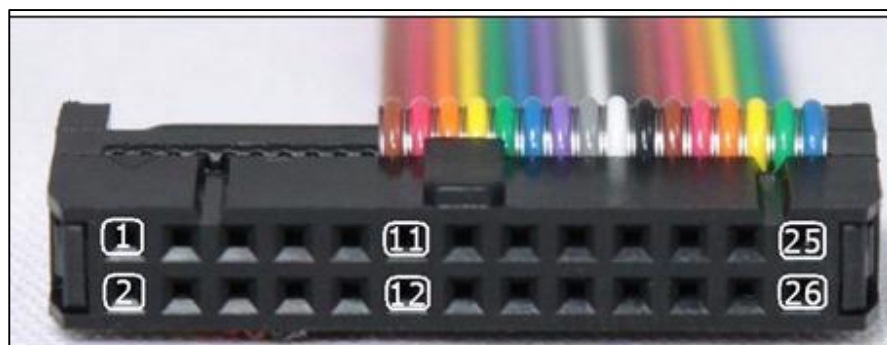


Pin	Colore Colour
11	Non usato Not used
12	Non usato Not used
13	Non usato Not used
14	Non usato Not used
15	Non usato Not used
16	Blu Blue
17	Viola Violet
18	Grigio Grey
19	Bianco White
20	Nero Black
21	Marrone Brown
22	Rosso Red
23	Arancio Orange
24	Giallo Yellow
25	Verde Green
26	Non usato Not used

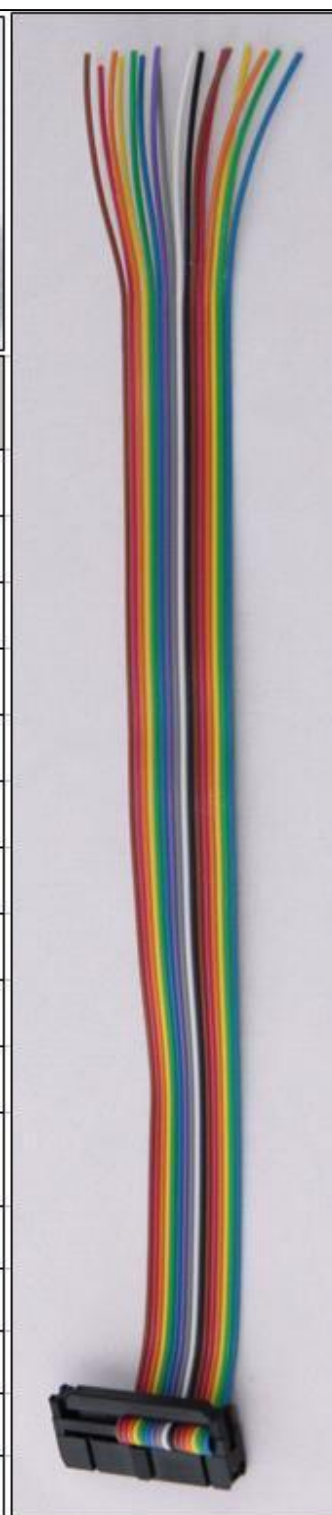

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use fine grit glass-paper smoothing by gentle pressure the connection lay by pins.

WARNING: for a correct reading procedure it is required a little short circuit (bridge) as shown in the picture here below. Such bridge is used for the READING ONLY, remove it after the reading procedure.

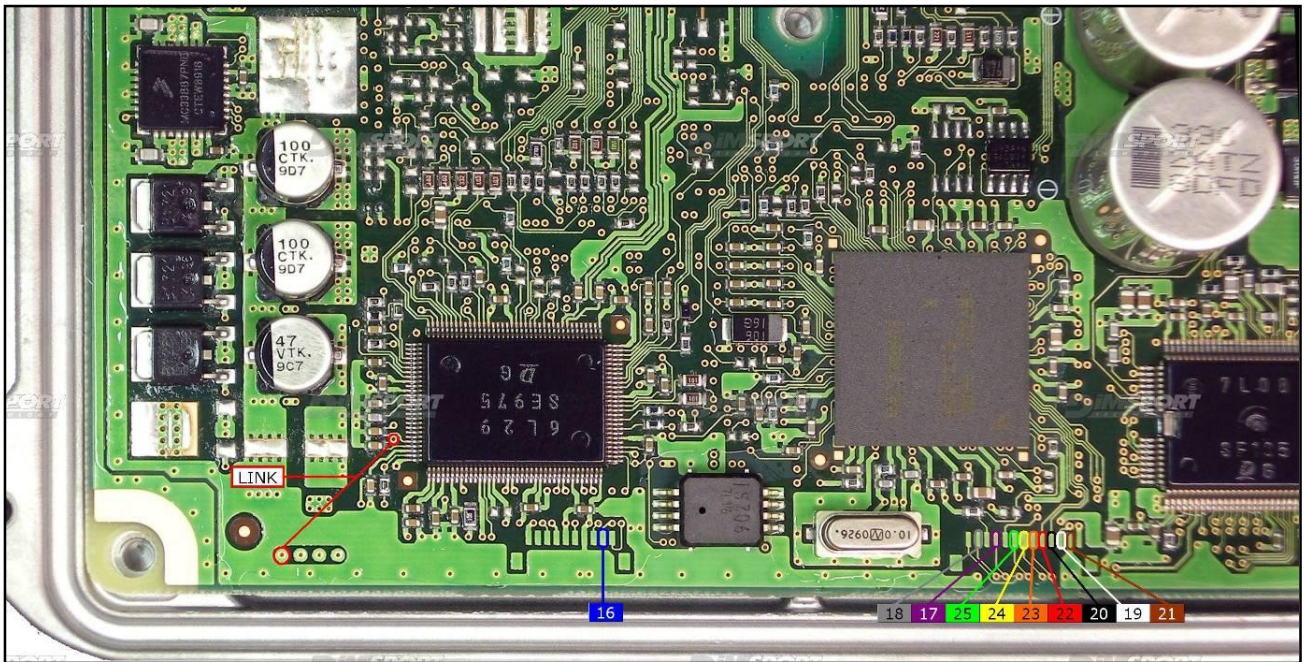


DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51



			
Pin		Colore	Colour
1		Marrone	Brown
2		Non usato	Not used
3		Non usato	Not used
4		Giallo	Yellow
5		Verde	Green
6		Blu	Blue
7		Viola	Violet
8		Grigio	Grey
9		Bianco	White
10		Nero	Black

For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use fine grit glass-paper smoothing by gentle pressure the connection lay by pins.

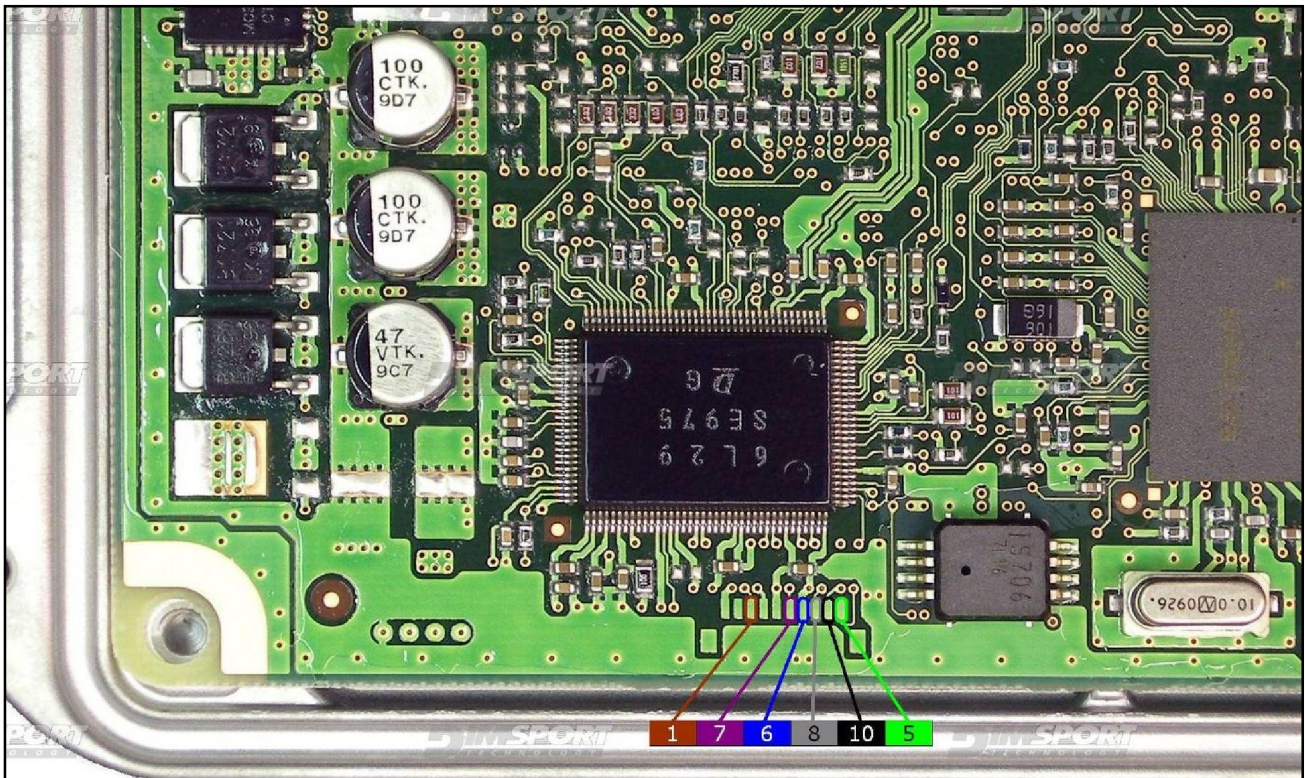


METAL POSITIONING FRAME CONNECTION – ECU READING

For the metal positioning frame connection is required the F34DM014 adapter.

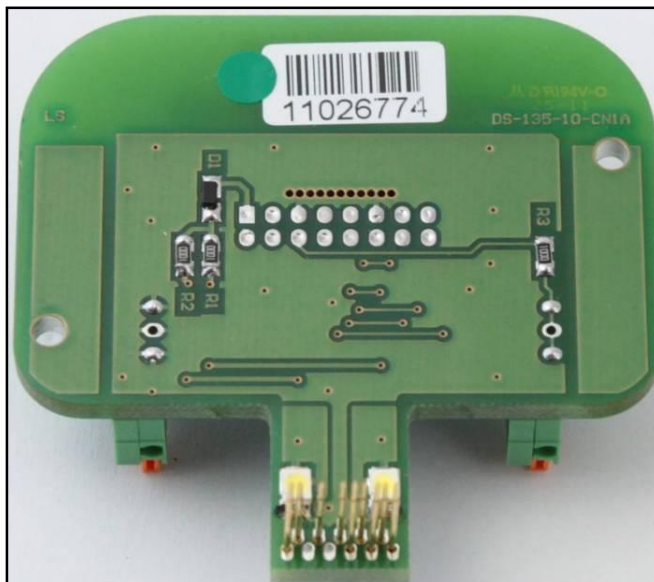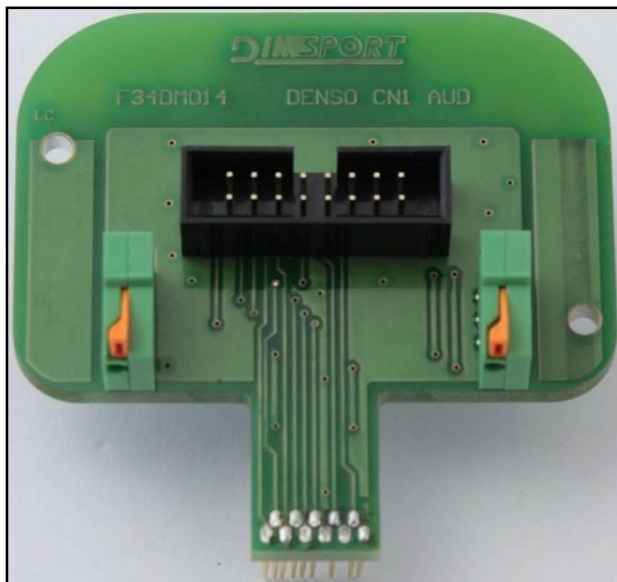

WARNING: in order to perform the reading it is necessary to make the LINK between the two pads and connect the pin shown in the picture to the CNX and GND connector on the adapter. This connection is required for reading only, remove it at the end of the reading process. Set the adapter checking very well the position of the PIN 1.

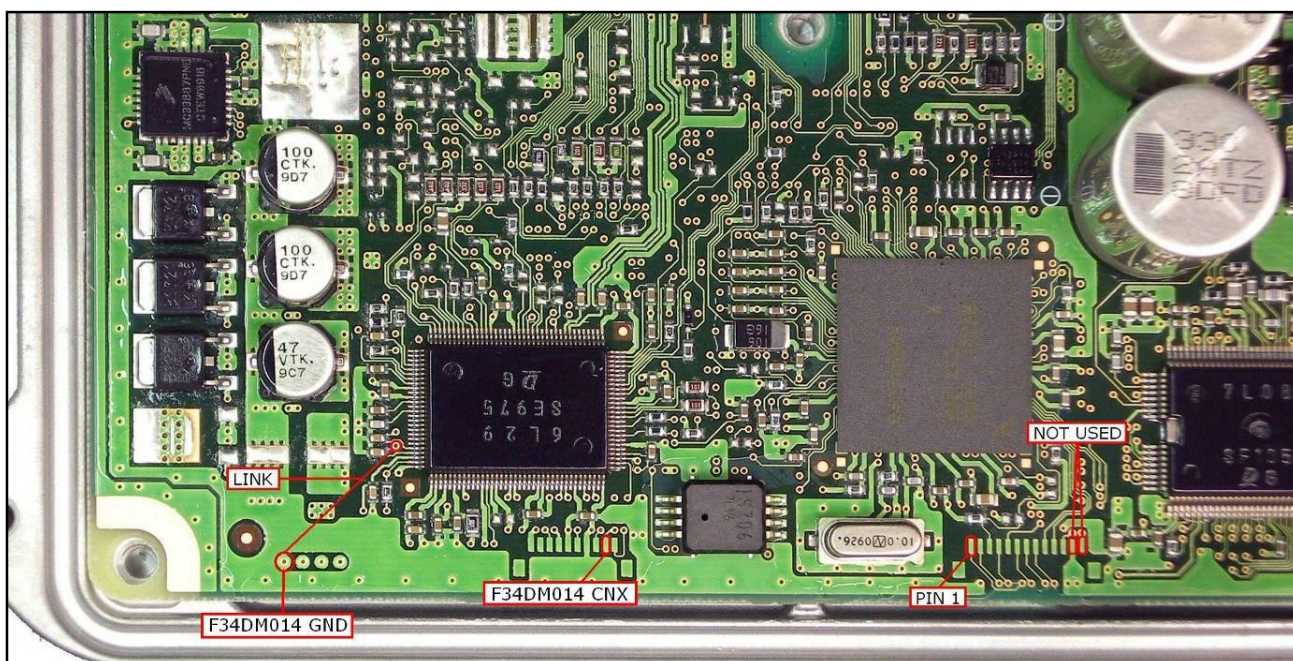



METAL POSITIONING FRAME CONNECTION – ECU WRITING

For the metal positioning frame connection is required the F34DM015 adapter.

