



On this ECU it is possible ONLY the direct connection

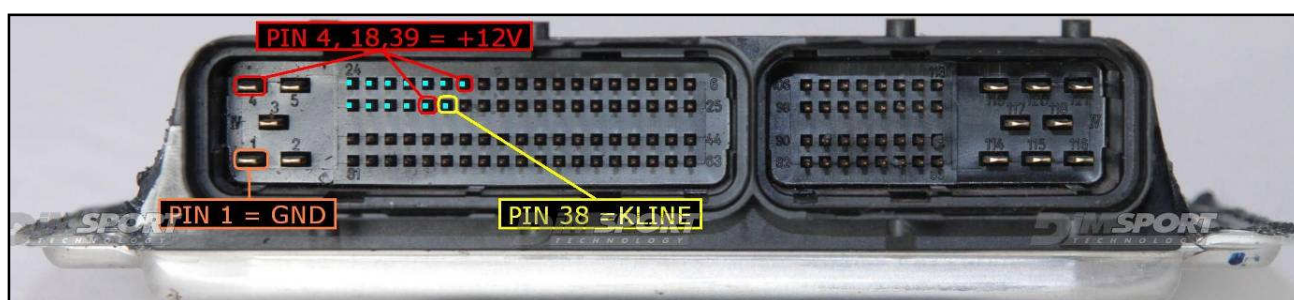

DIRECT CONNECTION

Connect the universal wiring to POL4 & POL5 and to the ECU connector as shown.

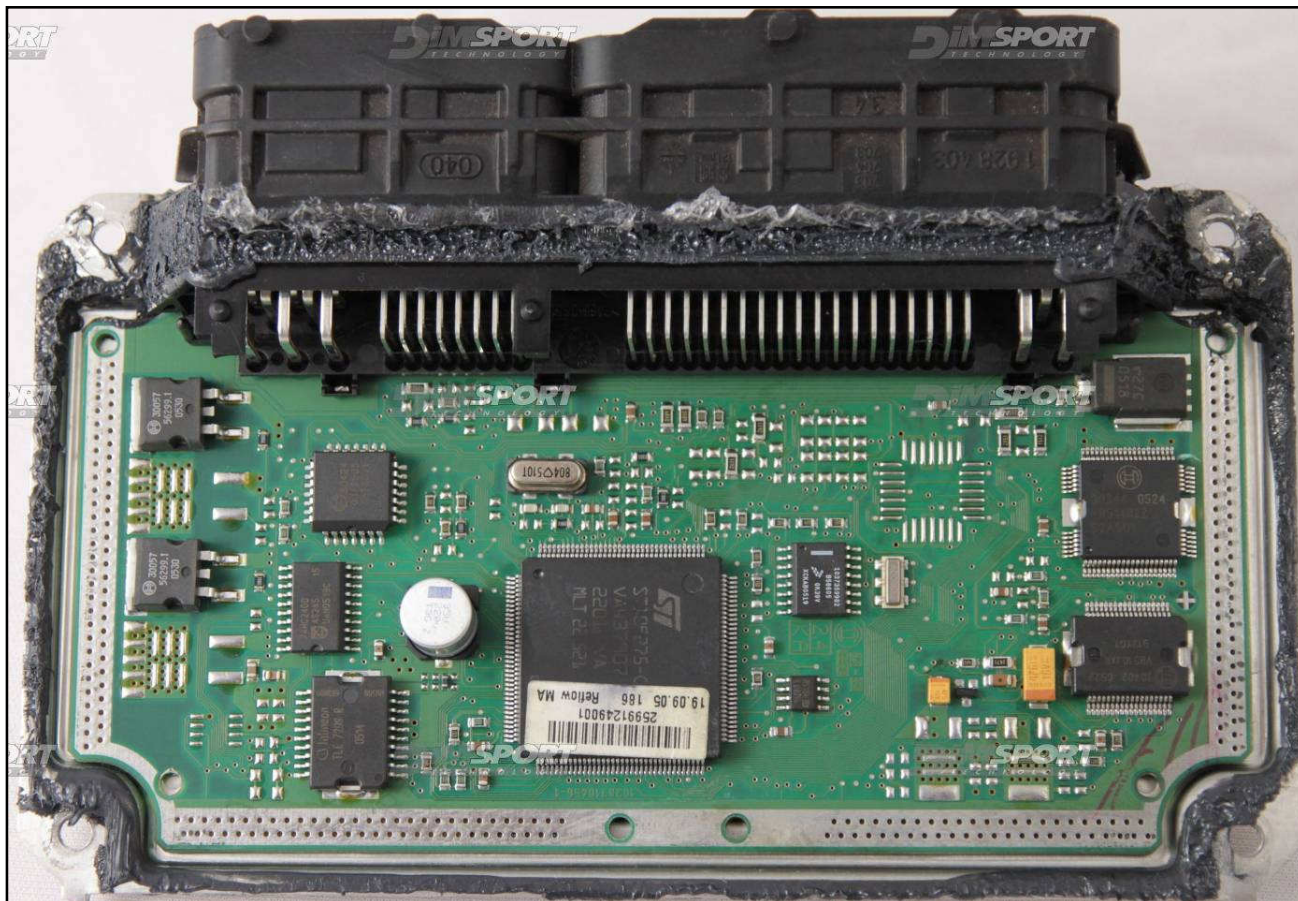