

PLUGIN 898 :NEW TRASDATA

DIRECT CONNECTION – ECU READING/WRITING:

For the READING&WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
MARRONE BROWN		BOOT
BLU BLUE		CNF
NERO BLACK	GIALLO YELLOW	RXD
GRIGIO GREY	VERDE GREEN	TXD
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
NERO BLACK		MASSA GND

