

PLUGIN 882 :NEW TRASDATA

DIRECT CONNECTION – ECU READING/WRITING:

For the READING&WRITING procedure use the cable F34NTA13 directly connected to the ECU. Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
MARRONE BROWN	BOOT	
BLU BLUE	CNF	
NERO BLACK	GIALLO YELLOW	
GRIGIO GREY	VERDE GREEN	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
NERO BLACK	MASSA GND	

