
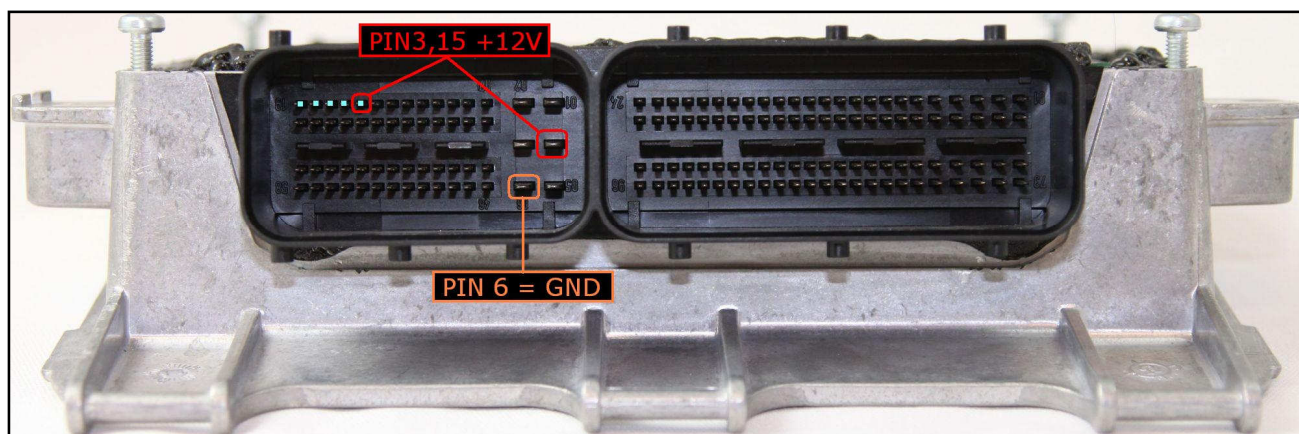


The lay-by pins are located in the middle of the ECU. It is possible only the free wirings connection with the universal adapter F34TD003.

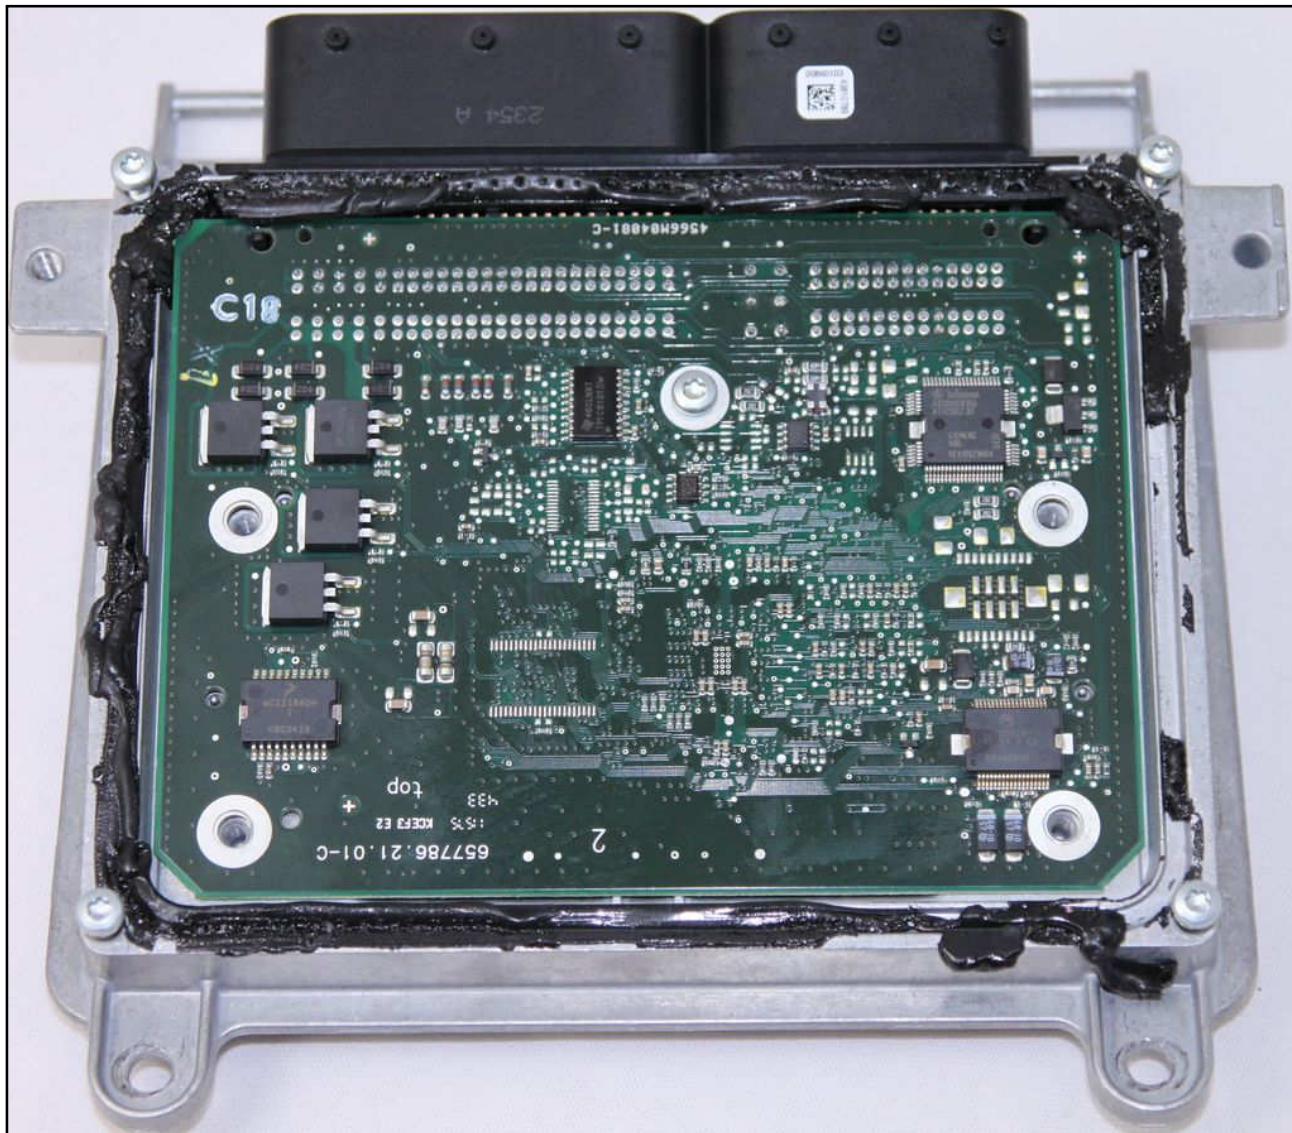

DIRECT CONNECTION to SIEMENS F34TD003