



This ECU is supplied with 2 microprocessors and 2 flash memories. Two different plugins have been created so that, in case of reprogramming of the DIM file, not rendering possible to invert the files. For a better comprehension, we will refer to the ECU placed with the connector on the inferior side. We will name the BDM lay-by pins placed on the right with the letter R (right), while those on the left with the letter L (left).

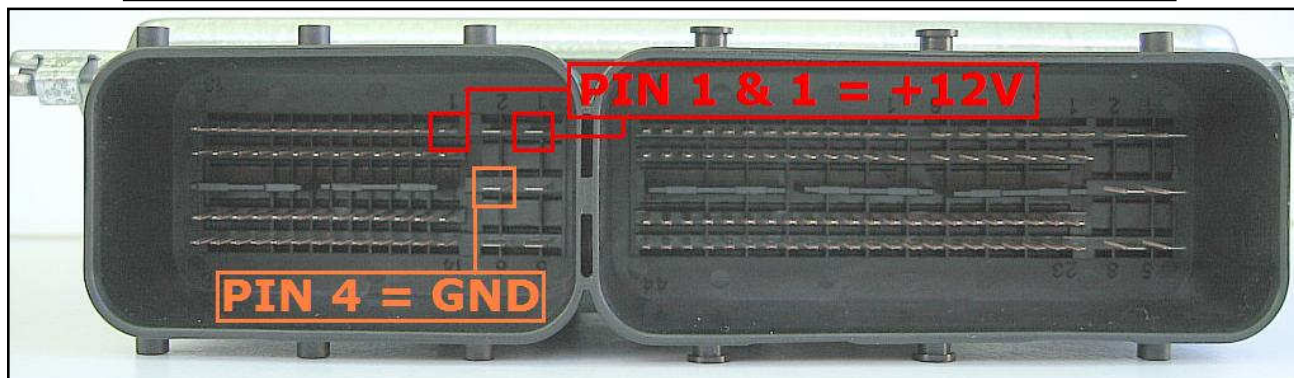

**DIRECT CONNECTION with SIEMENS F34FL006**

IMPORTANT. Since the CHASSIS and SOFTWARE number are contained in the LEFT MICROPROCESSOR we suggest to read out first the LEFTY MEMORY. (PLUGIN 117). Notes SW numbers, this will help you when you eill read out the RIGHT MEMORY and easily find the downloading of the correct corresponding setting file.

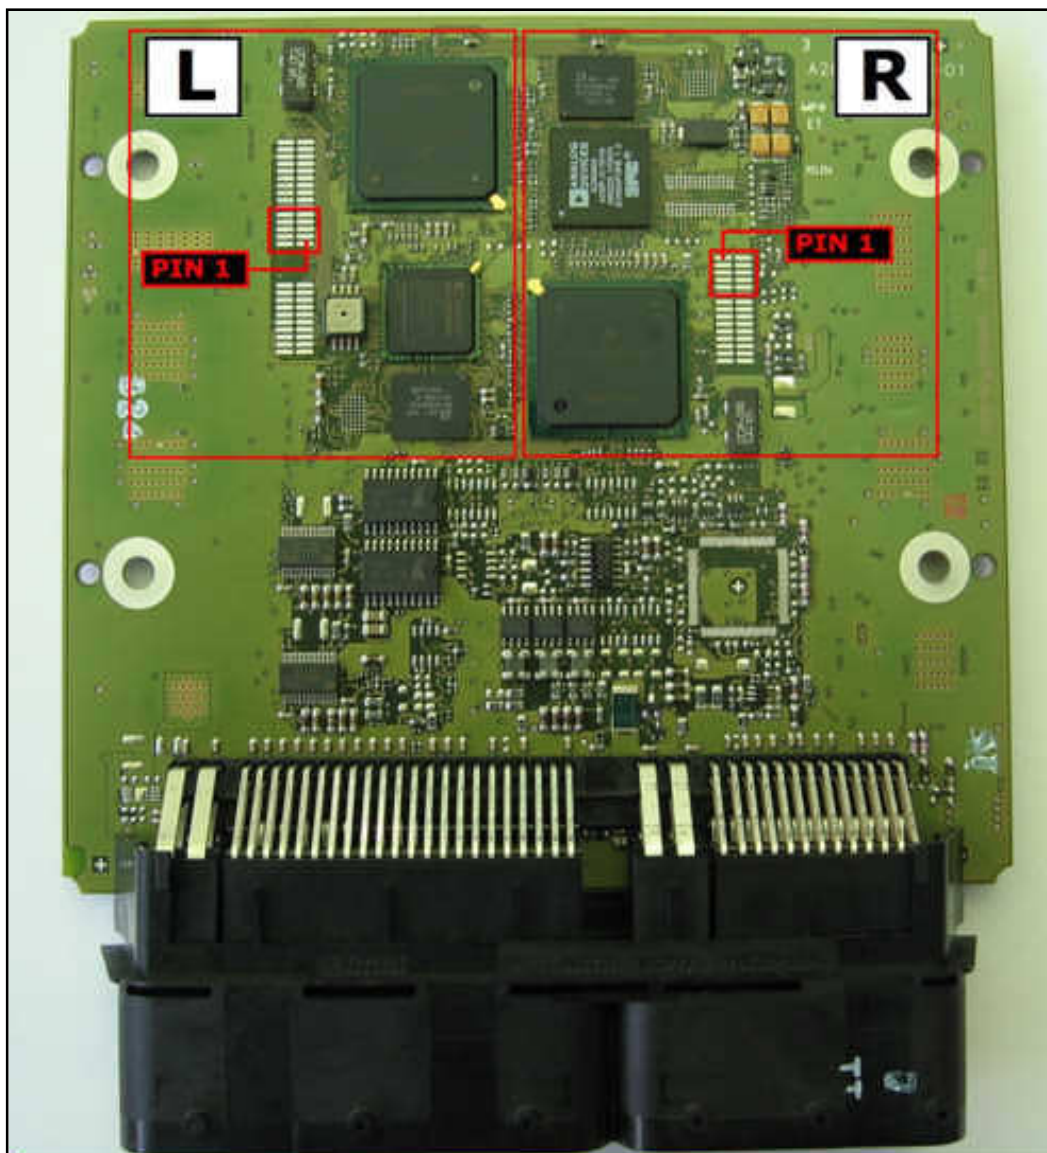