



On this ECU it is possible ONLY the DIRECT CONNECTION
ECU 5DM HW430 ECU CONNECTOR

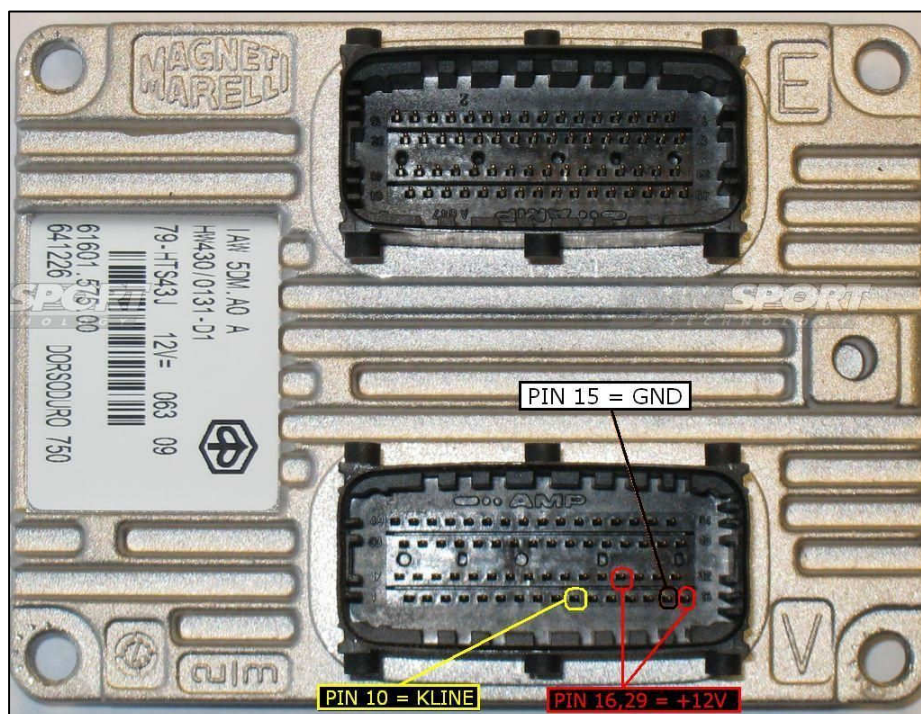

DIRECT CONNECTION

In order to communicate in BOOT mode it is necessary to link the two pads called LINK
 Remove the connection before connecting the ECU back into the motorbike

ECU HW430/0131

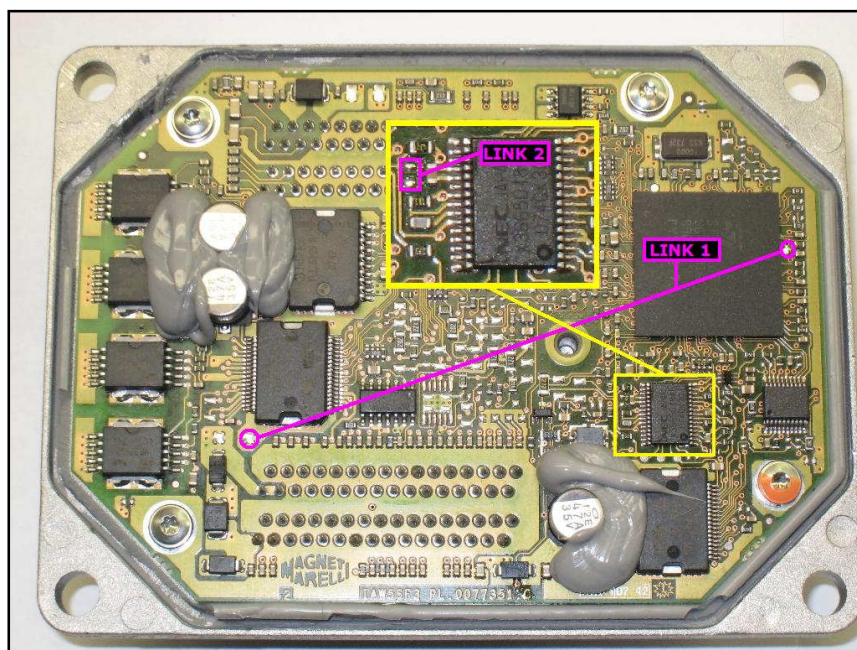

ECU HW430/0132