


PLUGIN 1083:NEW TRASDATA

Cover side




Processor side

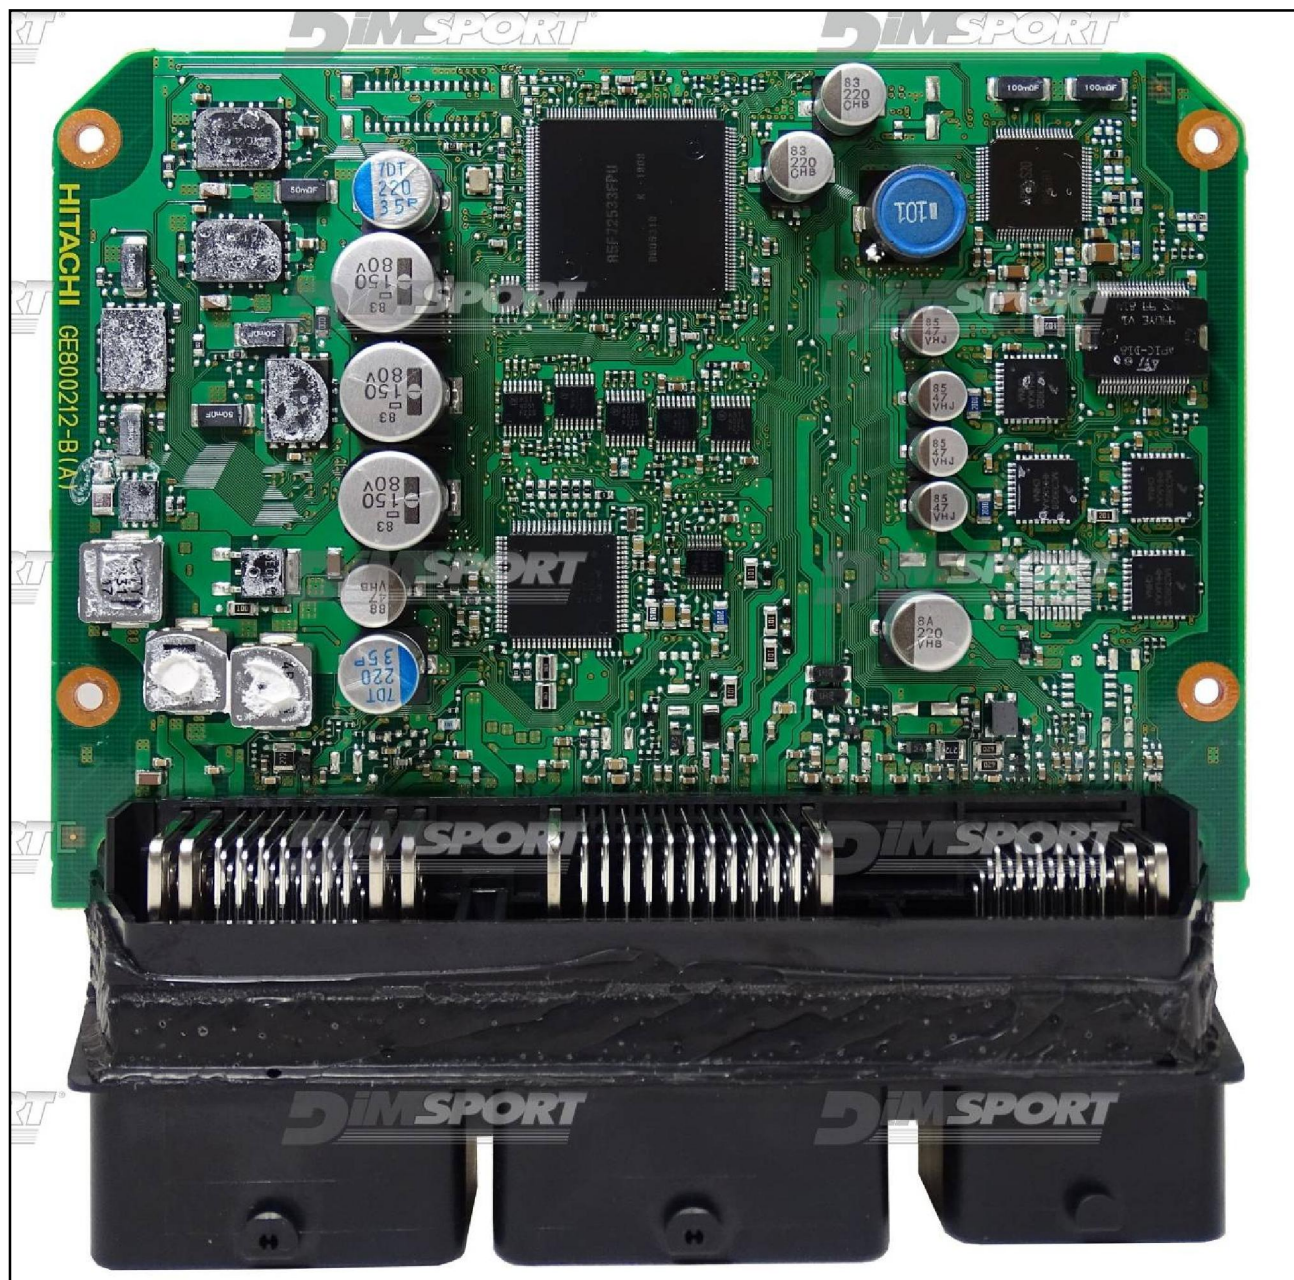

ECU CONNECTOR

For the connection use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

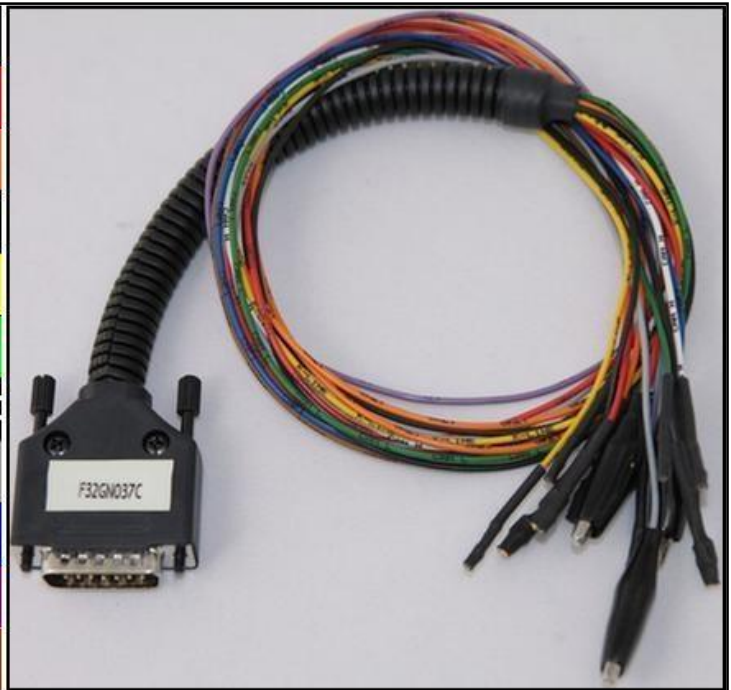


ECU CONNECTOR



J-TAG LOOSE WIRES CONNECTION


For the reading & writing procedures use the FLAT cable F34NTF53

Connect the wires on the pads avoiding any short circuits

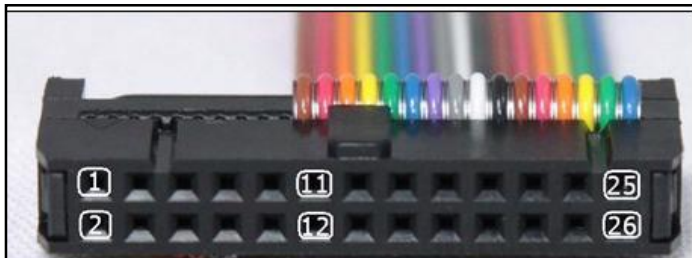			
Pin	Colore Colour		
11	Non usato Not used		
12	Non usato Not used		
13	Non usato Not used		
14	Non usato Not used		
15	Non usato Not used		
16	Blu Blue		
17	Viola Violet		
18	Grigio Grey		
19	Bianco White		
20	Nero Black		
21	Marrone Brown		
22	Rosso Red		
23	Arancio Orange		
24	Giallo Yellow		
25	Verde Green		
26	Non usato Not used		

WARNING

In order to read&write properly the ECU it is necessary to perform a LINK1, LINK2, LINK3. The LINK can be left after the procedures.

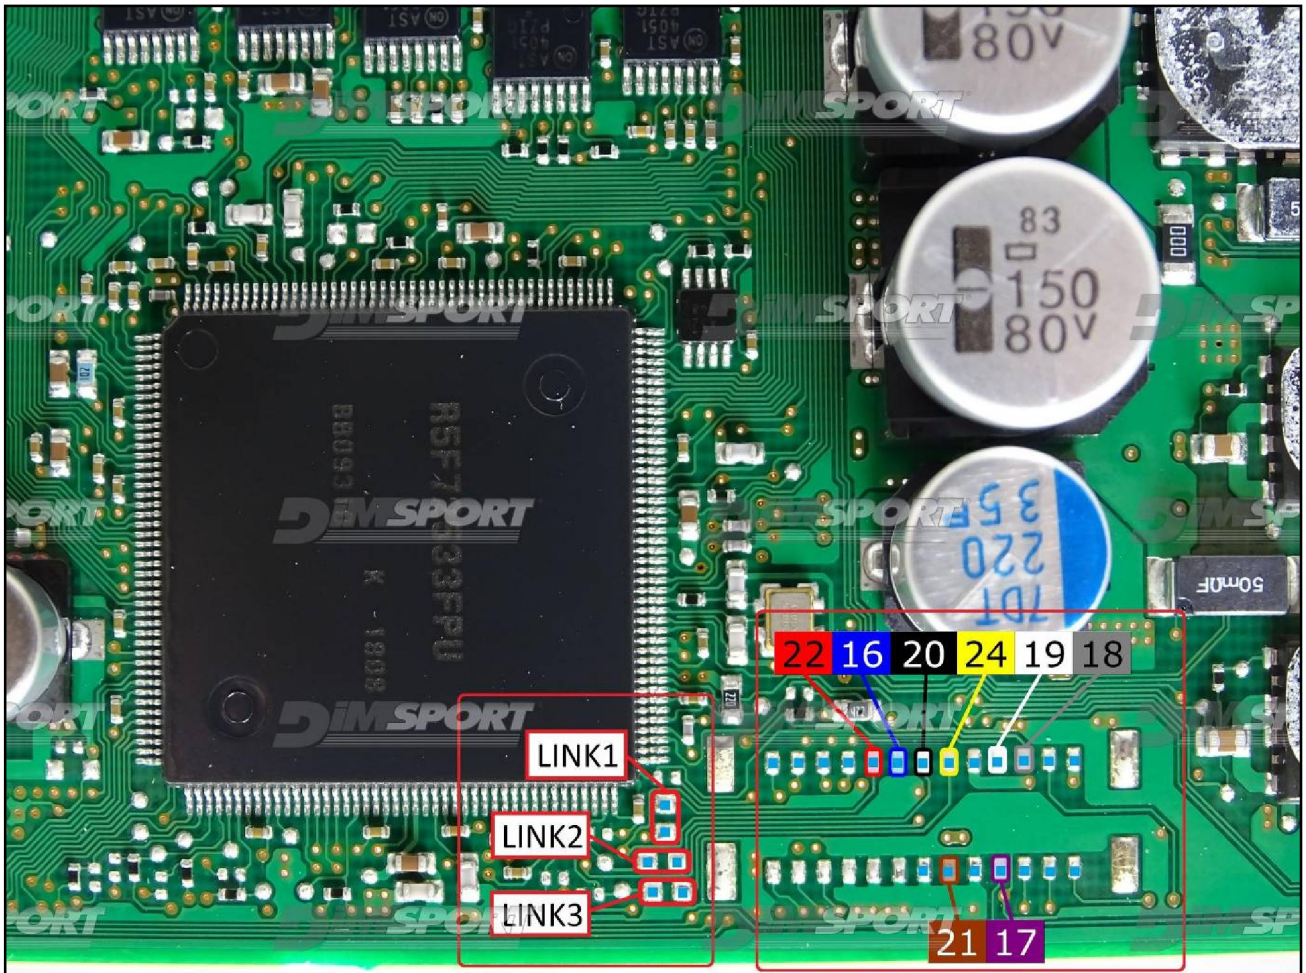

Connect the orange wire as in the following picture.

