



On this ECU it is possible ONLY the DIRECT CONNECTION

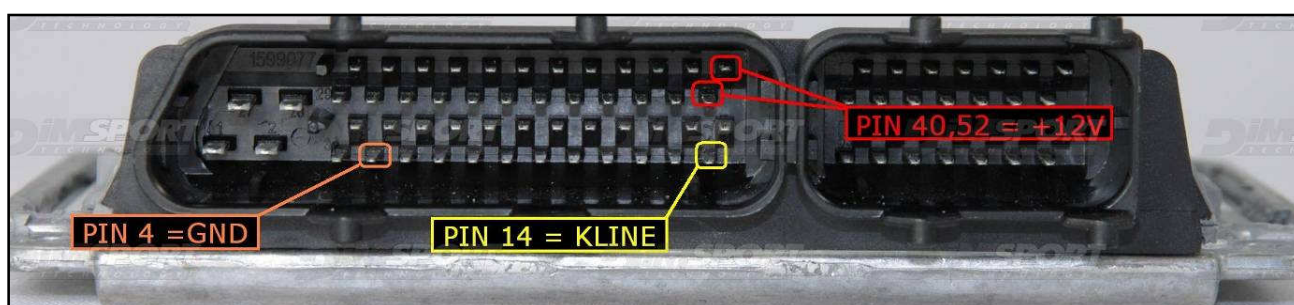

**DIRECT CONNECTION**

In order to communicate with **BOOT** mode it is necessary to **LINK** the two pads shown in the picture. Remove the link before restoring the ECU into the vehicle.

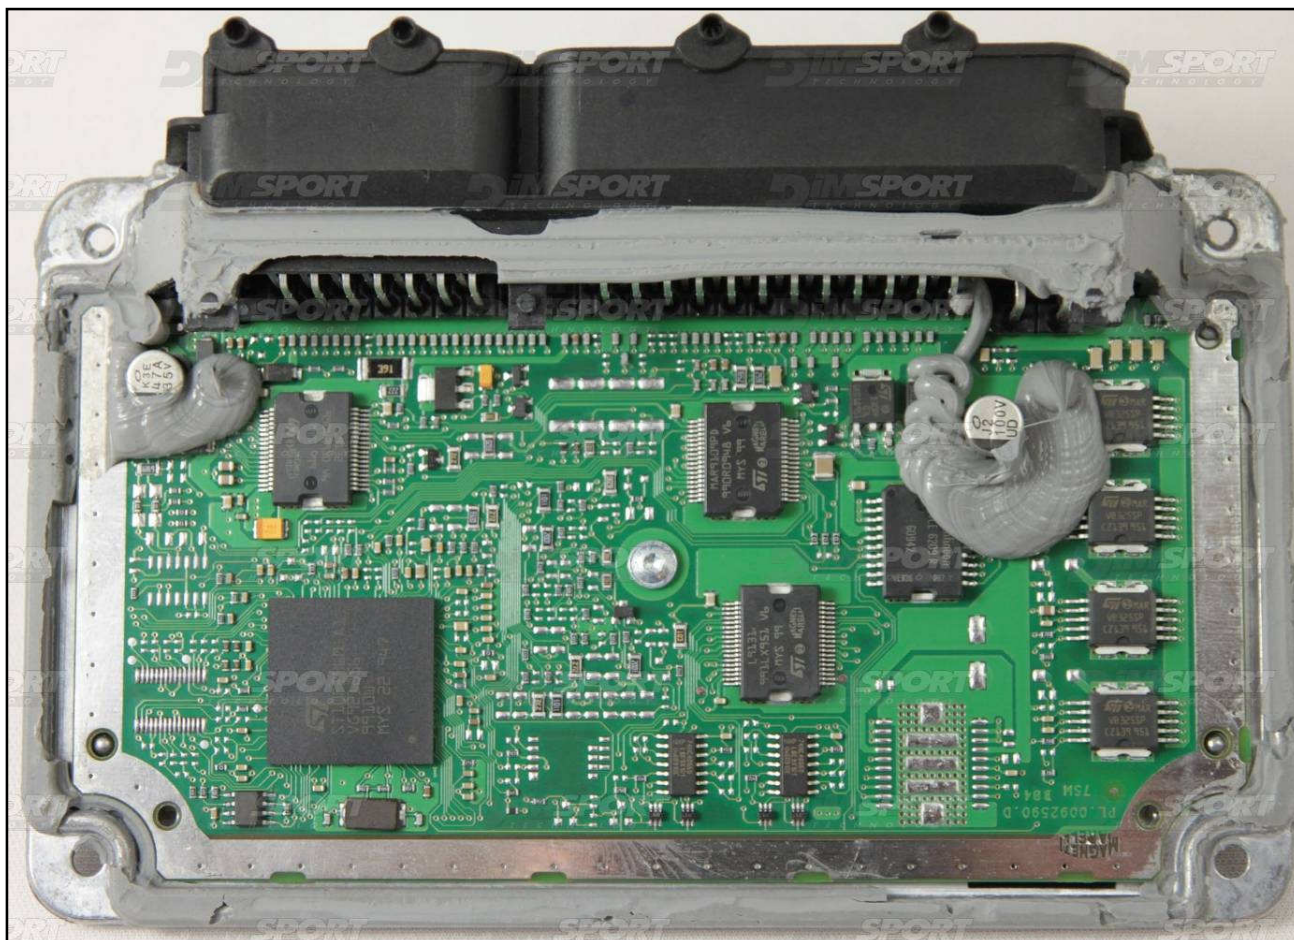