



On this ECU it is possible only the DIRECT CONNECTION

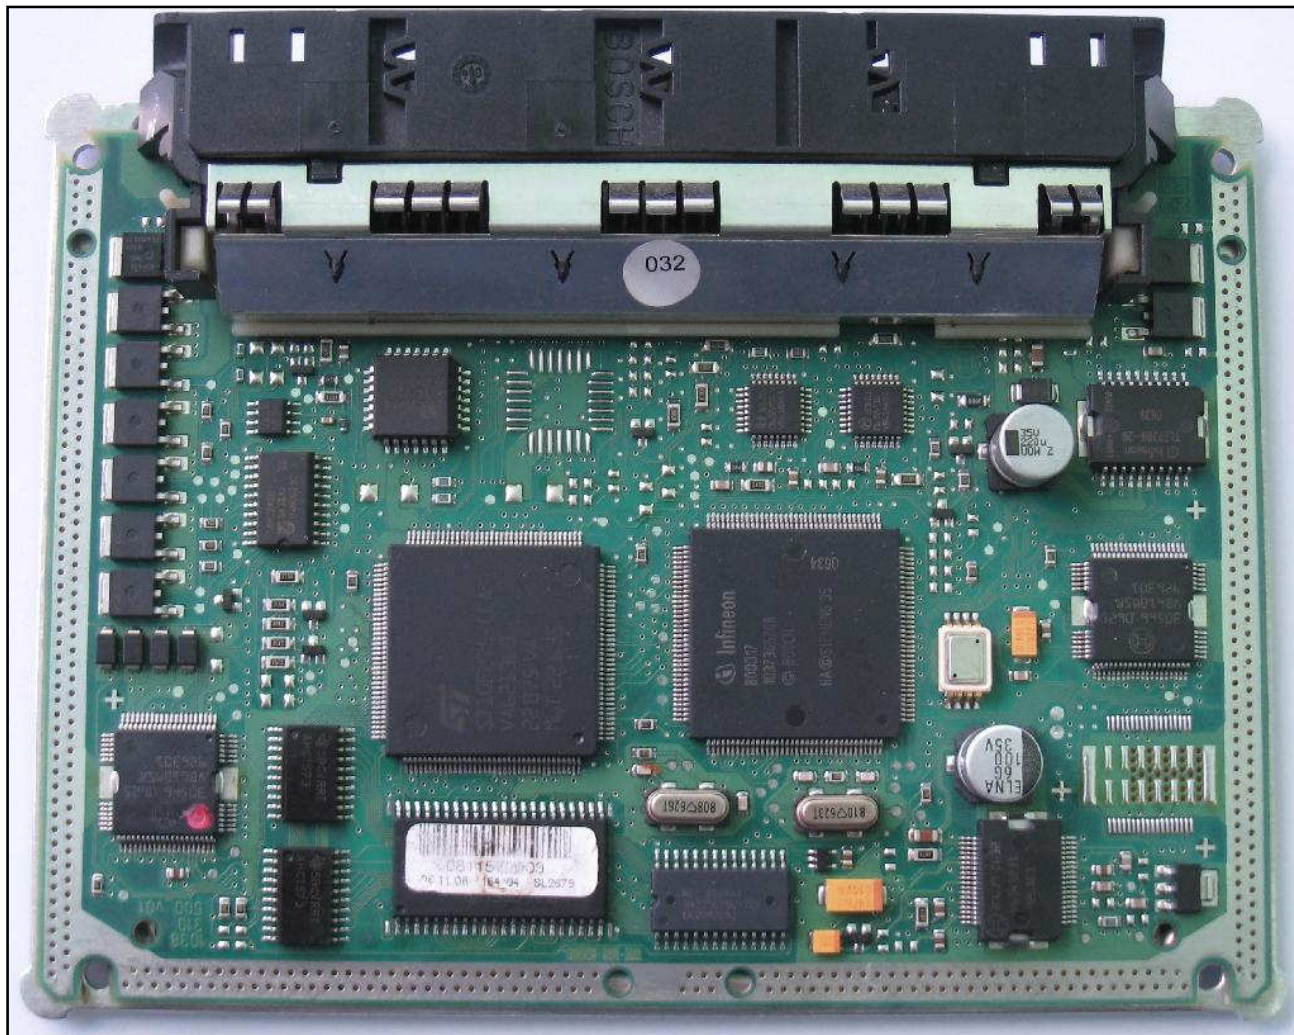

ECU CONNECTOR

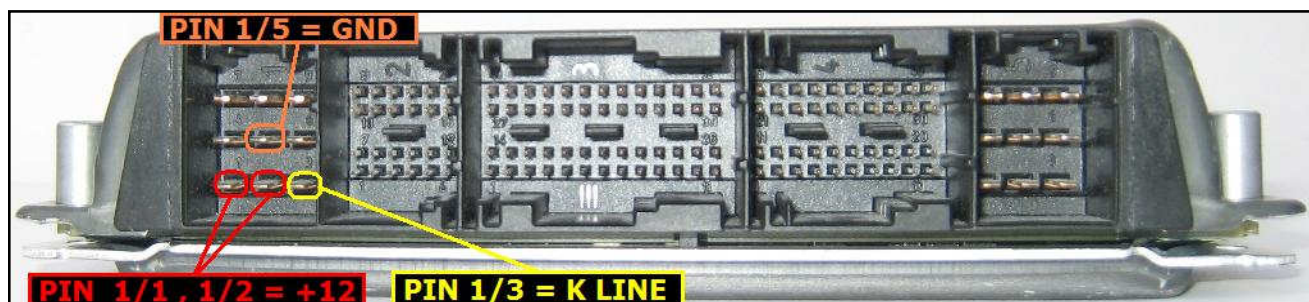

DIRECT CONNECTION

Connect the universal cable to POL4 & POL5 as shown in the picture

