


PLUGIN 146 : maps located in the EXTERNAL FLASH

PLUGIN 166 : USA version maps located in the MICROPROCESSOR

On this ECU it is possible ONLY the DIRECT CONNECTION

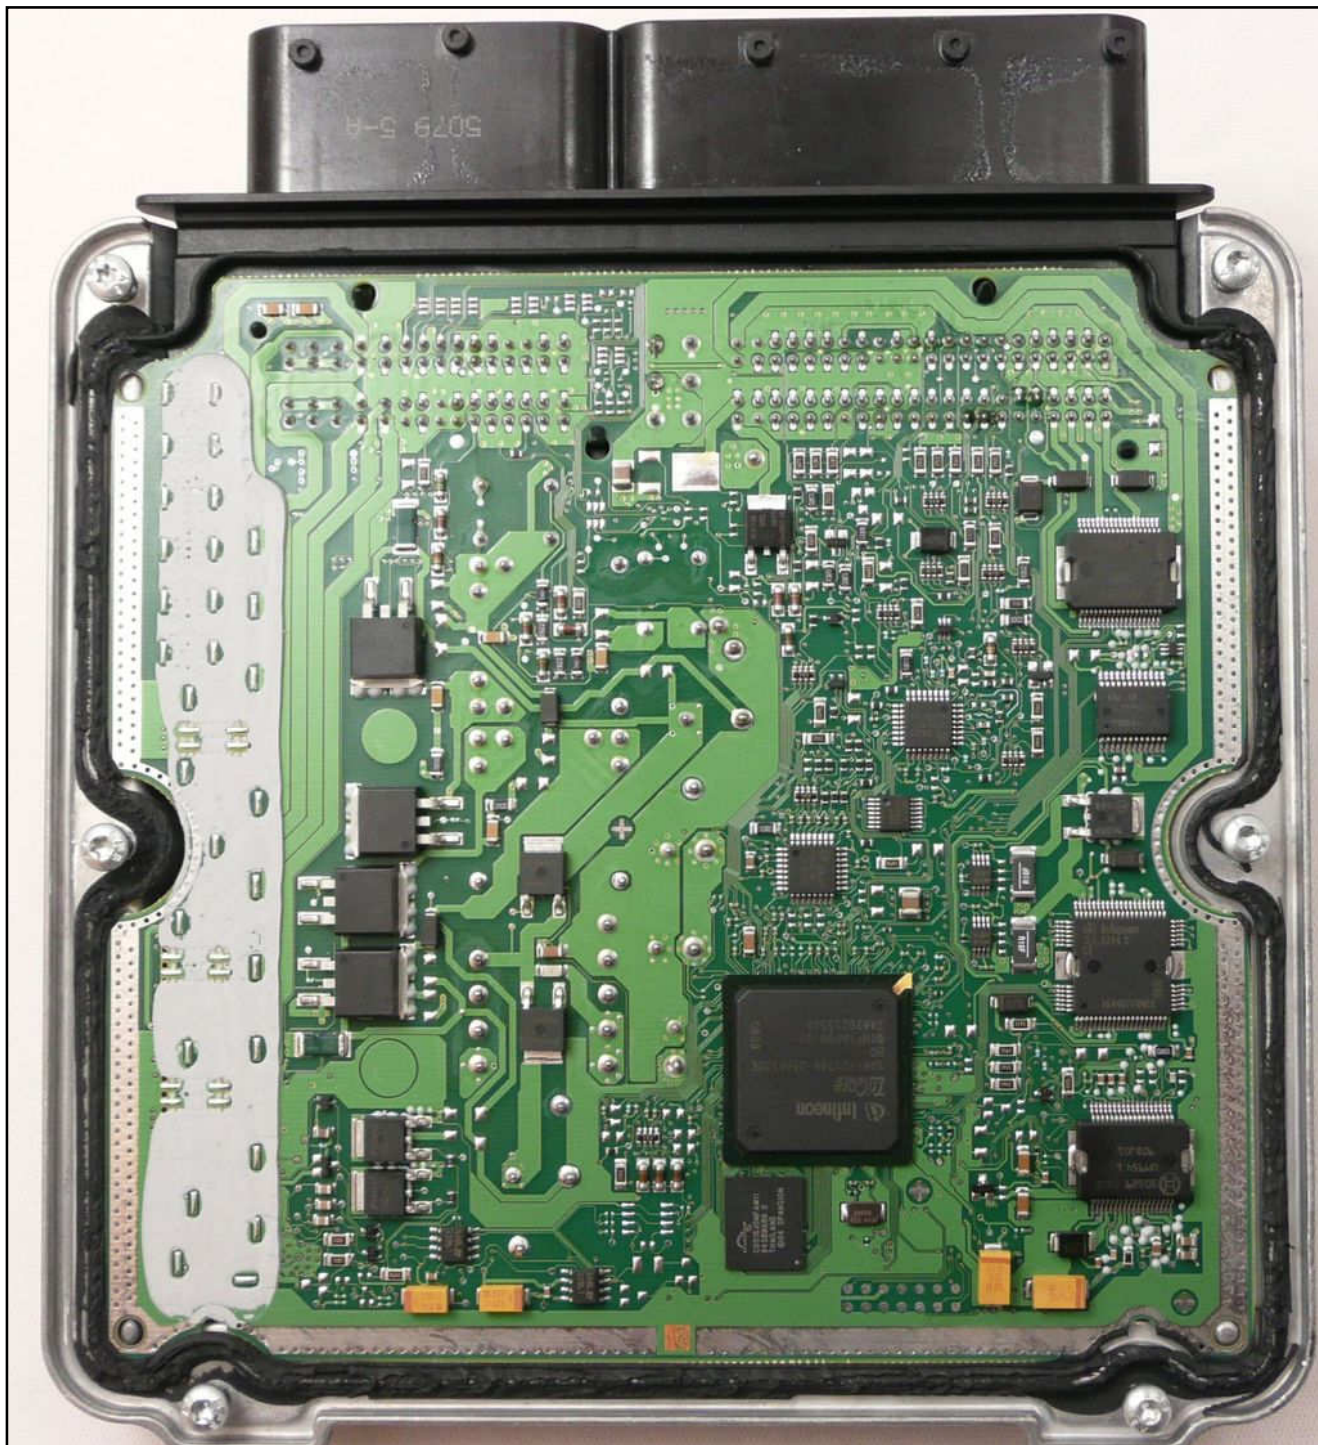

DIRECT CONNECTION