


The lay-by pins are placed in the lower part of the ECU. To get access it is necessary to cut part of the plastic cover.

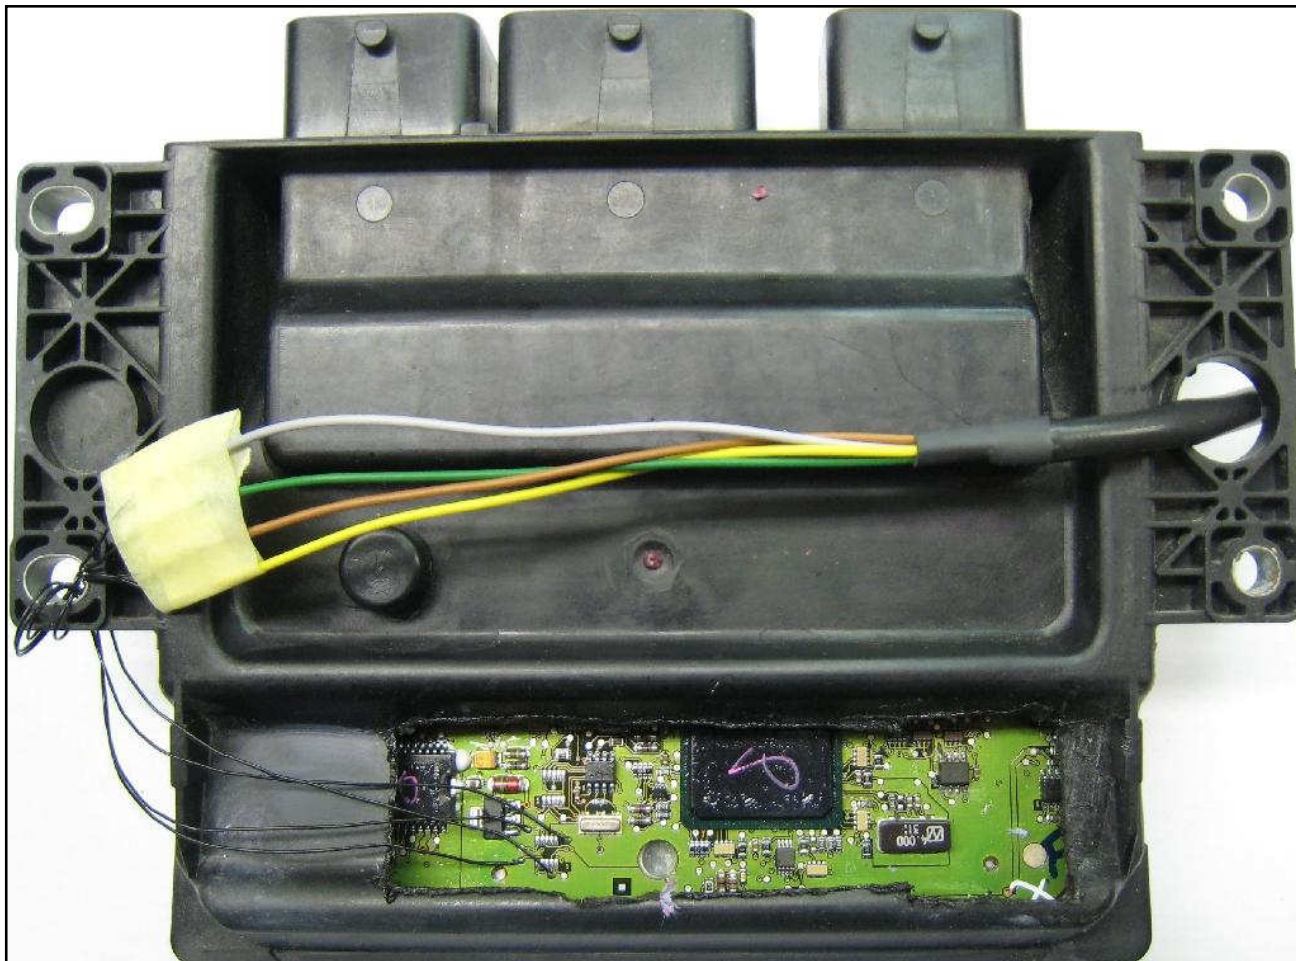

CONNECTIONS



DIRECT CONNECTION

Connect the universal wiring using the BDM connection as shown in the picture

