



The lay-by pins are placed in the lower part of the ECU.

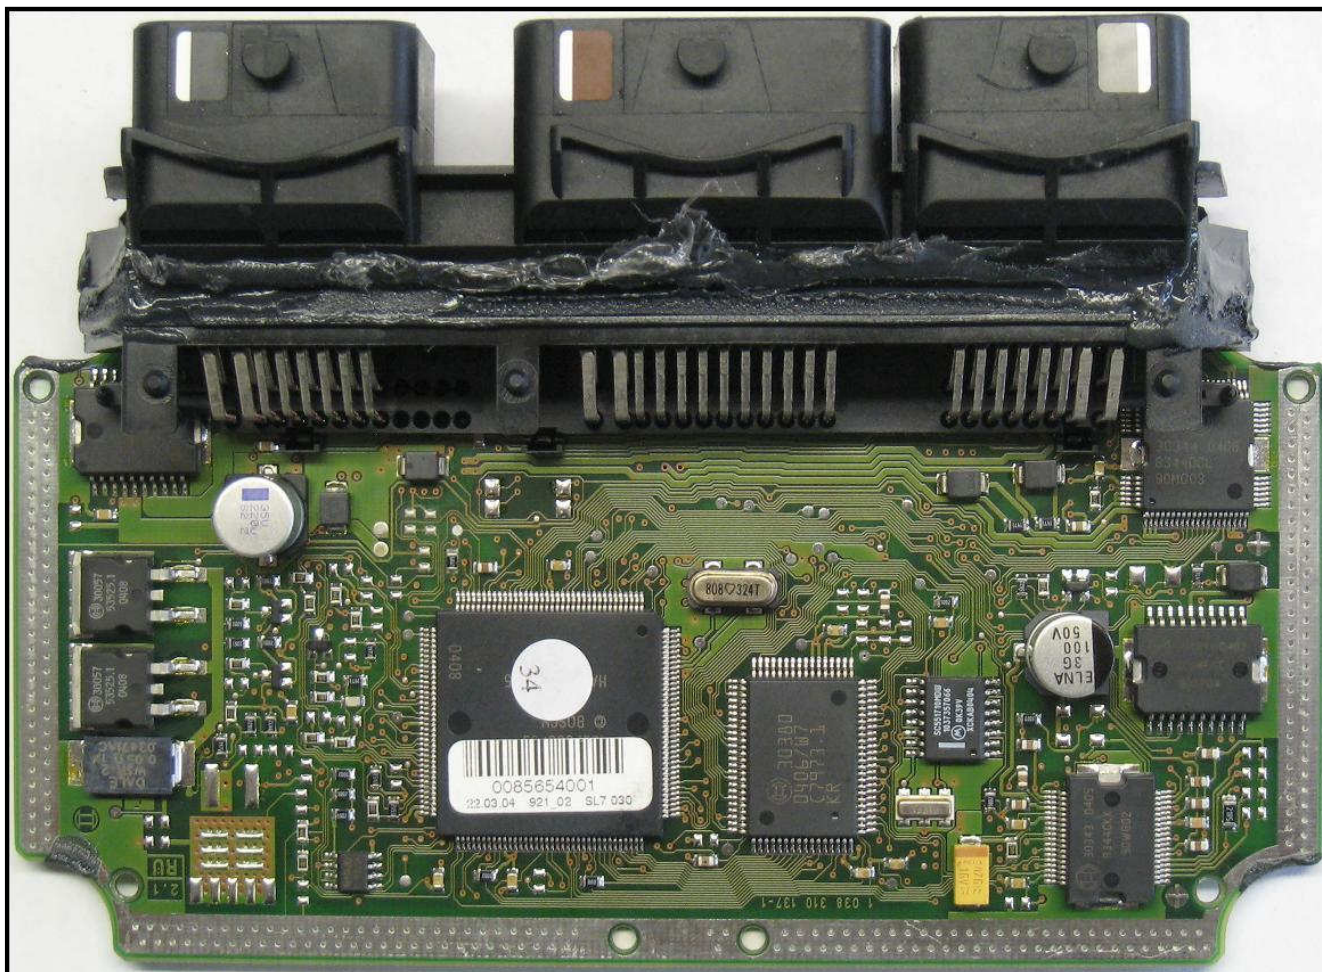

## CONNECTIONS

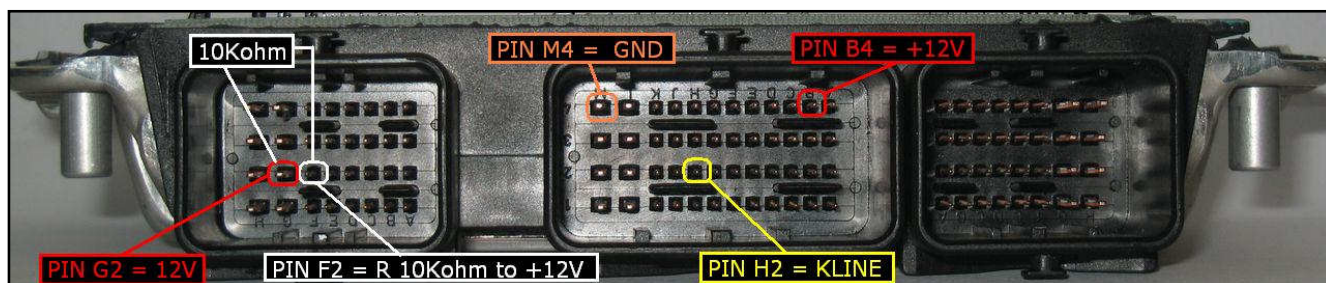

Important : in order to power the ECU in the right way it is necessary to connect the PIN F2 to a 10Kohm resistor and only then to +12V.



**DIRECT CONNECTION**

Connect the universal wiring to POL4 & POL5 and to the connector as described in the handbook

