



On this ECU it is possible only the DIRECT CONNECTION

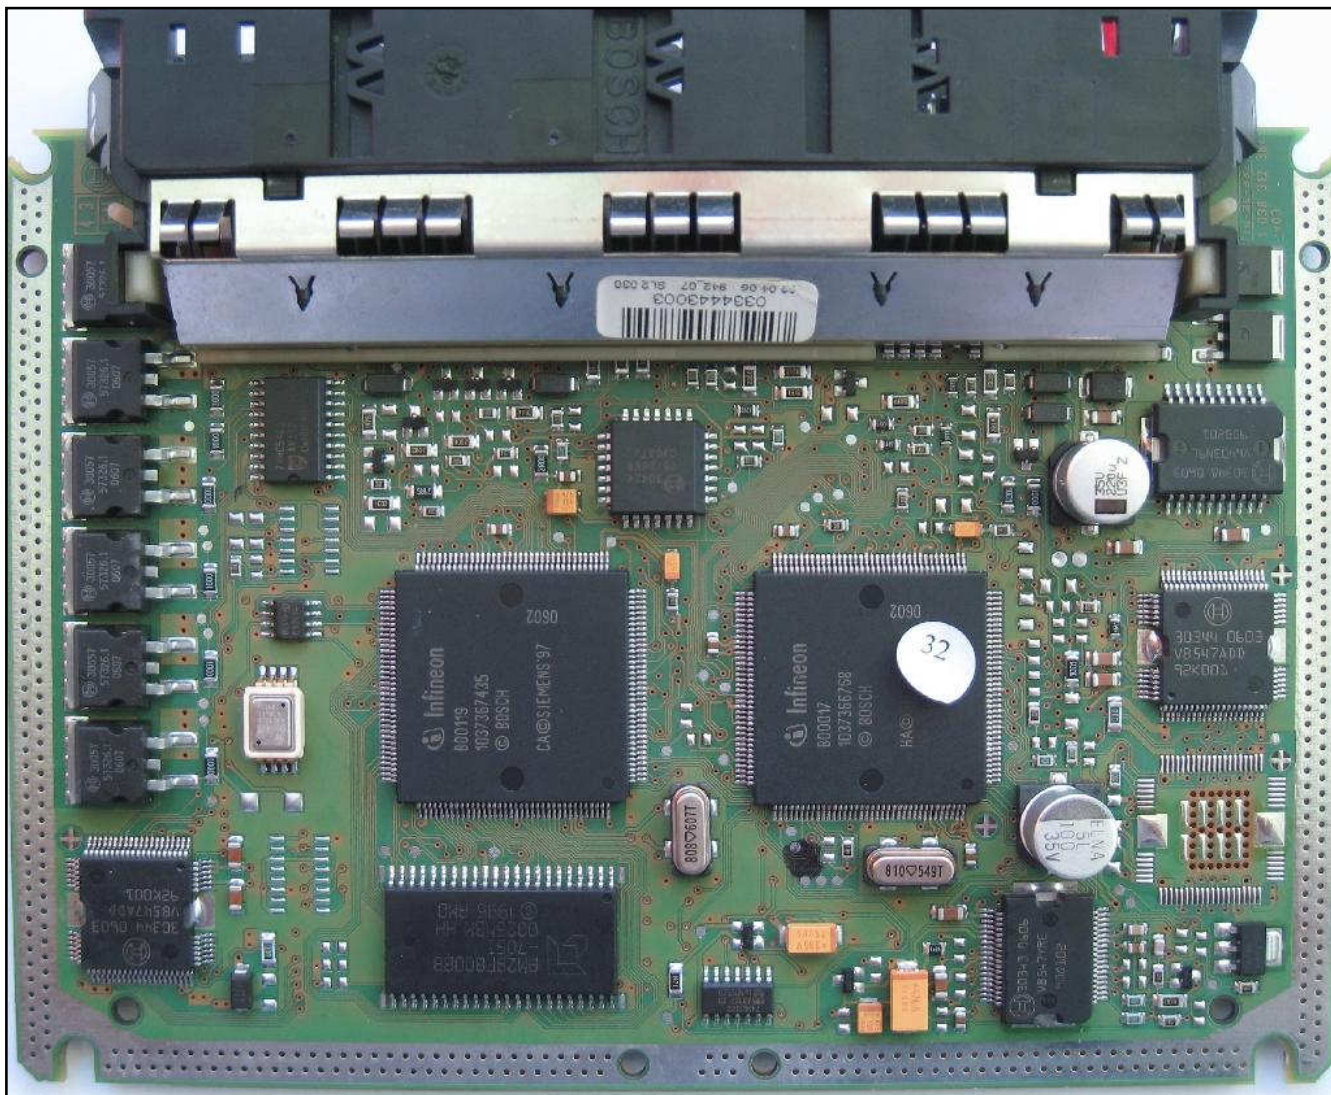

ECU CONNECTOR

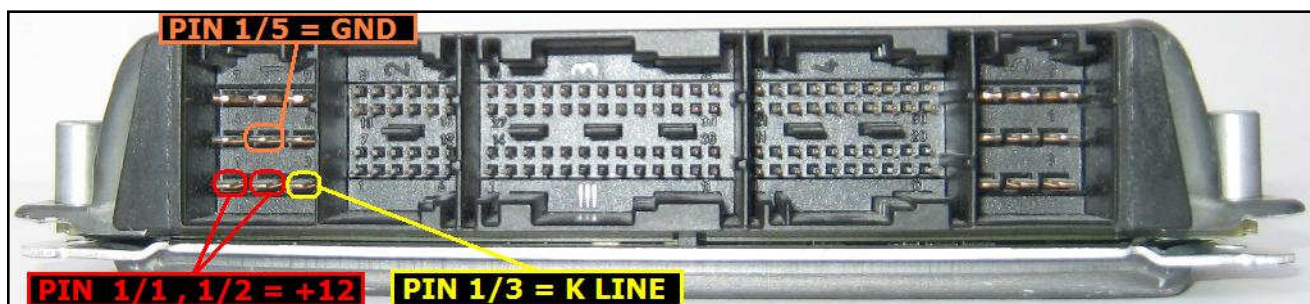

DIRECT CONNECTION

Connect the universal connector to POL4 as shown in the picture

