

ISUZU

BOSCH MD1CS089 (Diesel)



DRIVER: Tool Boot → Bench Mode → MD1/MD1
Benchmode → Aurix TC2xxTP* / Freescale SPC5777
MICRO: Aurix TC299TP

INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L**

