






On this ECU POL4/BOOT pin is located on the lower side of the board, therefore you must detach the lower cover of the ECU too. This operation must be performed very carefully. After detaching the board from both covers reassemble them on the board, tighten the screws back to the covers and test the ECU on the vehicle. Start the vehicle.

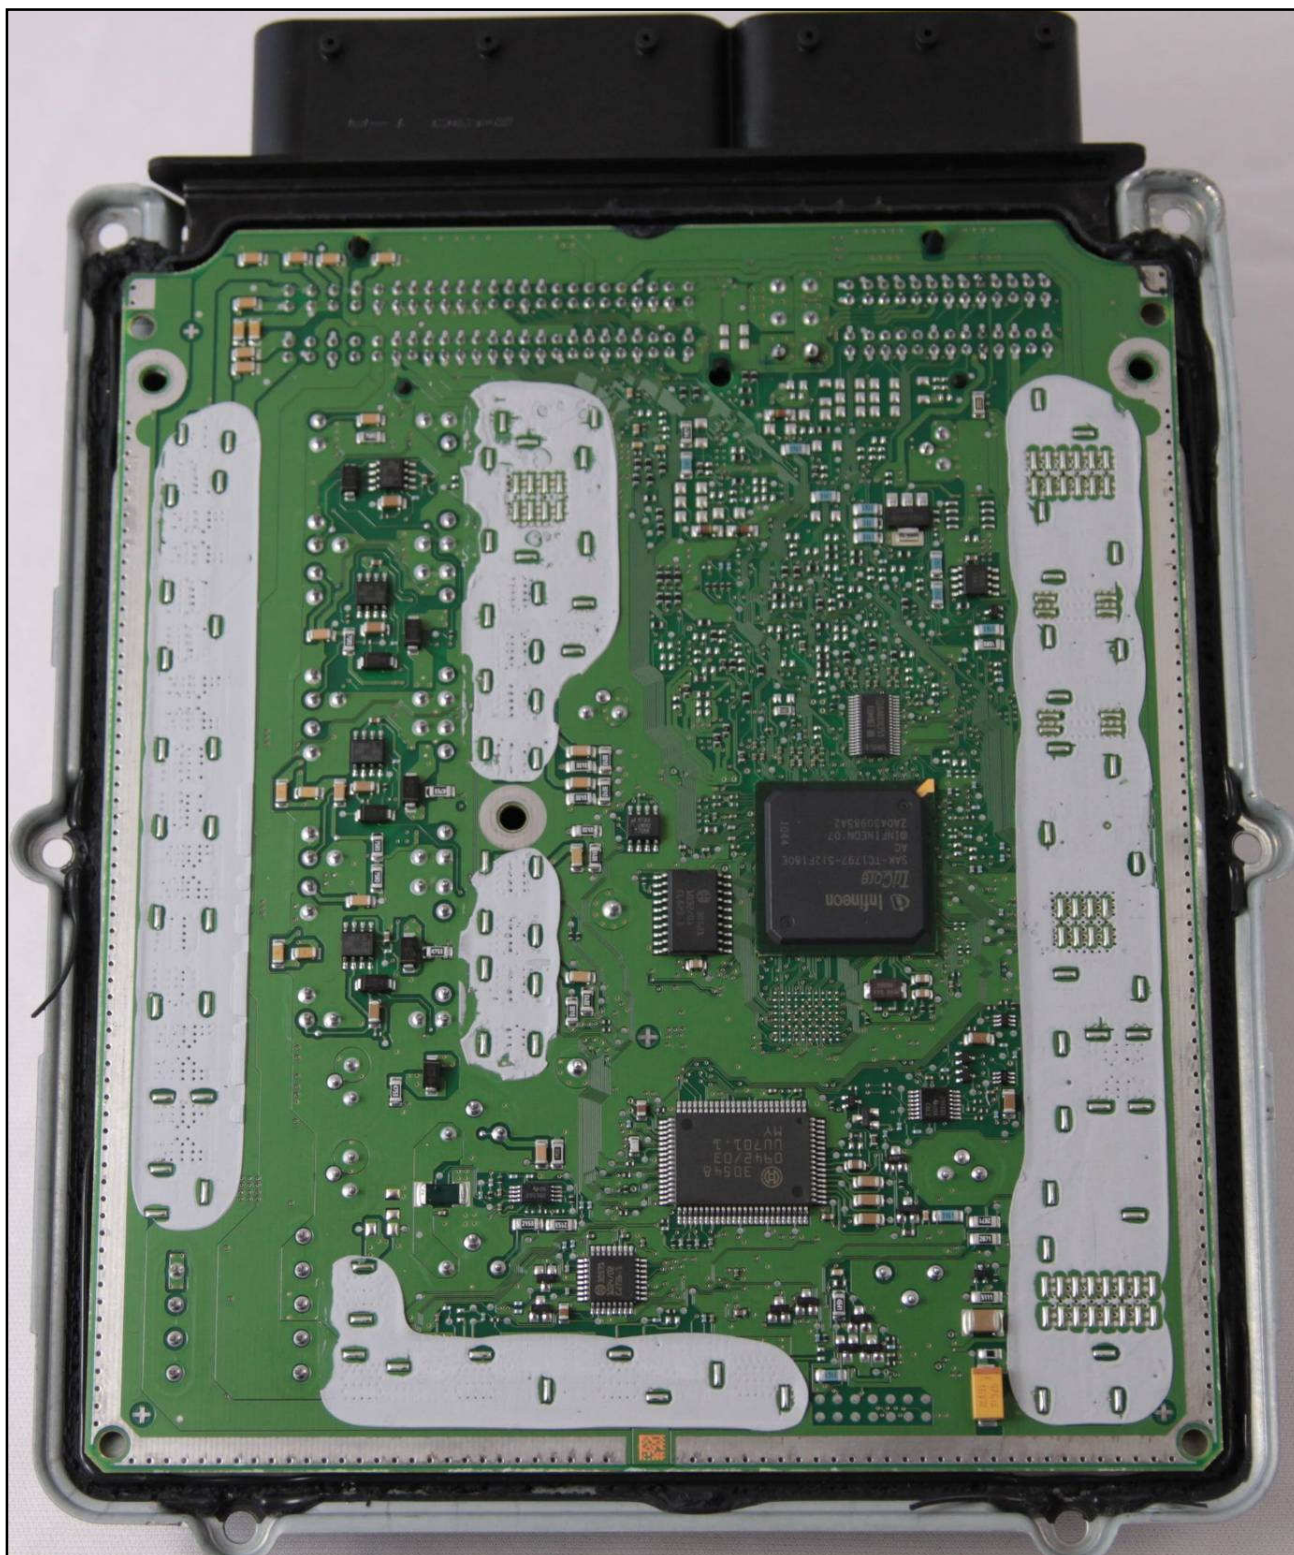

ONLY after checking that the car starts fine and opening procedure has been properly performed you can proceed with the BOOTLOADER connection.

DIRECT CONNECTION

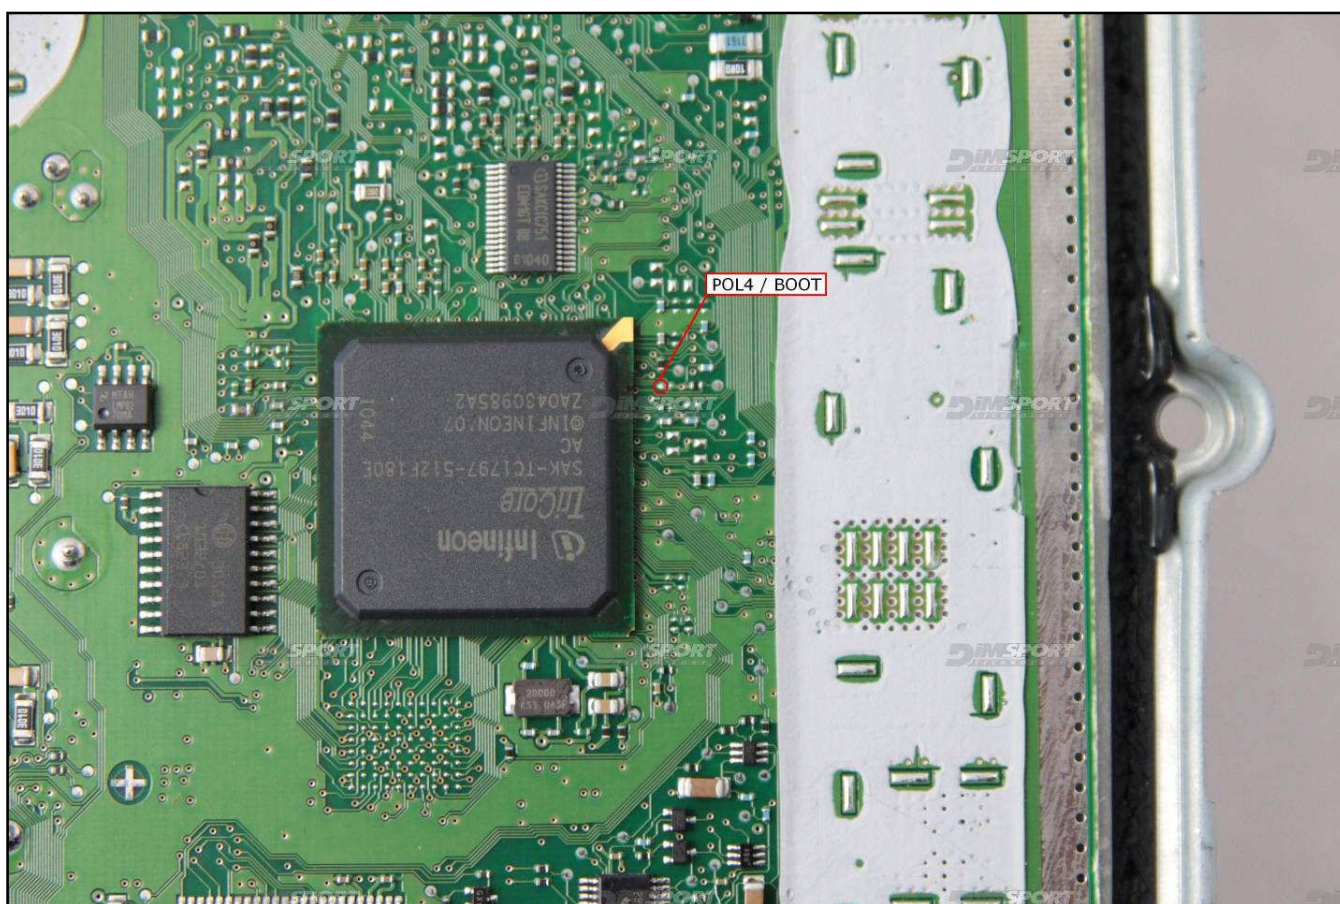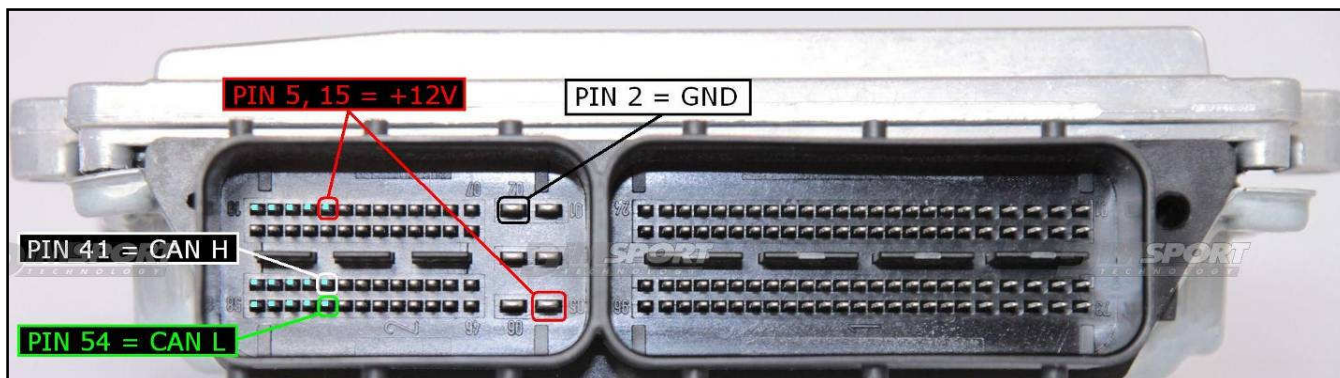

DIMA CONNECTION

Connect the BOOT pin to the N 10 PAD of the lay-by pins.

