



The lay-by pins are placed in the middle of the ECU, left side of the microprocessor



Power pin OUT

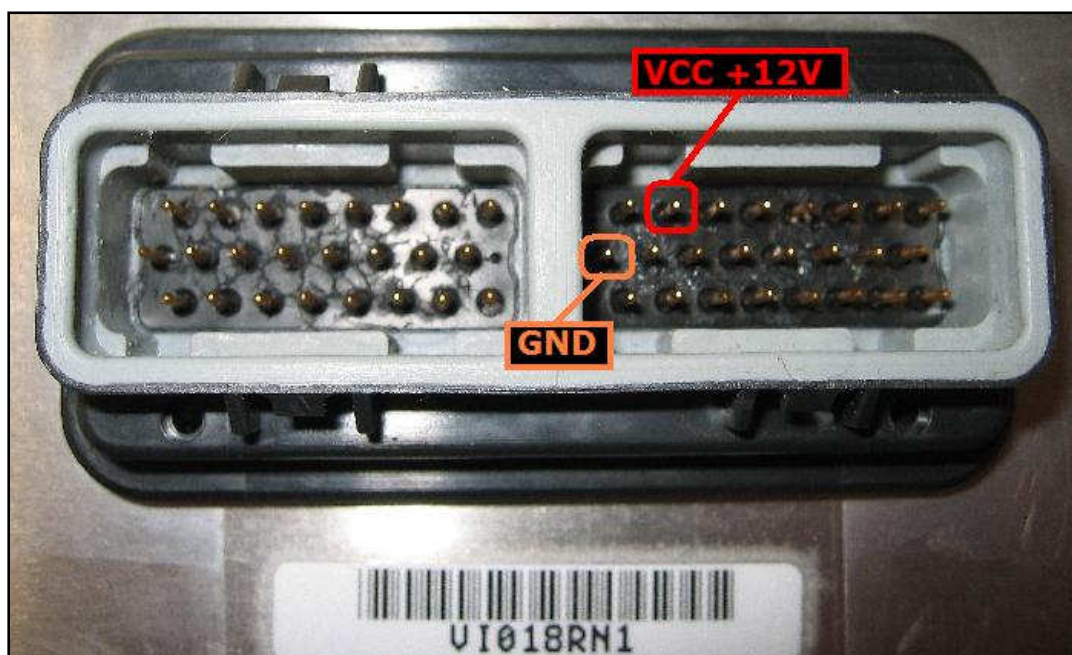

To feed the ECU you have to use the wiring F34FL008 (cable adapter for ECU MERCURY MARINE Motorola ECM555) and connect it to the adapter for external feeding F34AC001

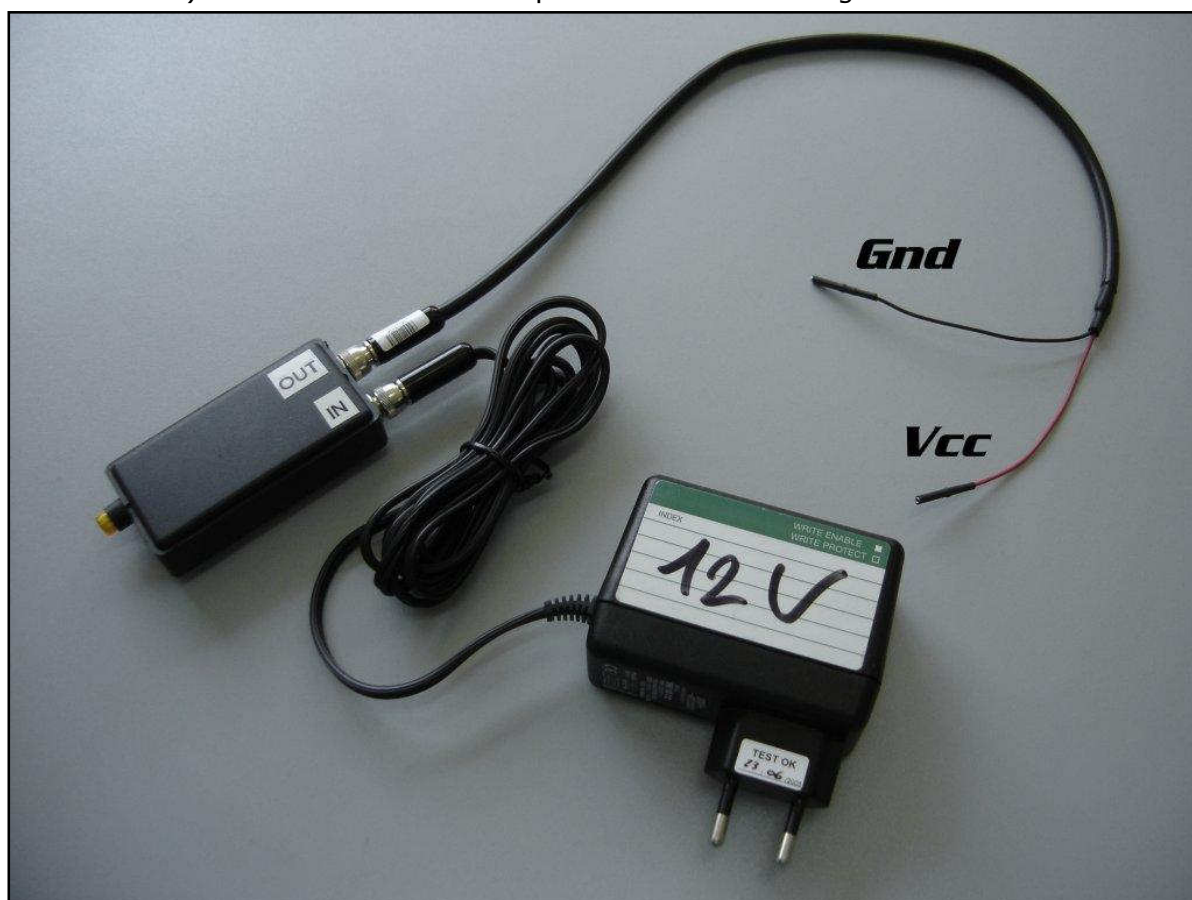

DIRECT CONNECTION with DELPHI F34FL003

The coloured (blu) stripe of the flat cable that identifies the pin1 must face downwards, please look at the picture for the correct ECU connection.

