


In order to get access to the boot pads it is necessary to remove the glue that covers the motherboard.

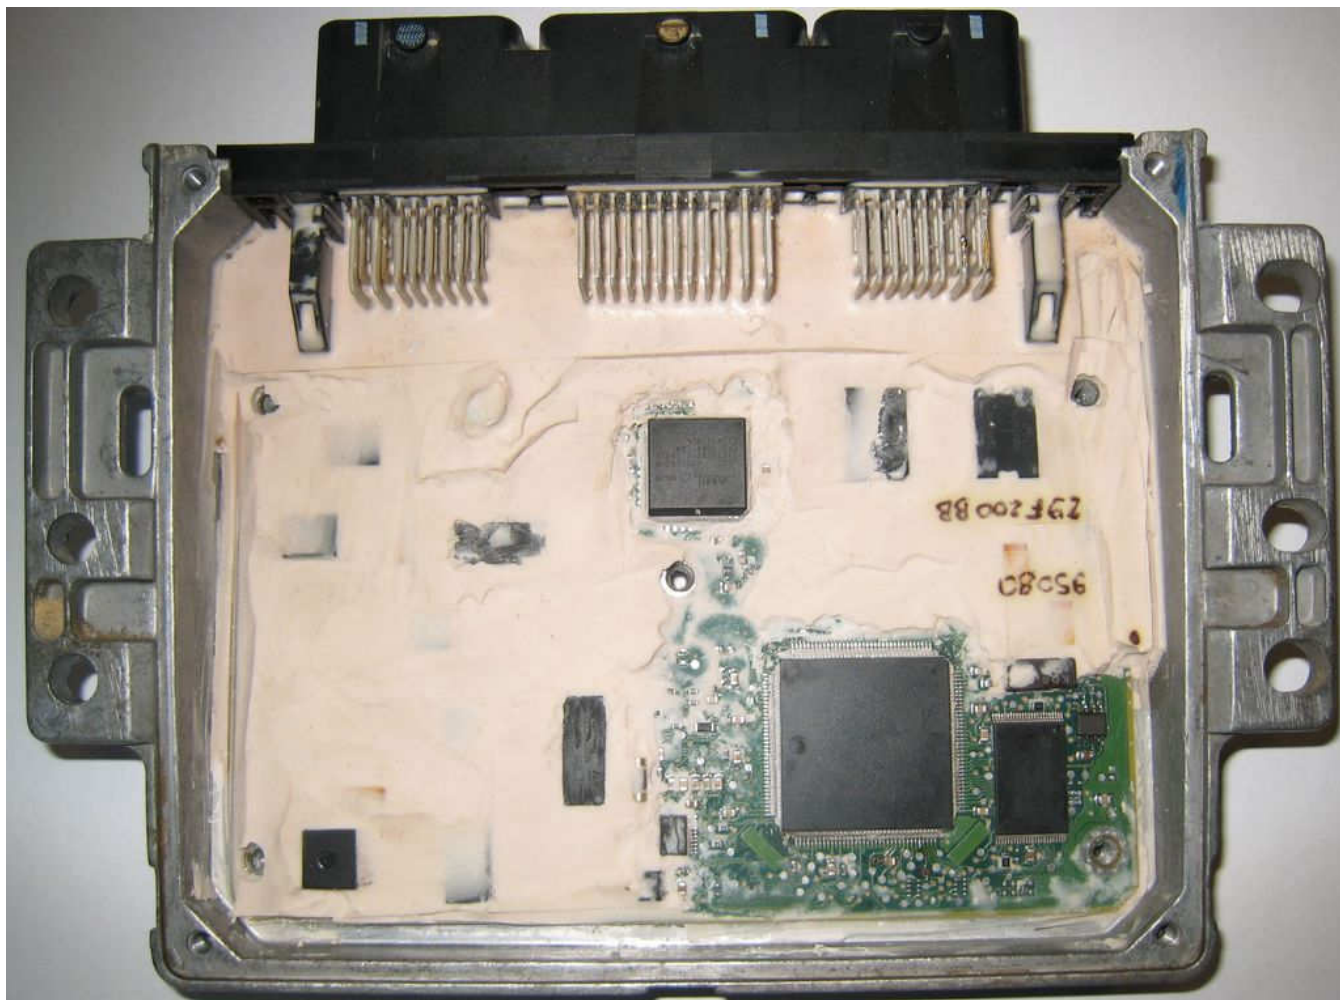

CONNECTIONS



DIRECT CONNECTION

Connect the universal wiring to POL4 and to ECU connector as shown in the picture

