


PLUGIN 1044:NEW TRASDATA


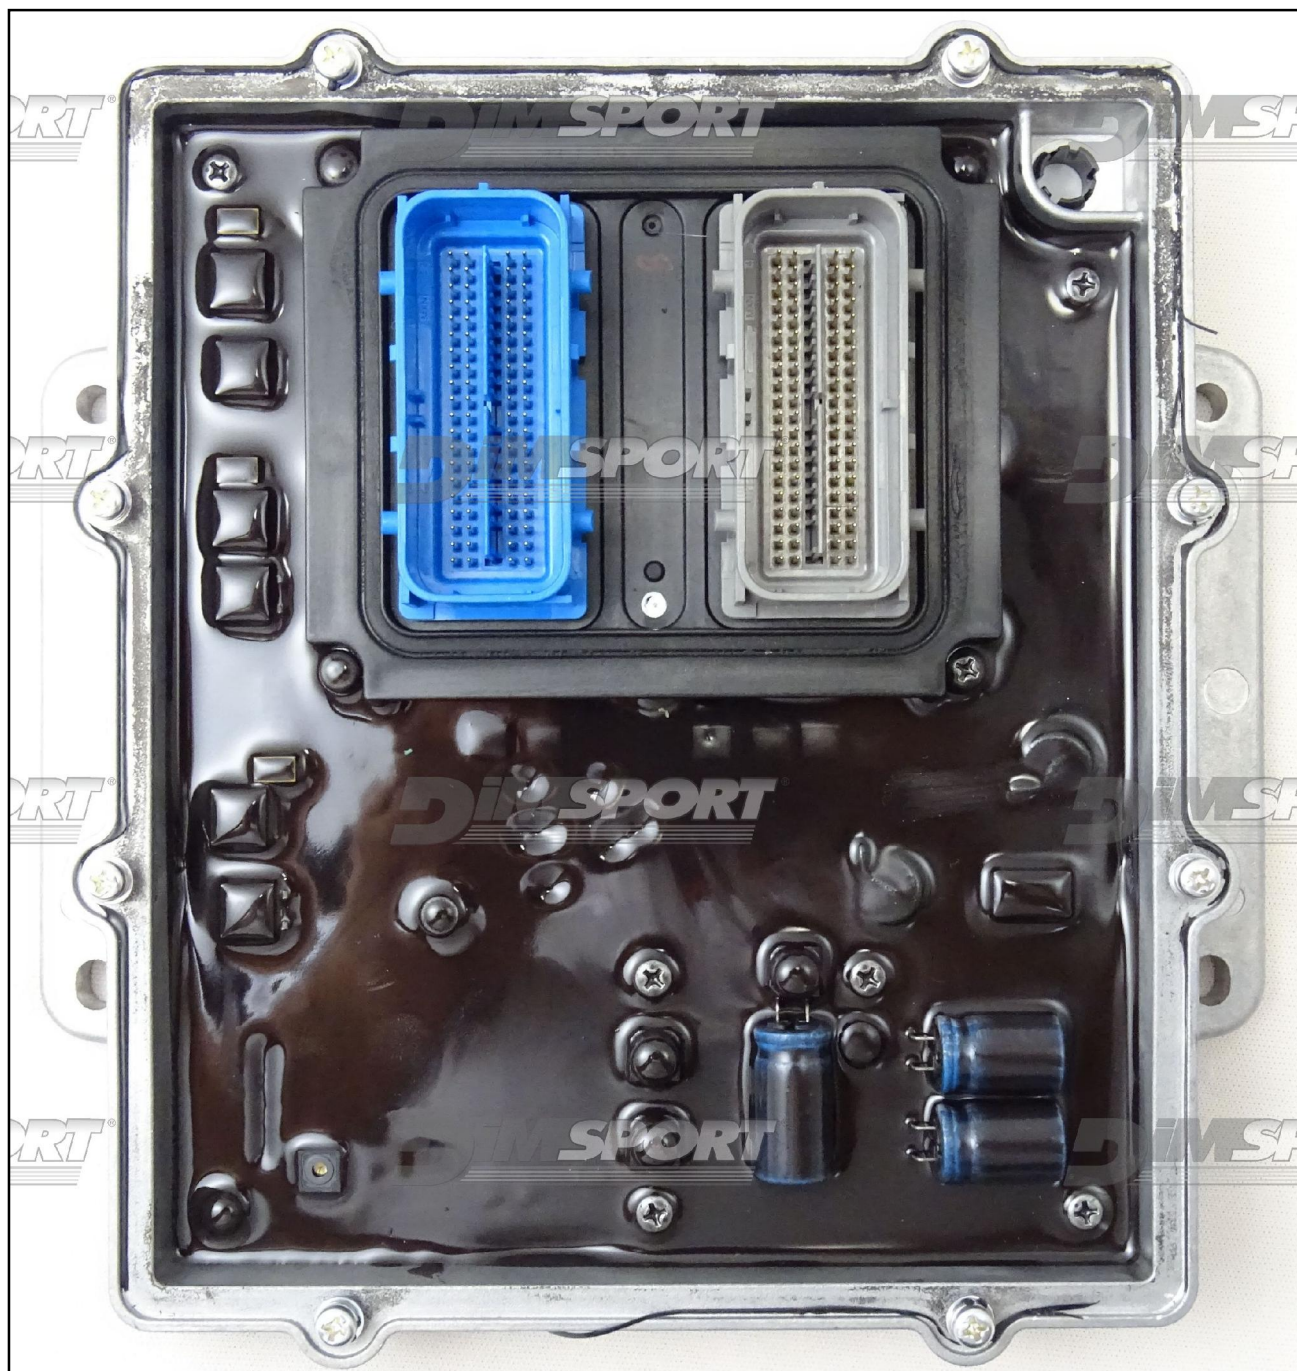


ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

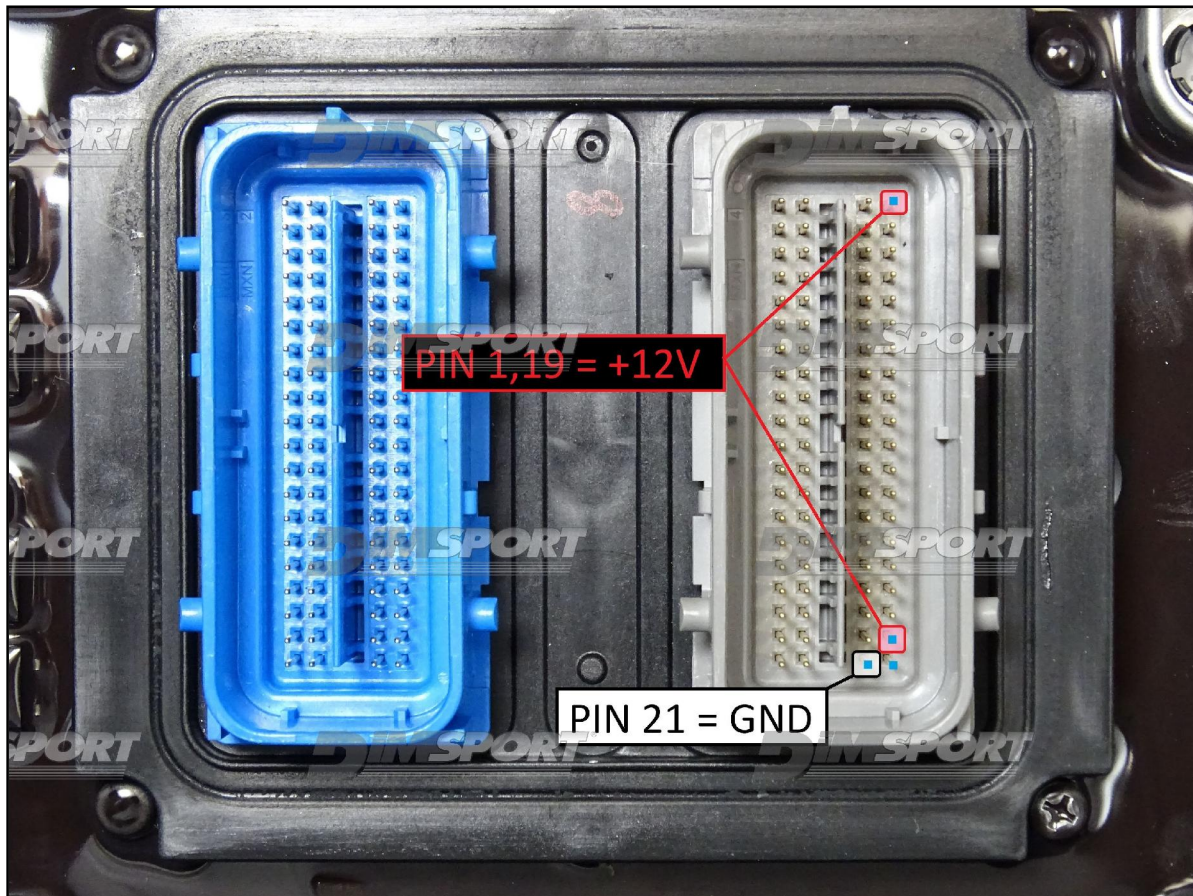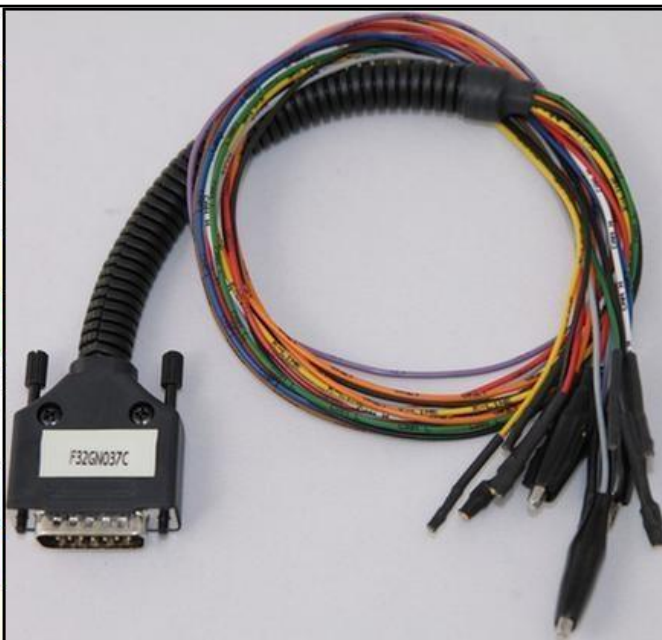

J-TAG LOOSE WIRES CONNECTION

For the reading & writing procedures use the FLAT cable F34NTF53

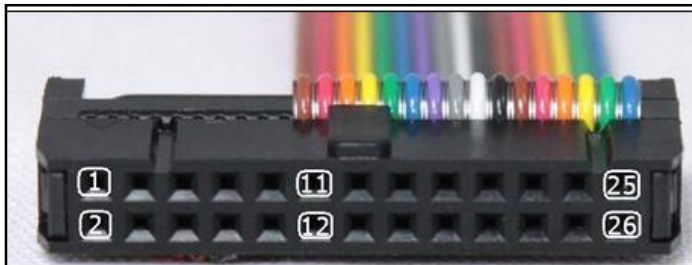			
Pin		Colore	Colour
11		Non usato	Not used
12		Non usato	Not used
13		Non usato	Not used
14		Non usato	Not used
15		Non usato	Not used
16		Blu	Blue
17		Viola	Violet
18		Grigio	Grey
19		Bianco	White
20		Nero	Black
21		Marrone	Brown
22		Rosso	Red
23		Arancio	Orange
24		Giallo	Yellow
25		Verde	Green
26		Non usato	Not used

Connect the wires on the pads avoiding any short circuits.

To get access to the communication pads for the reading procedure you must remove part of the silicon that covers the ECU board. After properly removing the silicon and before connecting the wirings please check that the vehicle starts fine and that there are no fault codes or warning lights on the dashboard.

