

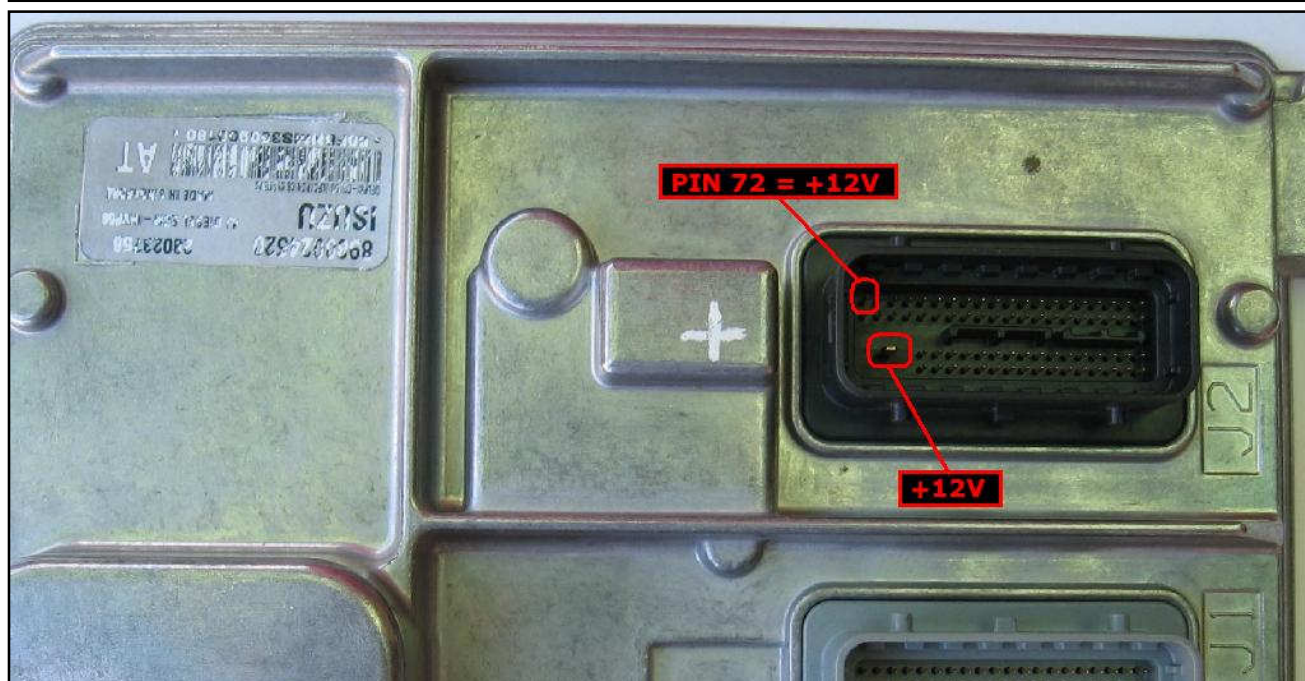


The lay-by pins are placed in the left lower part of the ECU as shown in the picture.

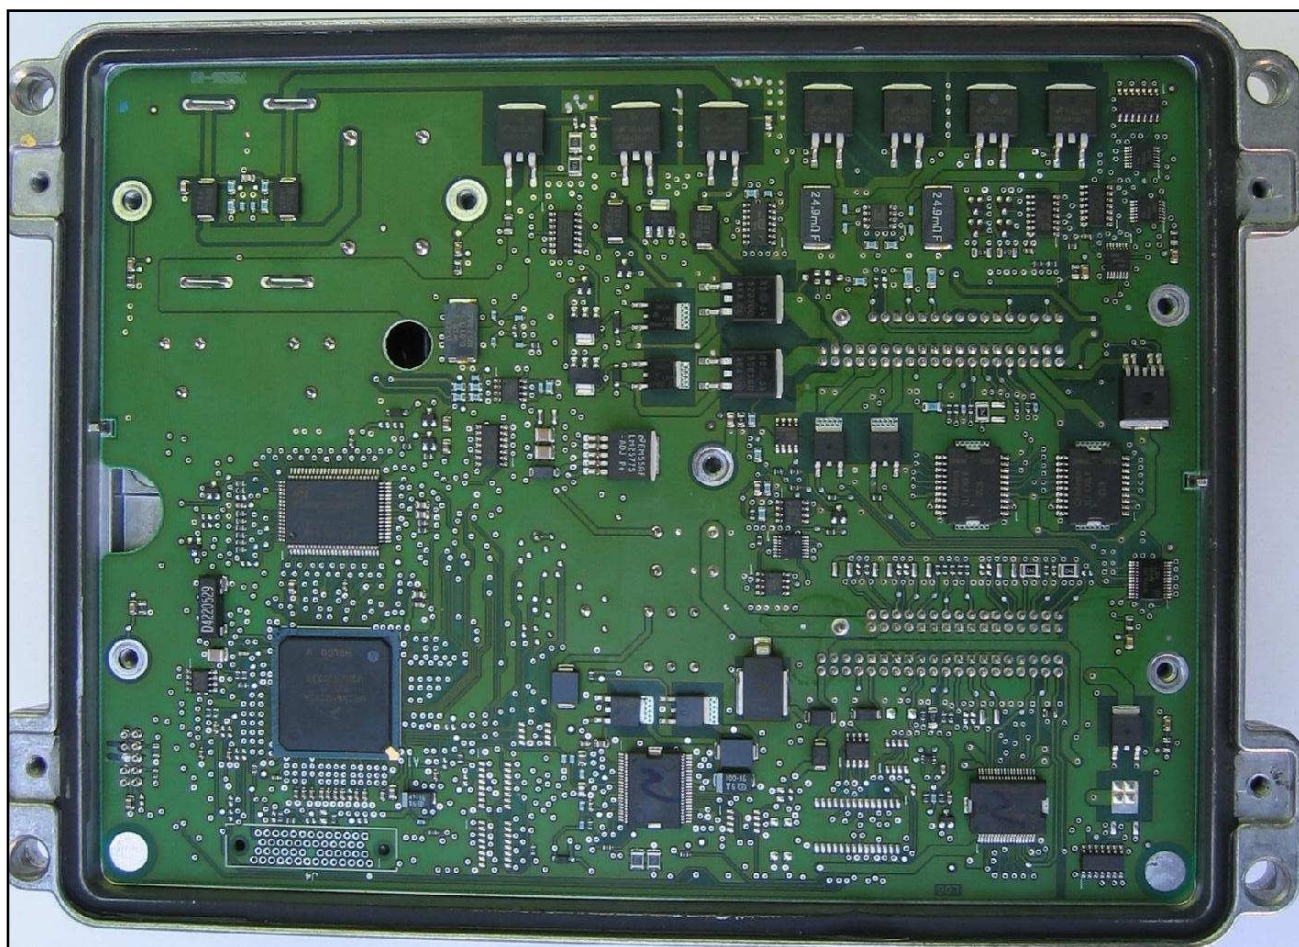

DIRECT CONNECTION with DELPHI F34FL003

Connect only the power wirings, the black wiring (GND) MUST NOT BE CONNECTED as in the pic.

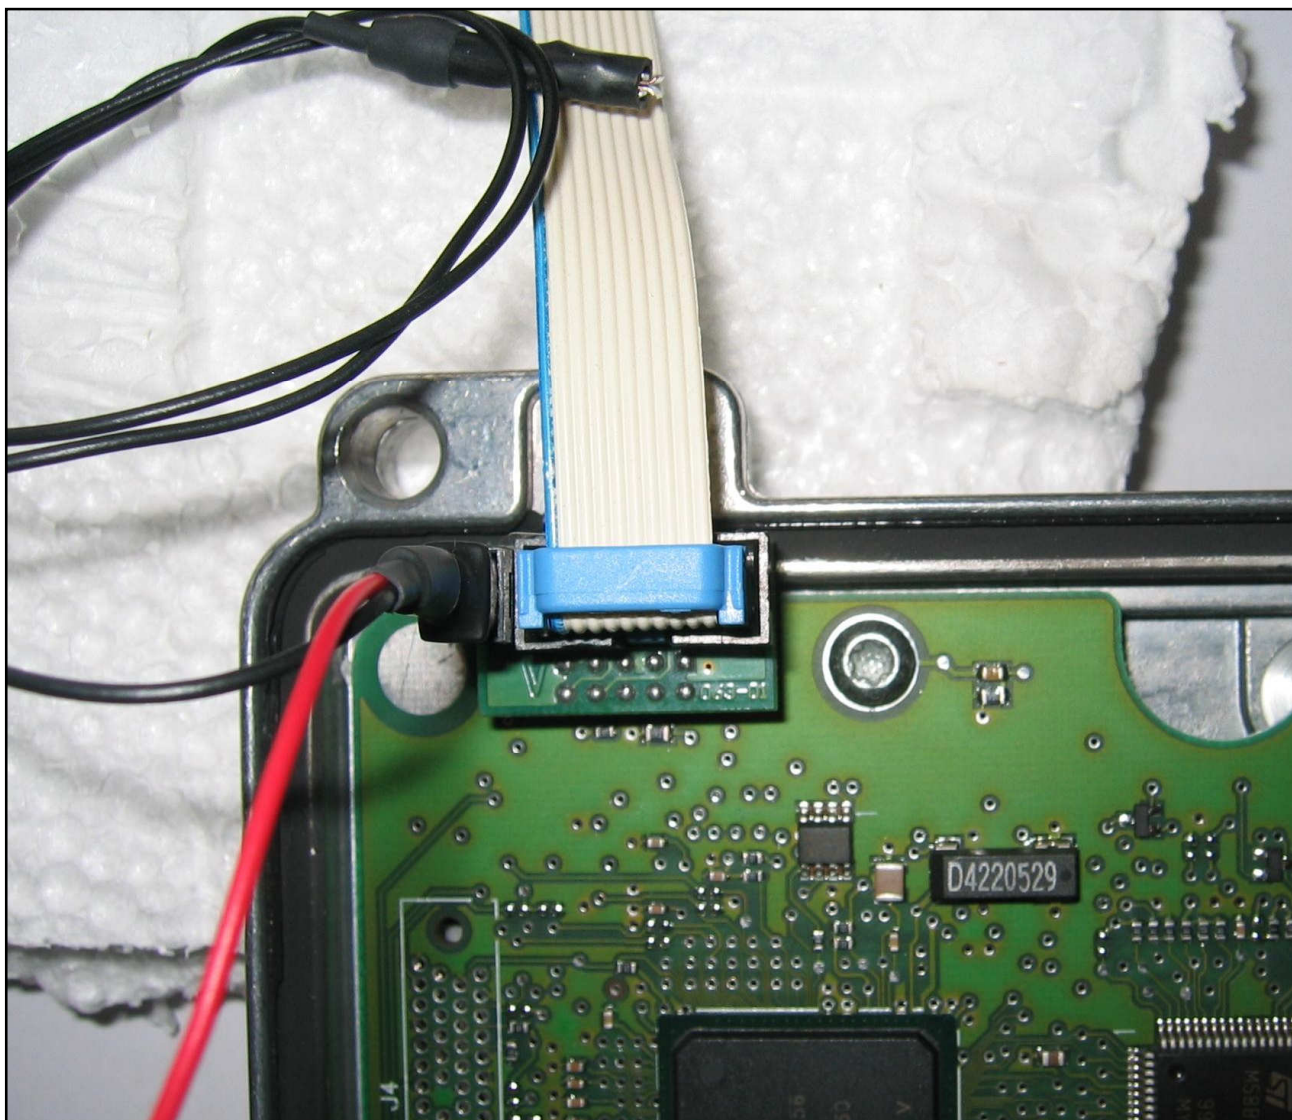

DIMA CONNECTION

Use the adapter for DIMA F34DM001 as in the picture below

