



The LAY by pins are located on the lower part of the ECU
PLUGIN 167

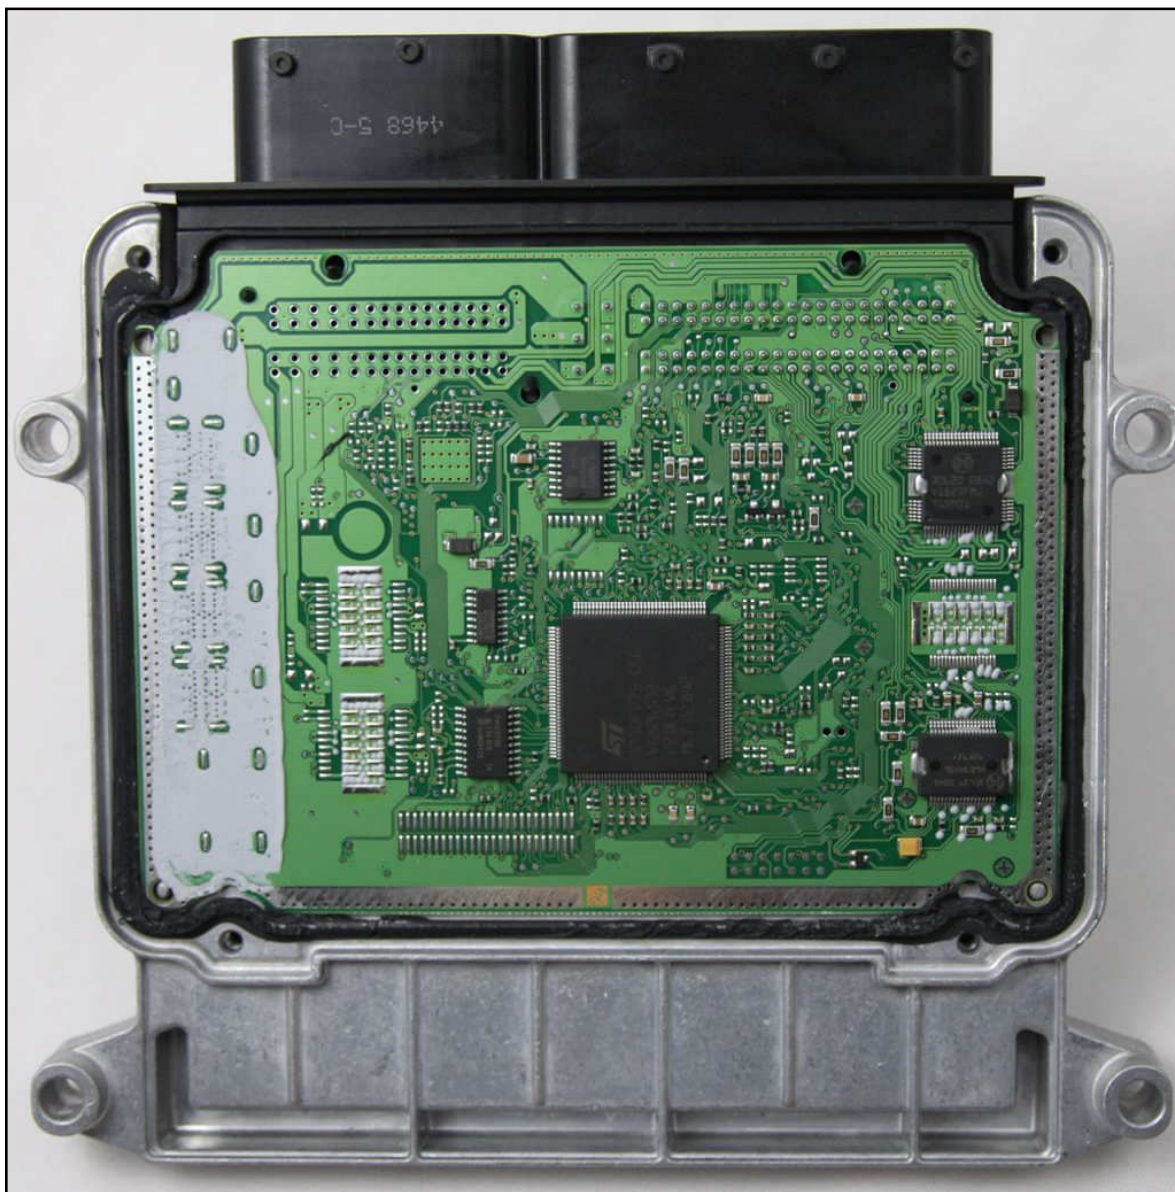


Connect the power (+12v) only for DIRECT CONNECTION,
do not connect power (+12V) with DIMA CONNECTION

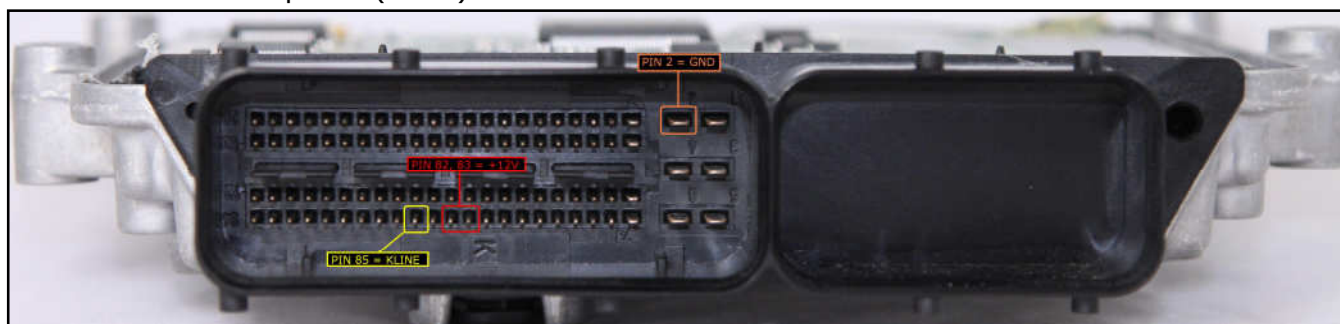

DIRECT CONNECTION

Connect the universal wiring to POL4 & POL5 and to the ECU connector as shown in the pictures.

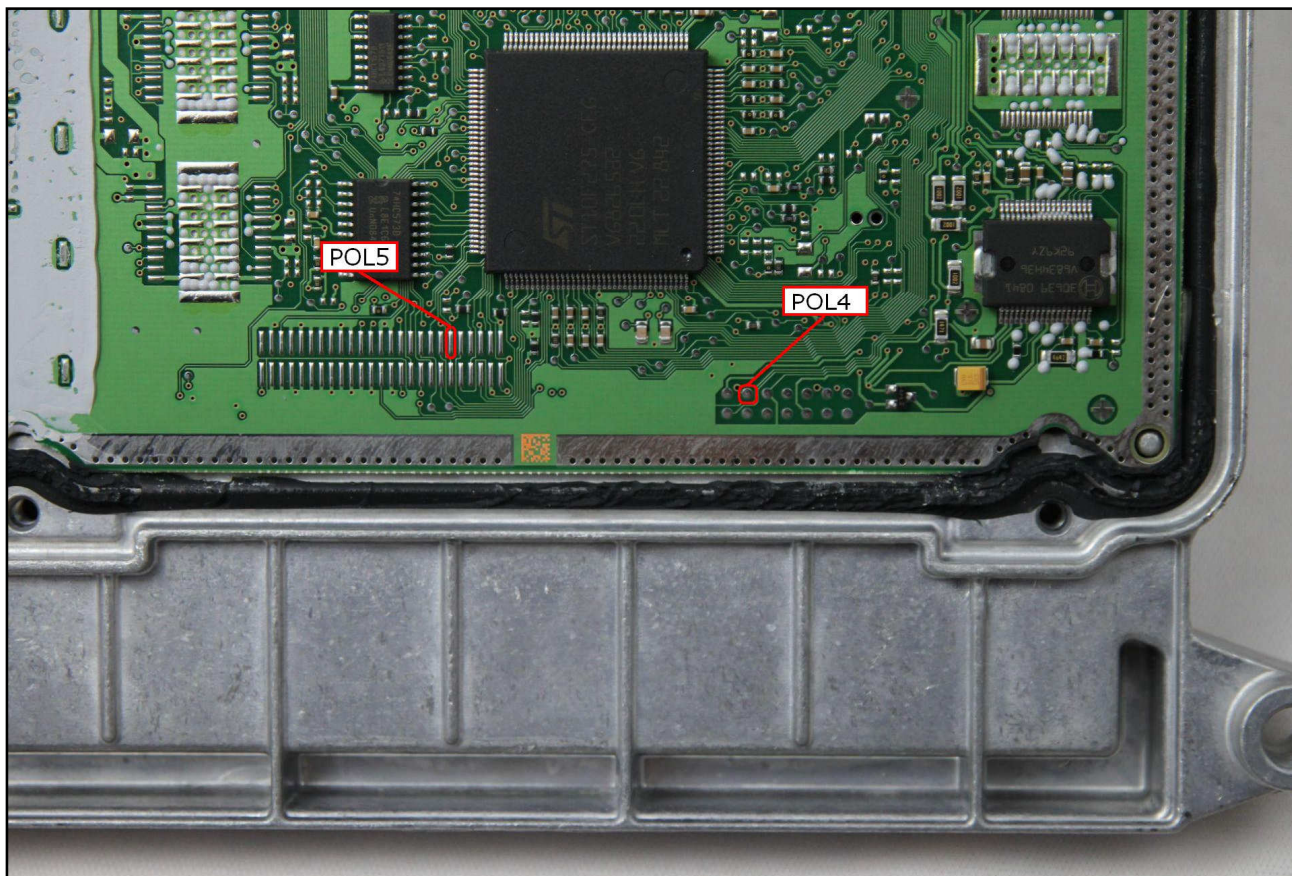

DIMA CONNECTION

Connect the blue wire to POL5 and to DIMA adapter as shown in the picture

