



ECU MEVD17.2.6 - TC1797 Internal Flash



FASE 1: (RICERCA PASSWORD)

Connettere il seguente pinout. Utilizzare il driver:

TOOL PASSWORD SPECIAL *ALL*

(Attenzione: verifica di avere già l'ultima versione del cavo Tricore. [Clicca qui](#))

STEP 1: (SEARCH PASSWORD)

Connect the following pinout. Use the driver:

TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable. [Click here](#))

RED: +12V

BLACK: Ground

BLUE: Can-H

ORANGE : Can-L

VIOLET: F1

WHITE: F2

■ Pin 51: Violet

Pin 6: ■ White

Pin 7: CAN-L ■
Pin 8: CAN-H ■

■ Pin 42: +12V

■ Pin 46: +12V

Pin 3: GND



A questo punto, una volta trovate le password, sarà possibile leggere e scrivere la centralina.

Quindi, porre la centralina in Boot Mode come descritto alla pagina seguente alla Fase 2..

Now, once you have found the password, you can read and write the ECU.

So, set in Boot Mode the ECU as described in following page to Step 2..

FASE 2: (READ/WRITE IN BOOT MODE)



Connettere il seguente pinout e porre la centralina in Boot Mode come in figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1797

STEP 2: (READ/WRITE IN BOOT MODE)

Connect the following pinout, and set the ECU in boot mode like in figure. Use the driver:

BOOT MODE TRICORE SAK TC1797

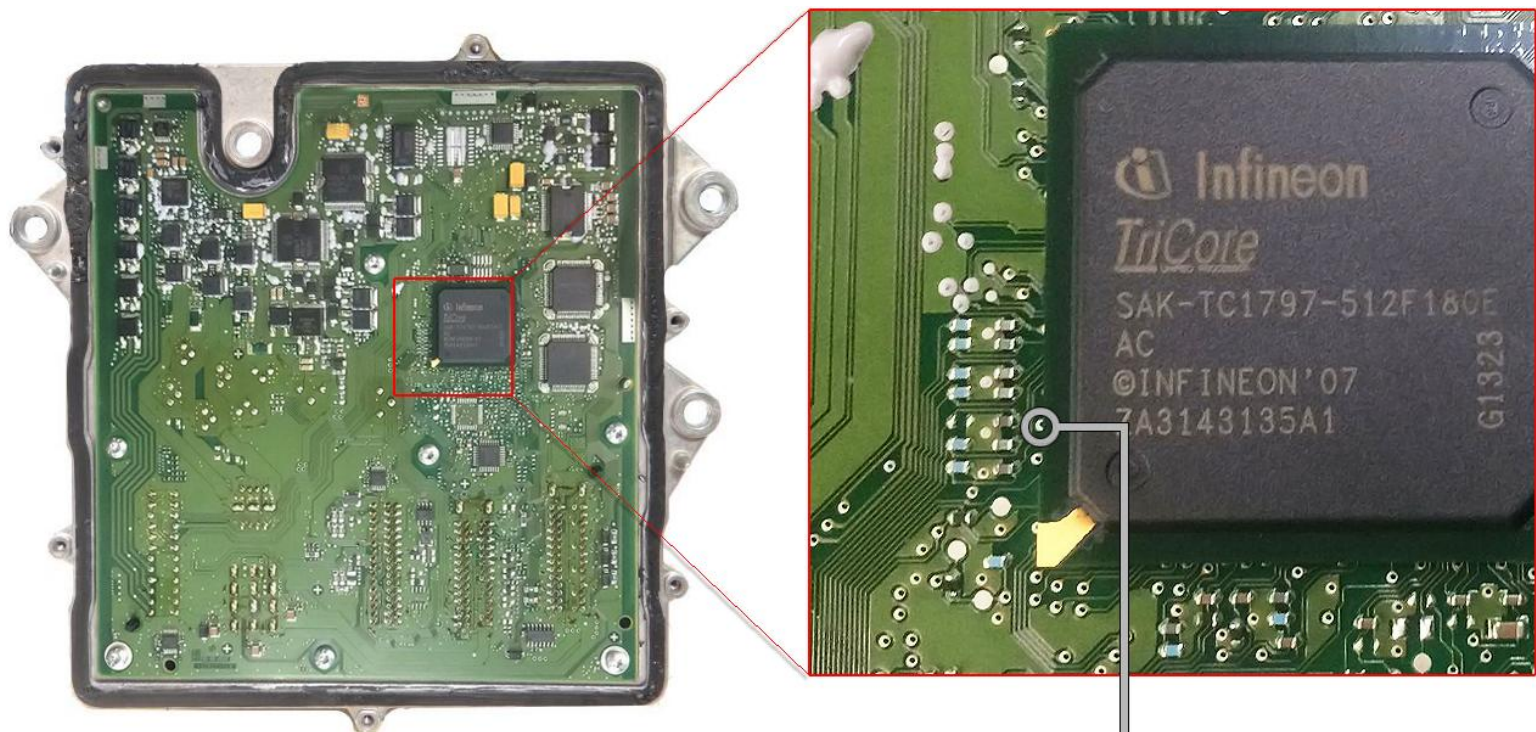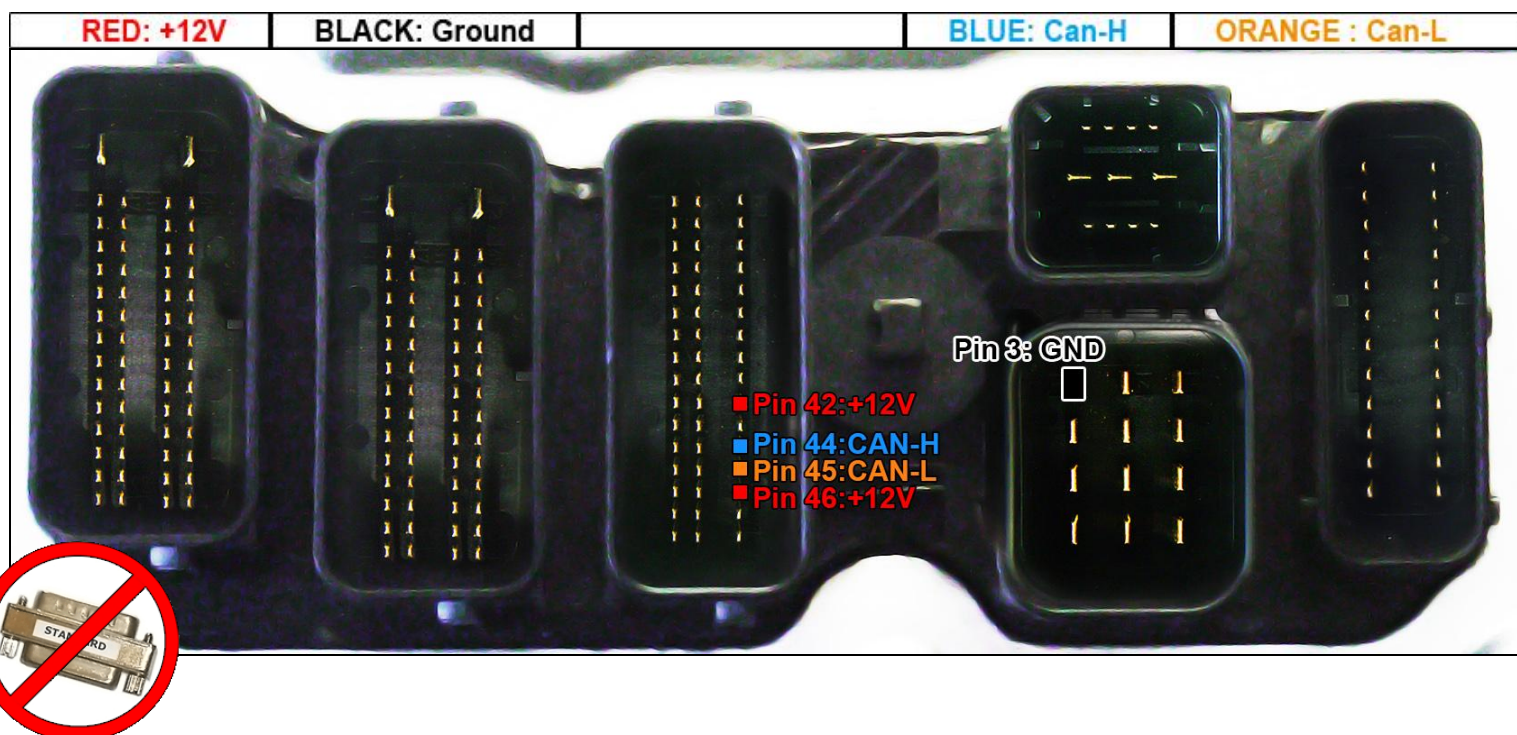

Gray wire of the Tricore cable