


Subaru Hitachi Forester 2.5

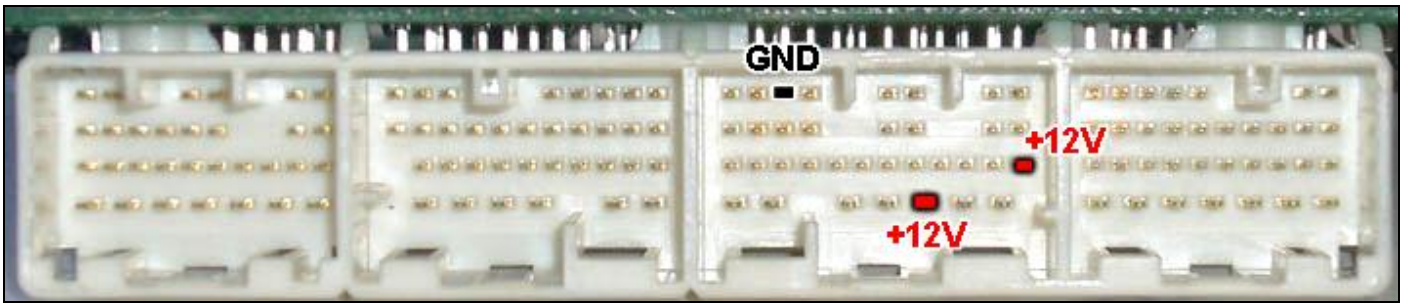


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER






2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

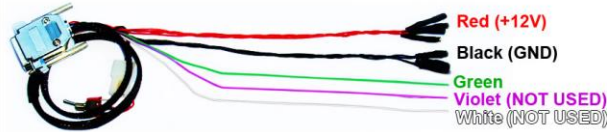

3 - USE THE COLOR FLAT CABLE



4 - DO TWO LINKS

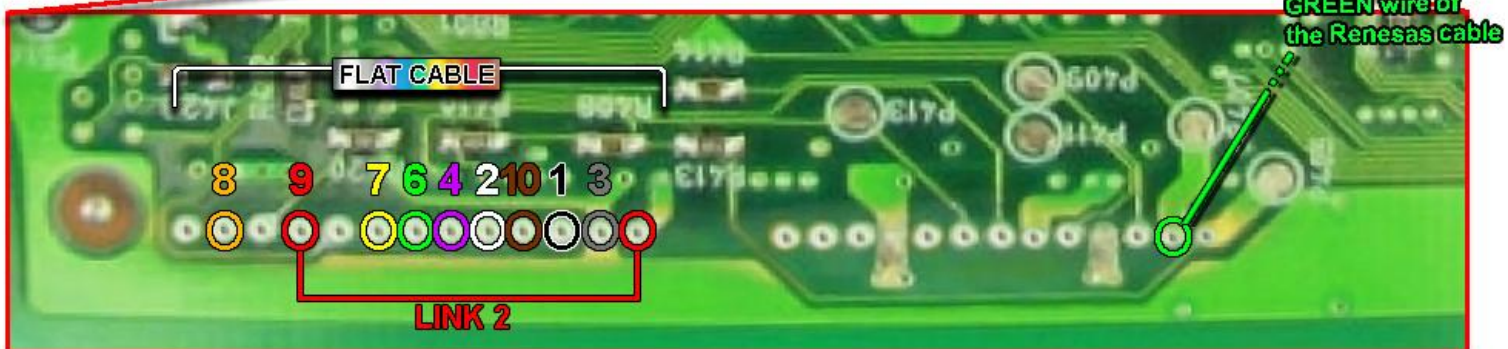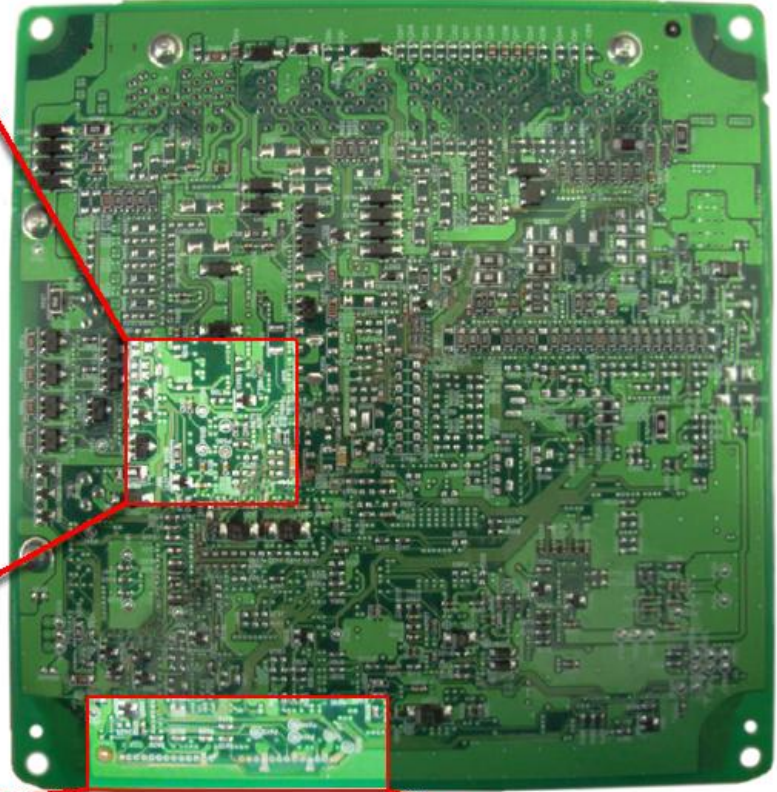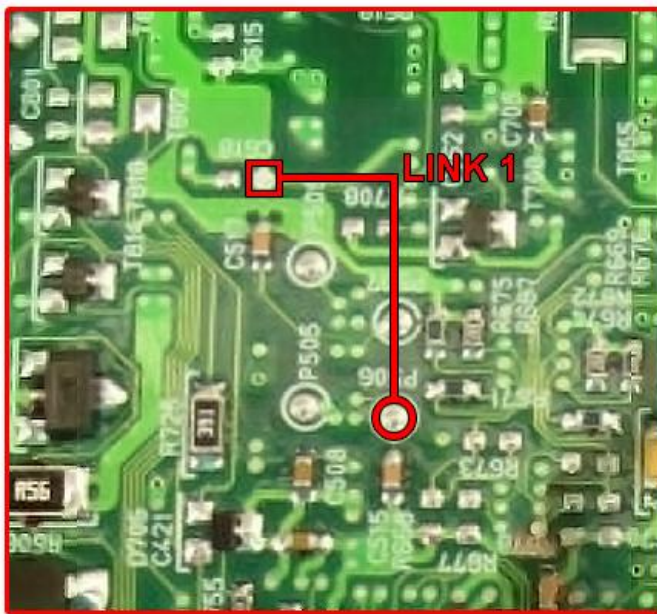

For writing follow the instructions on the next page.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

- 1 - REMOVE THE STANDARD ADAPTER



- 2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

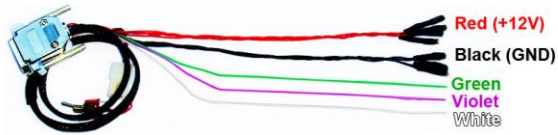

- 3 - DO TWO LINKS



BLACK wire of
the Renesas cable

WHITE VIOLET GREEN
Wires of the Renesas cable