

ISUZU-HINO

DENSO 275700-70xx (Diesel)




DRIVER: Tool Boot mode → RENESAS Benchmode
→ Bench RENESAS SH7254xx 11Bit
MICRO: Renesas SH72546

INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L**

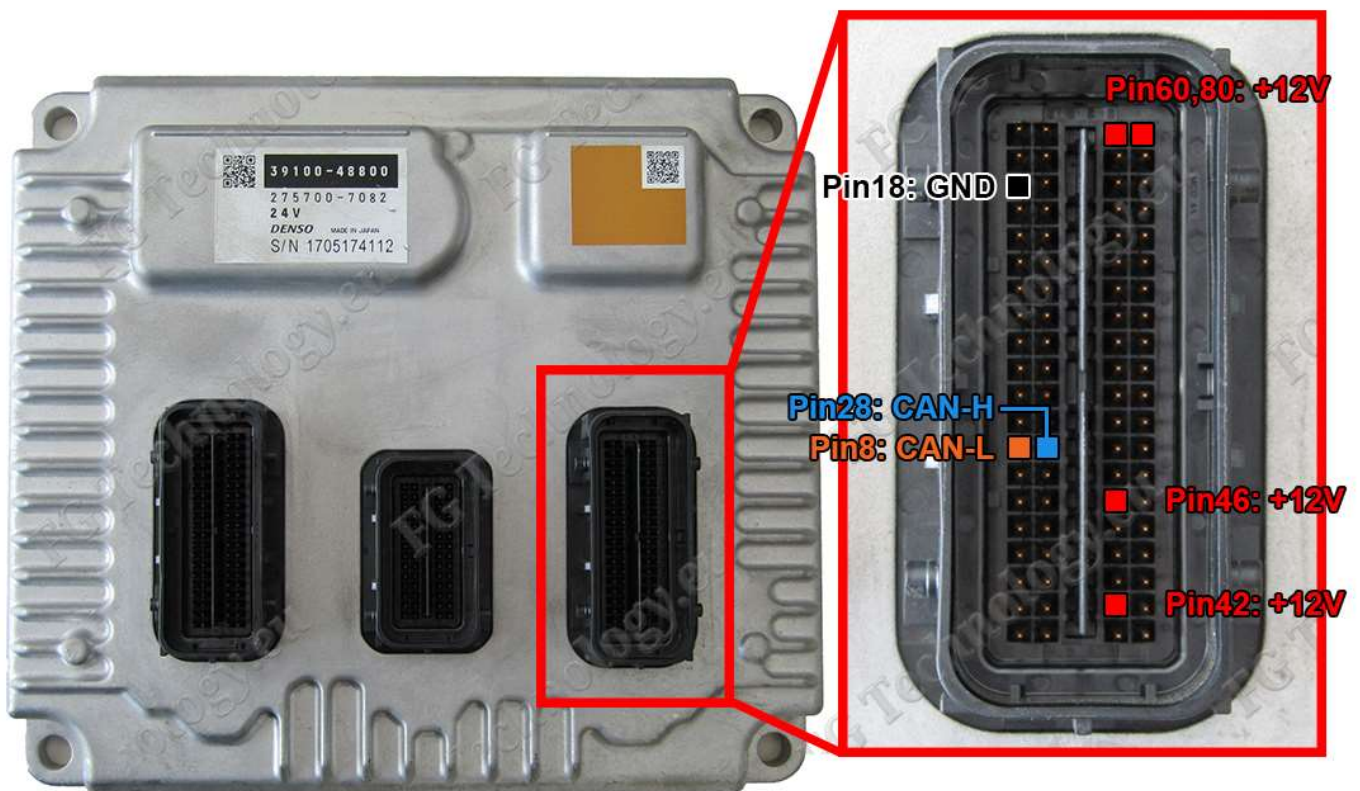

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.