


## Jaguar K – Land Rover MB279700

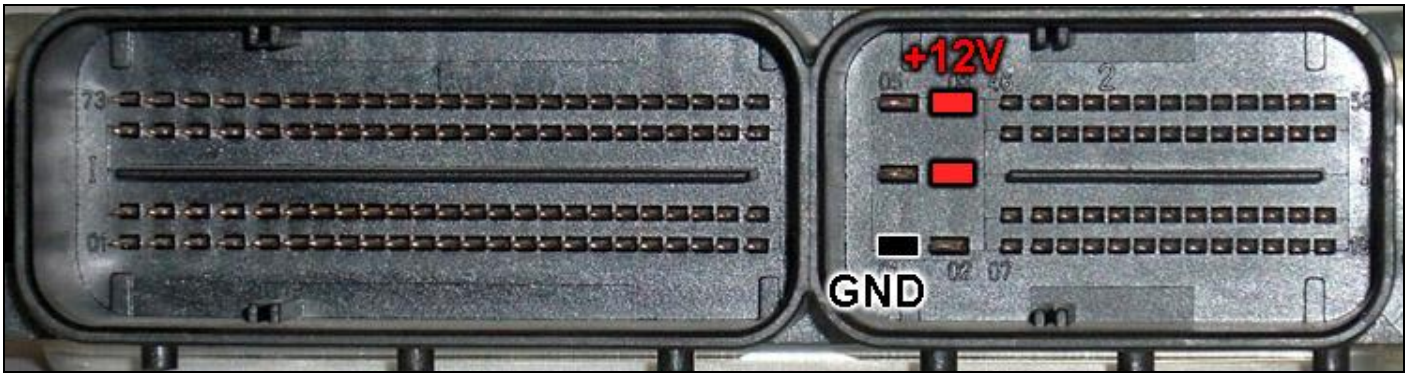


### READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

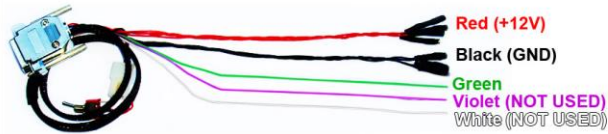


3 - USE THE COLOR FLAT CABLE



4 - DO TWO LINKS


### STEP 1/2:

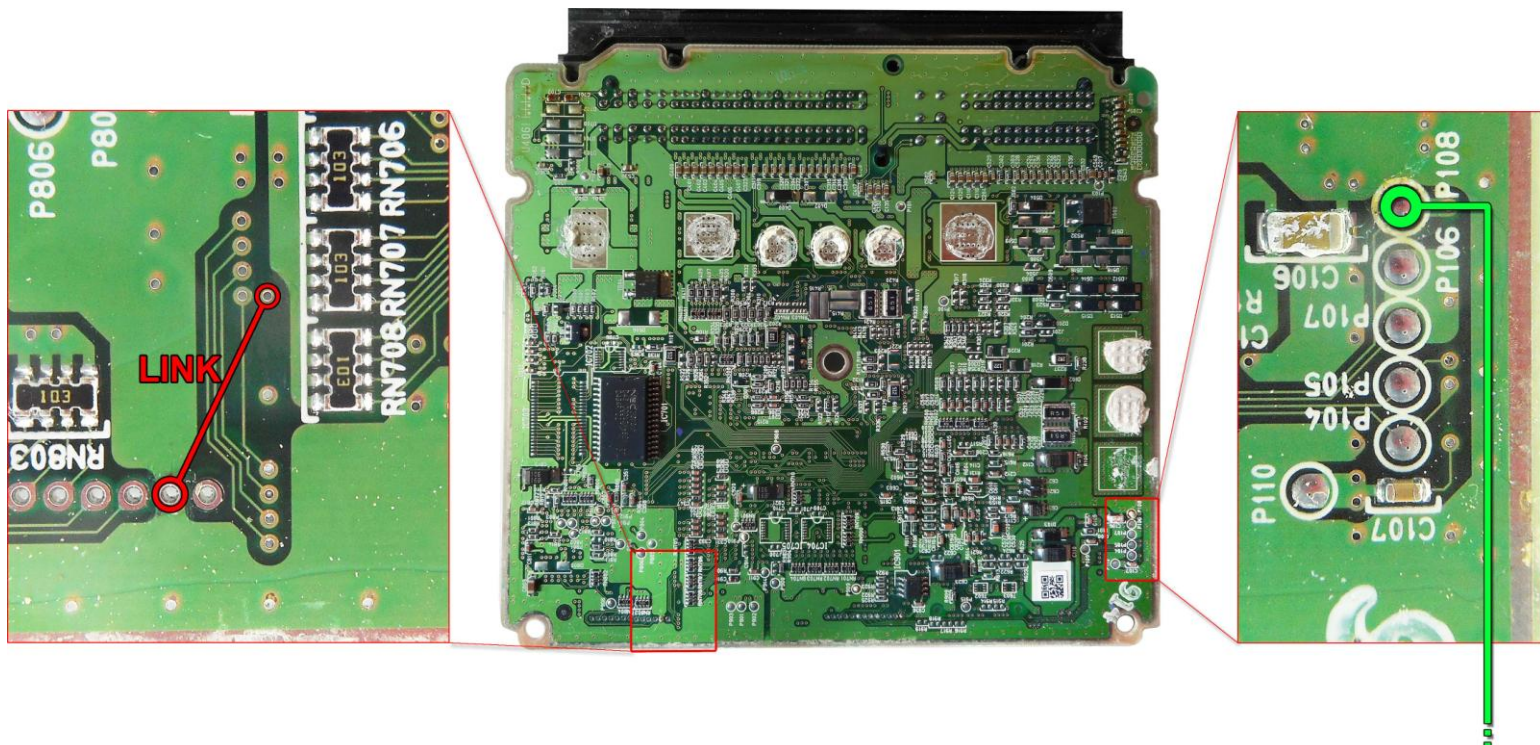

Green wire of Renesas cable

Follow on next page..

STEP 2/2:

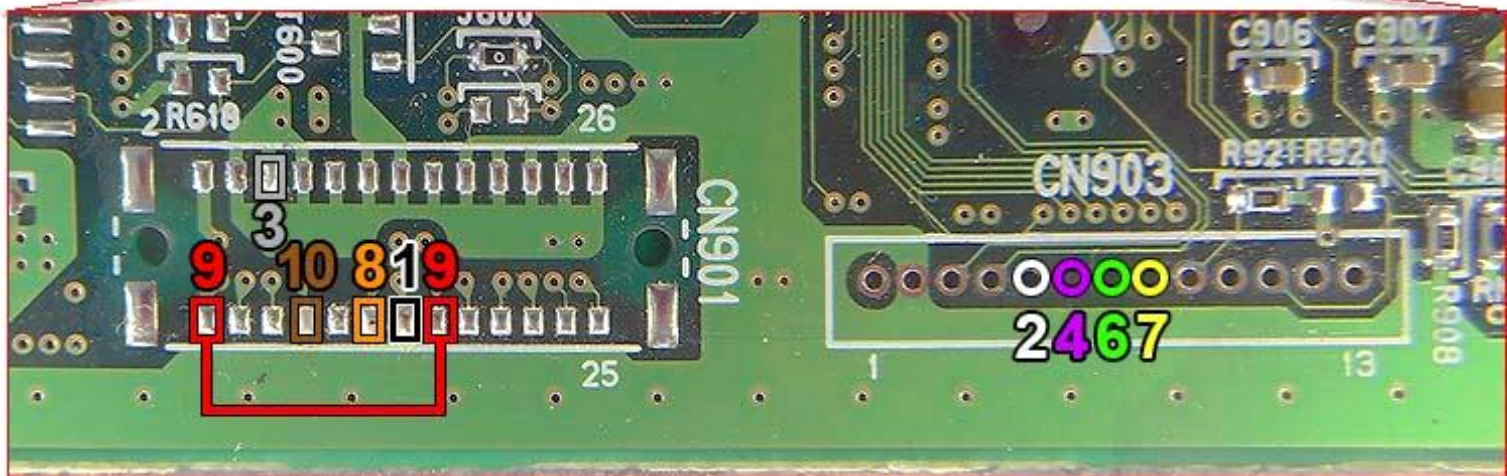

For writing follow the instructions on the next page..


## WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE


1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

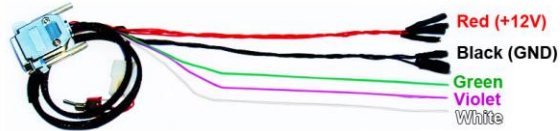


3 - DO TWO LINKS


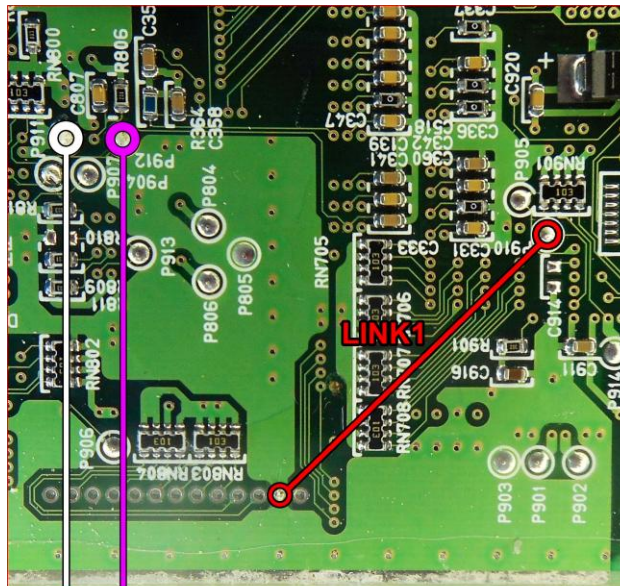


Violet wire of Renesas cable

White wire of Renesas cable

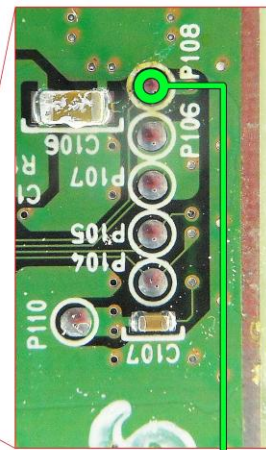

Green wire of Renesas cable

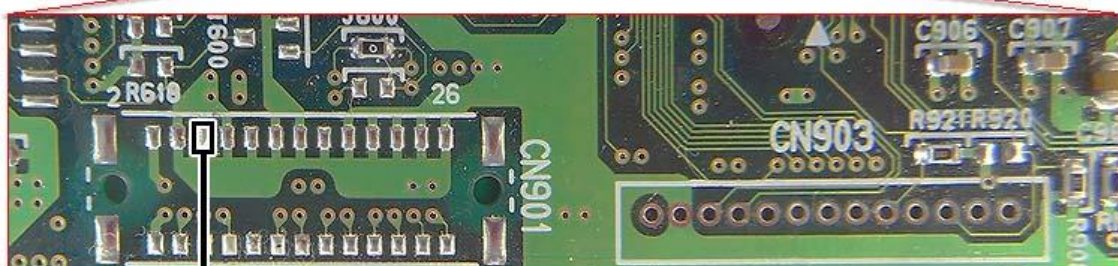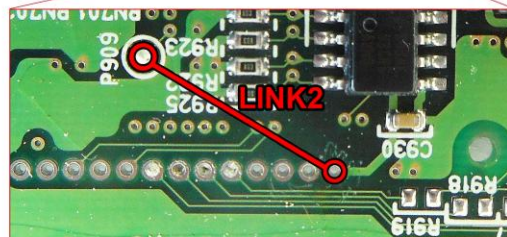

Black wire of Renesas cable