



ECU EDC17 C76 - TC1793 Internal Flash

FASE 1: (RICERCA PASSWORD)

Connettere il seguente pinout. Utilizzare il driver:

TOOL PASSWORD SPECIAL *ALL*


(Attenzione: verifica di avere già l'ultima versione del cavo Tricore. [Clicca qui](#))

STEP 1: (SEARCH PASSWORD)

Connect the following pinout. Use the driver:

TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable. [Click here](#))

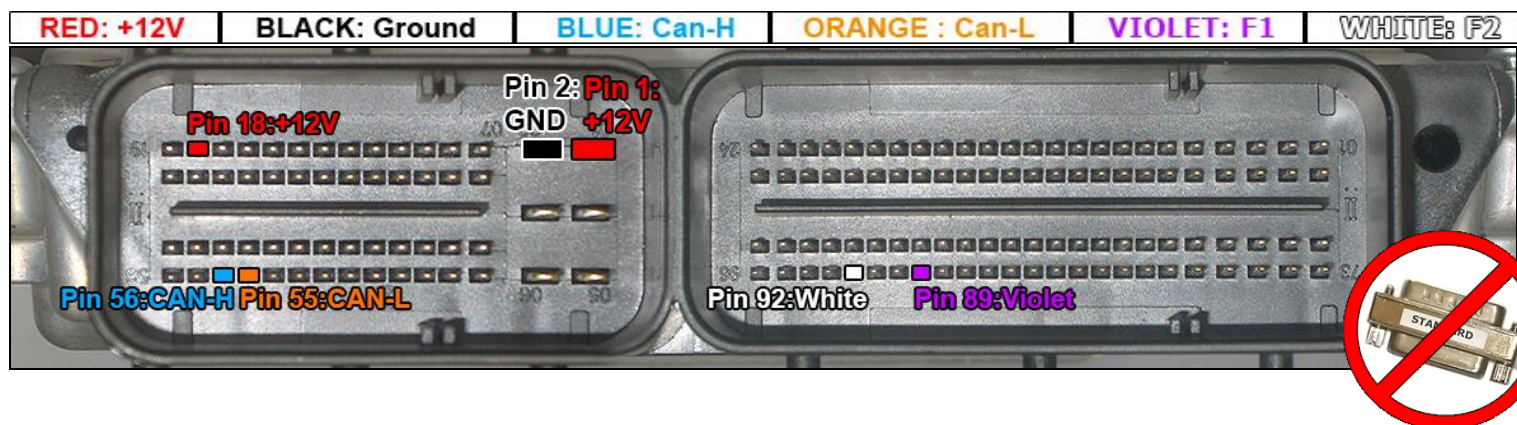

A questo punto, una volta trovate le password, sarà possibile leggere e scrivere la centralina.

Quindi, porre la centralina in Boot Mode come descritto alla pagina seguente alla Fase 2..

Now, once you have found the password, you can read and write the ECU.

So, set in Boot Mode the ECU as described in following page to Step 2..

FASE 2: (READ/WRITE IN BOOT MODE)


Connettere il seguente pinout e porre la centralina in Boot Mode come in figura a pagina successiva. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1793

STEP 2: (READ/WRITE IN BOOT MODE)


Connect the following pinout, and set the ECU in boot mode like in figure on next page. Use the driver:

BOOT MODE TRICORE SAK TC1793

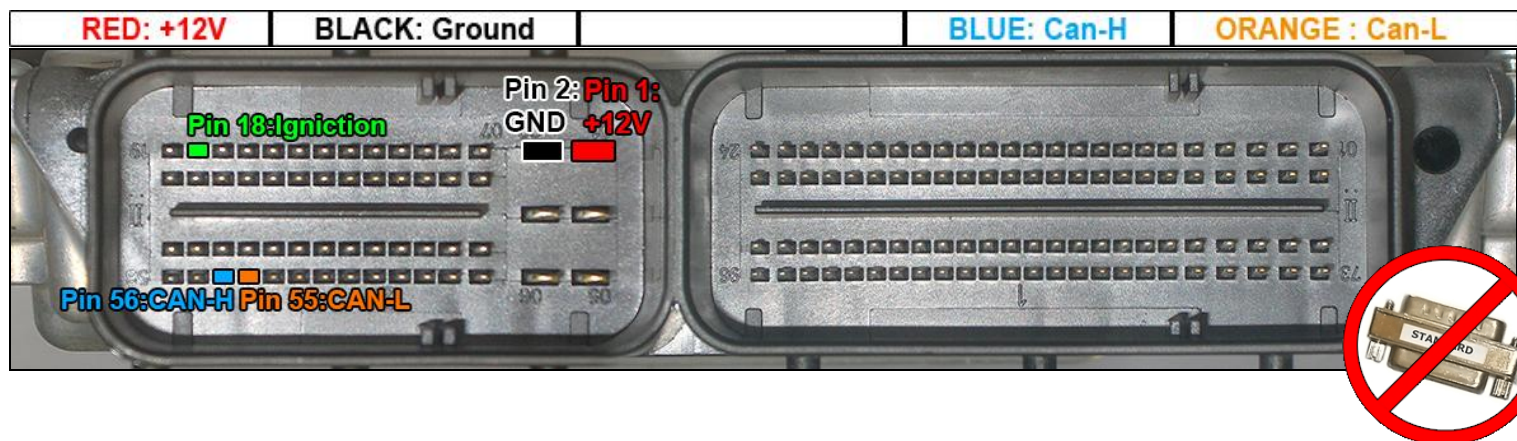

Segue a pagina successiva..

Follow on next page..

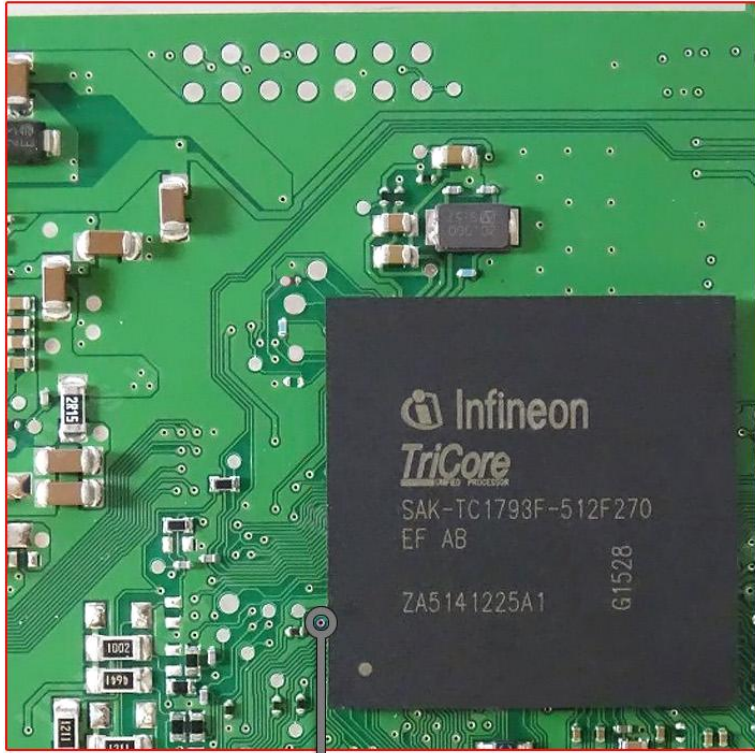

Gray wire of Tricore cable