

PSA GROUP

BOSCH MEV17.4 (Gasoline)



DRIVER: Tool Boot mode → Infineon Tricore
Benchmode → Tricore Sak TC1766
MICRO: TC1766

INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | BLACK: GROUND | BLUE: CAN-H | ORANGE : CAN-L | WHITE | BROWN



(EN) In this ecu model **there are two types of processors**, the TC1766 and the TC1796, only with TC1766 it is possible to read and write in Benchmode Tricore.

(IT) In questo modello ecu **sono presenti due tipi di processori**, il TC1766 e il TC1796, solo con in TC1766 è possibile leggere e scrivere in Benchmode Tricore.